

# Signal Analyzer

## MS2830A Microwave

MS2830A-044: 9 kHz to 26.5 GHz MS2830A-045: 9 kHz to 43 GHz « MS2830A-040: 9 kHz to 3.6 GHz\* » « MS2830A-041: 9 kHz to 6 GHz\* » « MS2830A-043: 9 kHz to 13.5 GHz\* »



\*: See MS2830A-040/041/043 catalog



The Signal Analyzer MS2830A-044/045 includes a spectrum analyzer function with upper frequency limits of 26.5 GHz and 43 GHz. It supports measurements of Tx characteristics, including adjacent channel leakage power, spectrum mask, and frequency counter, as well as spurious measurements requiring a wide dynamic range.

Installing the bandwidth analysis option up to 125 MHz adds signal analyzer functions for checking phenomena that are hard to check using a spectrum analyzer, such as frequency vs. time, phase vs. time, spectrogram, and CCDF. In addition, optional measurement software supports modulation analysis. Moreover, installing a preselector bypass option enables use of the signal analyzer and modulation analysis functions up to 26.5 GHz/43 GHz (MS2830A-044/045). Finally, it can be customized to support a range of application-specific measurements.

Frequency Option	MS2830A-040*1	MS2830A-041*1	MS2830A-043*1	MS2830A-044	MS2830A-045		
Frequency Range	9 kHz to 3.6 GHz	9 kHz to 6 GHz	9 kHz to 13.5 GHz	9 kHz to 26.5 GHz	9 kHz to 43 GHz		
Aging Rate	$\pm 1 \times 10^{-7}$ /day (Standard $\pm 1 \times 10^{-8}$ /day (MS2830A $\pm 1 \times 10^{-10}$ /month (MS28	d) 830A-001)					
Start Time/Characteristics	5 minutes, ±5 × 10 <sup>-7</sup> (Sta 5 minutes, ±5 × 10 <sup>-8</sup> (MS 7 minutes, ±1 × 10 <sup>-9</sup> (MS	52830A-002)		5 minutes, ±5 × 10 <sup>-8</sup> (St 7 minutes, ±1 × 10 <sup>-9</sup> (M			
Phase Noise	Frequency: 500 MHz, Sp	ectrum Analyzer mode		*			
1 kHz Offset	-109 dBc/Hz (MS2830A-	066)			_		
10 kHz Offset	-118 dBc/Hz (MS2830A-	066)			_		
100 kHz Offset	-115 dBc/Hz (Standard) -133 dBc/Hz (MS2830A-	066)		-115 dBc/Hz (Standard)			
1 MHz Offset	-133 dBc/Hz (Standard) -148 dBc/Hz (MS2830A-	066) (nom.)		-133 dBc/Hz (Standard)			
Displayed Average Noise Level (DANL)	Spectrum Analyzer mode	e without options					
Frequency: 500 MHz			–153 dBm/Hz				
Frequency: 2 GHz		–151 dBm/Hz		_1	50 dBm/Hz		
Frequency: 5 GHz		-146	dBm/Hz	-1	44 dBm/Hz		
Frequency: 12 GHz			-142 dBm/Hz	-1	51 dBm/Hz		
Frequency: 25 GHz				-1	46 dBm/Hz		
Frequency: 40 GHz					-144 dBm/Hz		
Attenuator Range/Step	0 to 60 dB/2 dB step 0 to 60 dB/10 dB step						
Total Absolute Amplitude Accuracy				attenuator switching erro t lowers the risk of measur			
Frequency : 500 MHz, 2 GHz			±0.5 dB				
Frequency: 5 GHz, 12 GHz			±1.8 dB				
Frequency: 25 GHz					±3.0 dB		
Frequency: 40 GHz					±3.0 dB		
Resolution Bandwidth	1 Hz to 3 MHz (1-3 sequ	ence), 5, 10, 20*8, 31.25 N	лнz*8, 50 kHz [Spectrum л	Analyzer mode]			
Analysis Bandwidth	10 MHz (MS2830A-006) 31.25 MHz (MS2830A-006) 62.5 MHz (MS2830A-077) 125 MHz (MS2830A-078)	7)* <sup>9</sup>	·		10 MHz (MS2830A-006) 31.25 MHz (MS2830A-009) 62.5 MHz (MS2830A-077)*9 125 MHz (MS2830A-078)*9		
Additional Functions							
Vector Signal Generator		✓ (MS2830A-020/021)					
Low Phase Noise Performance*2	✓ (MS2830A-066) —						
Phase Noise Measurement Function			✓ (MS2830A-010	0)			
Noise Figure Measurement Function			✓ (MS2830A-01	7)			
BER Measurement Function			✓ (MS2830A-026	6)			
Preamplifier*3	✓ (M52830A-008)						
	— ✓ (MS2830A-068)						
Microwave Preamplifier*4		_		— √(MS2830A-067)			
Microwave Preamplifier*4 Microwave Preselector Bypass*5				,			
				√ (N			

- \*1: See catalog for MS2830A-040/041/043.
- \*2: Phase noise improved for <3.6 GHz.
- \*3: Frequency range: 100 kHz to 3.6 GHz (MS2830A-040)
- 100 kHz to 6 GHz (excluding MS2830A-040) \*4: Frequency range: 100 kHz to 26.5 GHz (MS2830A-044),
- 100 kHz to 43 GHz (MS2830A-045)
- \*5: Frequency range: 4 GHz to 26.5 GHz (MS2830A-044),
- 4 GHz to 43 GHz (MS2830A-045)
- \*6: Connector: SMA-J,  $50\Omega$ , Local signal: 5 GHz to 10 GHz
- \*7: Connector: SMA-J, 50Ω, Frequency: 1.875 GHz
- \*8: Can be set when with MS2830A-005. Can not be set when with MS2830A-009.
- \*9: Signal Analyzer Mode Frequency Setting Range
  - With MS2830A-077/078, With MS2830A-067, >31.25 MHz bandwidth
  - 300 MHz to 26.5 GHz [MS2830A-044]
  - 300 MHz to 43 GHz [MS2830A-045]
  - With MS2830A-077/078, Without MS2830A-067, >31.25 MHz bandwidth 300 MHz to 3.6 GHz [MS2830A-040]

    - 300 MHz to 6 GHz [MS2830A-041]
    - 300 MHz to 13.5 GHz [MS2830A-043]
    - 300 MHz to 6 GHz [MS2830A-044]
    - 300 MHz to 6 GHz [MS2830A-045]

#### **Eco-friendly**

Anritsu uses two eco product marks indicating environment-friendly products as follows:

Excellent eco product:


80+ score and satisfies excellent eco product requirements Eco product:

60+ score and satisfies eco product requirements

Resource saving/reduction of manufacturing load Reduction of toxins Reduction of logistics load

Reduction of usage load Reduction of disposal load



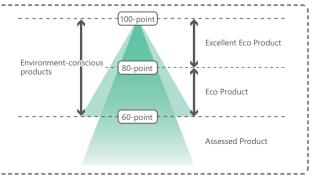

## **Key Features**

### **Basic Performance/Functions**

#### **Frequency Range**

MS2830A-044: 9 kHz to 26.5 GHz MS2830A-045: 9 kHz to 43 GHz

#### Excellent Dynamic Range\*1:

159 dB (at 25 GHz) TOI\*<sup>2</sup>: ≥+13 dBm DANL\*<sup>3</sup>: −146 dBm/Hz

157 dB (at 40 GHz) TOI: ≥+13 dBm (nom.) DANL: –144 dBm/Hz

#### Preamp up to 43 GHz

 $\rightarrow$  MS2830A-068/168: Microwave Preamplifier DANL\*3: –156 dBm/Hz (at 25 GHz)\*4 DANL\*3: –150 dBm/Hz (at 40 GHz)\*4

#### **Total Level Accuracy:**

 $\pm 0.5$  dB (300 kHz  $\leq$  f < 4 GHz)  $\pm 3.0$  dB (13.8 GHz < f  $\leq$  40 GHz)

#### **Used as Wideband Down Converter**

Built-in IF Output Function (MS2830A-044/045)

- Connector: SMA-J,  $50\Omega$ 

- IF Output Frequency: 1.875 GHz

- IF Output Bandwidth: 1 GHz (3 dB Bandwidth, nom.)\*5

- Gain: -10 dB (nom.)

#### **Improved Level Linearity**

#### **Reference Oscillator**

Pre-installed Reference Oscillator

Aging Rate:  $\pm 1 \times 10^{-7}$ /year,  $\pm 1 \times 10^{-8}$ /day

Start-up Characteristics:  $\pm 5 \times 10^{-8}$  (5 minutes after power-on)

Rubidium Reference Oscillator (MS2830A-001)

Aging Rate:  $\pm 1 \times 10^{-10}$ /month

Start-up Characteristics:  $\pm 1 \times 10^{-9}$  (7 minutes after power-on)

#### **Versatile Built-in Functions**

- Channel Power - Occupied Bandwidth

- Adjacent Channel Leakage Power - Spectrum Emission Mask\*4

- Spurious Emission\*4 - Burst Average Power

- Frequency Counter\*4 - AM Depth\*6

- FM Deviation\*6 - Multi-marker & Marker List

- Highest 10 Markers - Limit Line\*4

- 2-tone 3rd-order Intermodulation Distortion\*4

- Annotation Display (On/Off) - Power Meter\*7

- Phase Noise\*8 - Noise Figure\*9

#### **Low-power Consumption**

MS2830A-044/045: 190 VA (nom.)



## **Signal Analyzer Functions**

#### **Analysis Bandwidth**

MS2830A-006: 10 MHz max.

(20 MHz max. sampling rate = 50 ns resolution, ADC resolution 16 bits) MS2830A-005\* $^{10}$ , MS2830A-009\*11: 31.25 MHz max.

(50 MHz max. sampling rate = 20 ns resolution, ADC resolution 16 bits) MS2830A-077 $^{*12}$ : 62.5 MHz max.

(100 MHz max. sampling rate = 10 ns resolution, ADC resolution 14 bits) MS2830A-078 $^{*13}$ : 125 MHz max.

(200 MHz max. sampling rate = 5 ns resolution, ADC resolution 14 bits)

Note: An image response is received when setting the bandwidth to more than 31.25 MHz. This can be used when not inputting a signal frequency outside the MS2830A analysis bandwidth (125 MHz max.). The Signal Analyzer MS2690A is recommended for other measurement purposes.

#### **Capture Function**

Saves analysis Span  $\times$  Time signal to internal memory and writes to hard disk. Up to 100 Msamples per measurement saved to internal memory.

Example: Span 1 MHz: Max. capture time 50 s Span 10 MHz: Max. capture time 5 s Span 100 MHz: Max. capture time 0.5 s

#### **Replay Function**

Reads saved data and replays using signal analyzer function. Example:

- 1. Data sharing between R&D and manufacturing
- 2. Later laboratory bench-top analysis of on-site signals

#### **Measurement with Sub-trace Display**

Split screen displaying both main and sub-traces at same time to check errors

Main: Spectrum, Frequency vs. Time, Power vs. Time, Phase vs. Time, CCDF/APD, Spectrogram

Sub: Power vs. Time, Spectrogram

#### Supports 125 MHz Wideband Measurements up to 43 GHz

- → MS2830A-067: Microwave Preselector Bypass
- → MS2830A-078\*13: Analysis Bandwidth Extension to 125 MHz


Bypassing preselector improves RF frequency characteristics and in-band frequency characteristics. Supports modulation analysis and signal analyzer measurements for signals up to 43 GHz.

### **BER Measurement Function (MS2830A-026)**

This option measures BER using Data/Clock/Enable demodulated at the DUT.

Input Bit Rate: 100 bps to 10 Mbps Input Level: TTL Level

- \*1: Difference between TOI and DANL as simple guide
- \*2: TOI (Third Order Intercept)
- \*3: DANL (Displayed Average Noise Level)
- \*4: Spectrum Analyzer Functions
- \*5: When using external mixer bands, or using internal micro frequency bands (Band; 3 to 9) with Microwave Preselector Bypass option: On
- \*6: Signal Analyzer functions (requires MS2830A-005/006/009/077/078)
- \*7: Power Meter Function (use USB power sensors)
- \*8: Phase Noise Measurement Function (requires MS2830A-010)
- \*9: Noise Figure Measurement Function (Requires MS2830A-017) [Use Noise Sources (Noisecom, NC346 series)]
- \*10: MS2830A-005 can be installed in MS2830A-044. Requires MS2830A-006.
- $\star 11$ : MS2830A-009 can be installed in MS2830A-045. Requires MS2830A-006.
- \*12: Requires MS2830A-006 and MS2830A-005 (for MS2830A-044). Requires MS2830A-006 and MS2830A-009 (for MS2830A-045).
- \*13: Requires MS2830A-006, MS2830A-005 and MS2830A-077 (for MS2830A-044). Requires MS2830A-006, MS2830A-009 and MS2830A-077 (for MS2830A-045).

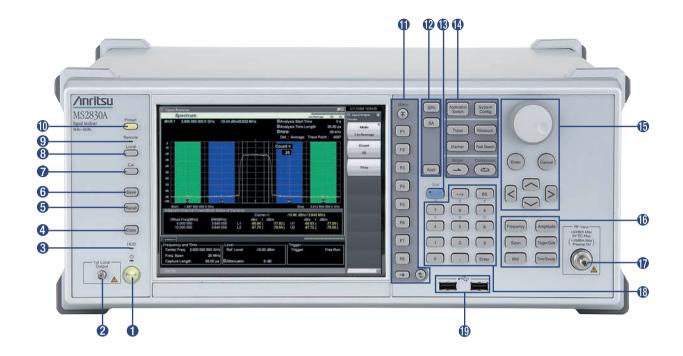

### Power switch

Press to switch between the standby state in which AC power is supplied and the Power On state in which the MS2830A is under operation. The Power lamp lights up orange in the standby state, and lights up green in the Power On state. Press the power switch for a reasonably long duration (for about two seconds).

### 2 1st Local Output connector

Installed in main unit with MS2830A-044/045 and supplies local signal and bias current to External Waveguide Mixer and receives frequency-converted IF signals.

#### A HDD lamn

Lights up when the MS2830A internal hard disk is being accessed.

#### 4 Copy key

Press to capture a screen image from the display and save it to a file.

## **5** Recall key

Press to recall a parameter file.

#### 6 Save key

Press to save a parameter file.

#### 7 Cal key

Press to display the calibration execution menu.

#### 8 Local key

Press to return to local operation from remote control operation through GPIB, Ethernet or USB (B), and enable panel settings.

#### Remote lamp

Lights up when the MS2830A is in a remote control state.

### Preset key

Resets parameters to their initial settings.

### **11** Function keys

Used for selecting or executing function menu displayed on the right of the screen. The function menu contents are provided in multiple pages and layers.

### Application key

Press to switch between applications.

#### Shift key

Used to operate any keys with functions described in blue characters on the panel. First press the Shift key, then press the target key when the Shift key lamp lights up green.

#### Main function keys 2

Used to set or execute main functions of the MS2830A. Executable functions vary depending on the application currently selected.

#### **(b)** Rotary knob/Cursor keys/Enter key/Cancel key

The rotary knob and cursor keys are used to select display items or change settings.

#### 16 Main function keys 1

Used to set or execute main functions of the MS2830A. Executable functions vary depending on the application currently selected.

#### **17** RF Input connector

Inputs an RF signal. N-J, 50Ω (MS2830A-044) K-J, 50Ω (MS2830A-045)

## **18** Numeric keypad

Used to enter numbers on parameter setup screens.

#### (19) USB connector (type A)

Used to connect a USB keyboard or mouse or the USB memory supplied with the MS2830A.



- AC inlet Used for supplying power.
- ② USB connectors (type A)
  Used to connect a USB keyboard or mouse or the USB memory supplied with the MS2830A.
- USB connector (type B) Used when controlling the MS2830A externally via USB.
- LAN (Ethernet) connector Used for connecting to a personal computer or for Ethernet connection.
- **Monitor Out connector**Used for connection with an external display.
- Slot for hard disk for booting Windows OS and for saving data. Also supports Removable HDD, Win10 MS2830A-014/114 option.
- AUX connector (For MS2830A-026) Composite connector for BER measurement function options with BER measurement Clock, Data, and Enable inputs. Converted to BNC using AUX Conversion Adaptor\*.
  - \*: The AUX Conversion Adapter J1556A is a standard accessory supplied with the BER Measurement Function MS2830A-026.
- 4 HDD slot for options Slot for HDD for saving data. Also supports 2ndary HDD MS2830A-011/111/311 options.

# Ref Input connector (reference frequency signal input connector)

Inputs an external reference frequency signal (5/10/13 MHz). It is used for inputting reference frequency signals with accuracy higher than that of those inside the MS2830A, or for synchronizing the frequency of the MS2830A to that of other device.

Buffer Out connector (reference frequency signal output connector)

Outputs the reference frequency signal (10 MHz) generated inside the MS2830A. It is used for synchronizing the frequencies between other devices and the MS2830A based on the reference frequency signal output from this connector.

- SA Trigger Input connector

  This is a BNC connector used to input the external trigger signal (TTL) for the Spectrum Analyzer or Signal Analyzer application.
- 3) Sweep Status Out connector
  Outputs a signal that is enabled when an internal
  measurement is performed or measurement data is obtained.
- **GPIB connector**Used when controlling the MS2830A externally via GPIB.
- $\begin{tabular}{ll} \textbf{3} & \textbf{IF Output connector} \\ & \textbf{Installed in main unit with MS2830A-044/045 to monitor} \\ & \textbf{output of internal IF signal.} \\ & \textbf{Connector: SMA-J, } 50\Omega \\ & \textbf{IF Output Frequency: } 1.875 \ \textbf{GHz} \\ \end{tabular}$
- Noise Source Drive connector
  This is available when the MS2830A-017/117 is installed.
  Supply (+28 V) of the Noise Source Drive.

## **Basic Performance**

#### **Dynamic Range**

Dynamic Range\*1: 159 dB (at 25 GHz) TOI\*2:  $\geq$  +13 dBm (6 GHz < f  $\leq$  26.5 GHz) DANL\*3: = 146 dBm/Hz (18.3 GHz < f  $\leq$  34 GHz)

Dynamic Range: 157 dB (at 40 GHz)

TOI: ≥+13 dBm (nom., 26.5 GHz <  $f \le 40$  GHz) DANL: -144 dBm/Hz (34 GHz <  $f \le 40$  GHz) \*1: Difference between TOI and DANL as simple guide.


\*2: TOI (Third Order Intercept)


\*3: DANL (Displayed Average Noise Level)


Dynamic range is a key specification for spectrum analyzers. Low displayed average noise level (DANL) as well as high TOI are important too. Low TOI may cause distortion with high-level carrier signals. Inserting an attenuator can lower the carrier level but this has the effect of lowering the level of weak spurious, making it hard to measure.

The MS2830A has an excellent dynamic range supporting true performance measurements of devices, such as base stations, requiring wideband measuring instruments.


#### Dynamic Range Comparison Image (at 40 GHz)

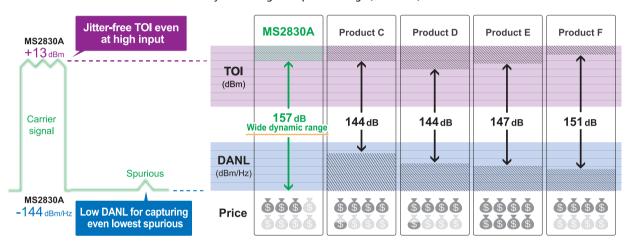

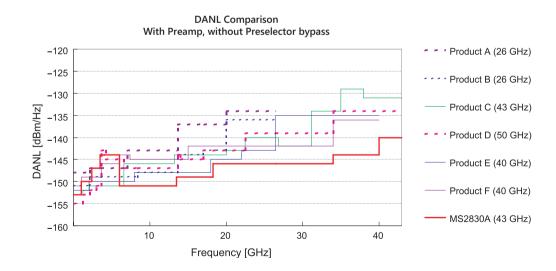


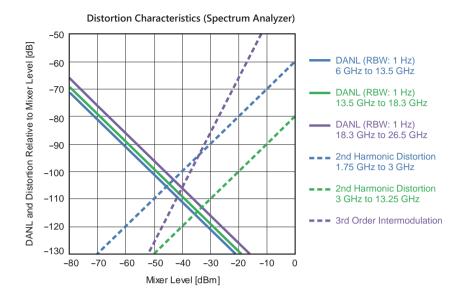

DANL (MS2830A-045)
Amp (Preamplifier: MS2830A-068), Bypass (Preselector Bypass: MS2830A-067/009)

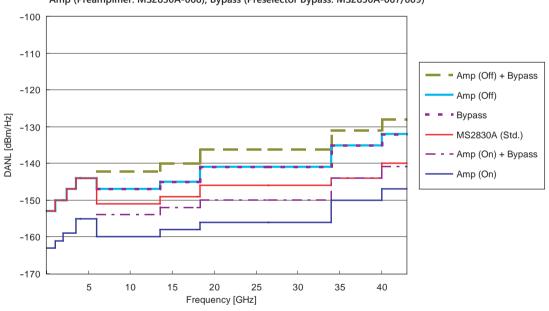

Example: SSB Phase Noise (Spectrum Analyzer/Signal Analyzer Common)

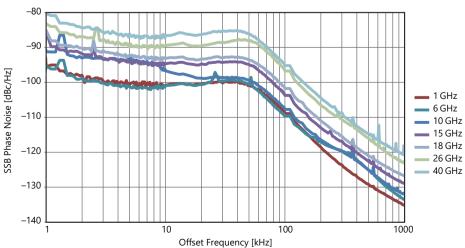

### **Basic Performance**


#### **Total Level Accuracy**


 $\pm 0.5 \text{ dB} (300 \text{ kHz} \le \text{f} < 4 \text{ GHz})$  $\pm 1.8 \text{ dB } (4 \text{ GHz} \le f \le 13.8 \text{ GHz})$  $\pm 3.0 \text{ dB} (13.8 \text{ GHz} < f \le 40 \text{ GHz})$ 

The absolute level accuracy in most spectrum analyzer catalogs does not include frequency characteristics, linearity, and attenuator switching error. However, the MS2830A Total Level Accuracy in the catalog includes the above three errors.

Even when changing the frequency and attenuator, stable measurement is assured in the specified error range.

Example: Level Error Comparison with Different Level Calibration Method

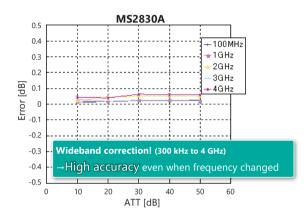

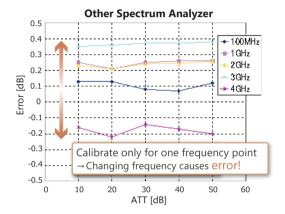

The MS2830A total level accuracy includes:

Frequency characteristics Linearity

Attenuator switching error

The absolute amplitude accuracy specifications of other spectrum analyzers excludes:

Frequency characteristics

Linearity

Attenuator switching error


#### Preamp up to 43 GHz: MS2830A-068 Microwave Preamplifier

DANL: -156 dBm/Hz (at 25 GHz) -150 dBm/Hz (at 40 GHz)

Installing the Microwave Preamplifier (MS2830A-068) amplifies signals before the mixer to improve the spectrum analyzer and signal analyzer sensitivity. This is recommended when measuring low-level signals, such as noise and interference signals.

Frequency range: 100 kHz to 26.5 GHz (MS2830A-044) 100 kHz to 43 GHz (MS2830A-045)

\*: Simultaneous installation with MS2830A-008 not supported

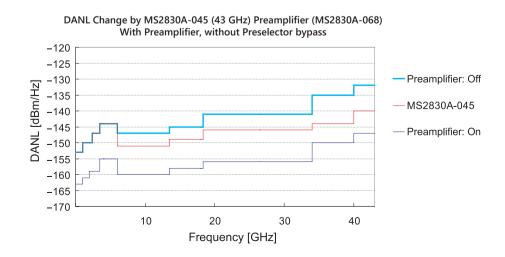

#### Supports 125 MHz Wideband Measurements up to 43 GHz

Microwave Preselector Bypass MS2830A-067 + Analysis Bandwidth Extension to 125 MHz MS2830A-078\*

\*: Requires MS2830A-006, MS2830A-005 and MS2830A-077 (for MS2830A-044). Requires MS2830A-006, MS2830A-009 and MS2830A-077 (for MS2830A-045).


Supports wideband analysis with high frequencies

Frequency range: 4 GHz to 26.5 GHz (MS2830A-044, Frequency band mode: Normal) 4 GHz to 43 GHz (MS2830A-045, Frequency band mode: Normal)

Installing the Microwave Preselector Bypass supports signal analyzer measurement functions in the above frequency range.

Adding the measurement software permits modulation analysis and is very useful for designing and inspecting high-frequency devices.

#### Example: Vector Modulation Analysis Software MX269017A

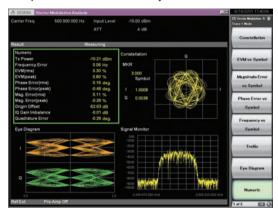

#### Vector Modulation Analysis Software (MX269017A)

This software measures the modulation accuracy, carrier frequency, Tx power, etc., for each type of digital radio.

- Supported Modulation methods
   BPSK, QPSK, O-QPSK, π/4 DQPSK, 8PSK, 16QAM, 32QAM, 64QAM, 128QAM, 256QAM, 2FSK, 4FSK, 2ASK, 4ASK, H-CPM, MSK
- Frequency Setting Range
  - 100 kHz to the upper limit of the main unit (300 MHz to 6 GHz depending on measured symbol rate and the MS2830A options)

Refer to the MX2690xxA Series Measurement Software brochure for details.


#### **Improved Level Linearity**

Conventional spectrum analyzers use an analog IF and log amp to achieve good level accuracy at points near the log scale reference level, but the accuracy degrades at points that are further away.

The MS2830A uses a digital IF instead of a log amp, which supports measurements with excellent accuracy at any point.

#### Example: Level Stability by Switching Reference Level



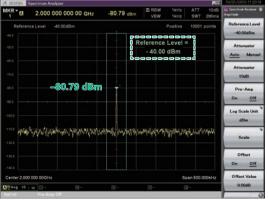

#### **Level Linearity**

The MS2830A total level accuracy is better than that of conventional spectrum analyzers but sometimes a power meter is used when wanting to measure with even higher accuracy.

However, use of a power meter narrows the dynamic range and errors may also occur easily when switching the power range. Since a power meter has no frequency selection, the total power of the input signal is measured. In other words, the power of the target frequency components cannot be separated out.

Measurement can be performed with a wide dynamic range after checking the MS2830A level measurement reference value with a power meter.

The MS2830A total level accuracy includes:


Frequency characteristics

Linearity

Attenuator switching error

And supports excellent:


Log scale stability

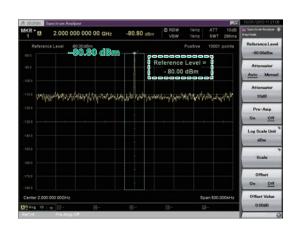

#### **Dual Sweep Speed: Normal/Fast**

When sweep time is set to [Auto], Normal (normal sweep) or Fast mode (high-speed sweep) can be set. The Fast mode sweeps six times faster than the Normal mode.

#### Example of Sweep Mode Switch Error: (CW –10 dBm input) Level Error when Switching from Normal to Fast

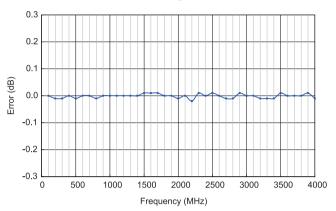

### **Low Consumption Power, Excellent Eco Product**

The MS2830A meets Anritsu "Excellent eco products" standard for environment-friendly products. It cuts consumed power by 50% compared to conventional models.

Power Consumption:

≤350 VA (including all options)

190 VA (nom., MS2830A-044 only, 26.5 GHz\*1)

190 VA (nom., MS2830A-045 only, 43 GHz\*1)

\*1: Excluding other options

### **Resolution Bandwidth (RBW)**

Setting Range

Spectrum Analyzer:

1 Hz to 3 MHz (1-3 sequence),

500 Hz, 50 kHz, 2 MHz, 5 MHz, 10 MHz, 20 MHz\*<sup>2</sup>, 31.25 MHz\*<sup>2</sup>,\*<sup>3</sup>, 200 Hz (6 dB)\*<sup>4</sup>, 9 kHz (6 dB)\*<sup>4</sup>, 120 kHz (6 dB)\*<sup>4</sup>, 1 MHz (Impulse)\*<sup>4</sup>

Spectrum trace in signal analyzer mode:

1 Hz to 1 MHz (1-3 sequence)\*5

1 Hz to 3 MHz (1-3 sequence)\*6

1 Hz to 10 MHz (1-3 sequence)\*7

When monitoring two adjacent signals, the frequency resolution can be increased by reducing the resolution bandwidth (RBW).

This also has the effect of reducing the noise level.

Conversely, to confirm level variations of 20-MHz band signals such as LTE, set the RBW to 31.25 MHz.

- \*2: Can be set when with MS2830A-005 or MS2830A-009.
- \*3: Instead of Gaussian filter, 31.25 MHz RBW uses filter with flat top characteristics above 31.25 MHz.
- \*4: When MS2830A-016 installed.
- \*5: Without MS2830A-077/078, or Bandwidth: ≤31.25 MHz
- \*6: With MS2830A-077, Bandwidth: >31.25 MHz
- \*7: With MS2830A-078, Bandwidth: >31.25 MHz

#### **Gate Sweep**

Gate sweep executes sweeping only for the length of time specified by the gate length, starting from when the trigger condition is met. A delay time until sweeping starts after the trigger condition is met can be set using trigger delay.

- The gate source can be selected from the following Wide IF video trigger External trigger Frame trigger
- Setting range and resolution for gate delay Setting range: 0 to 1 s Resolution: 20 ns
- Setting range and resolution for gate length Setting range: 50  $\mu s$  to 1 s Resolution: 20 ns

#### **Trigger Function**

Trigger sweep executes sweeping using the specified trigger condition as the start point.

- Video trigger:
  - Trigger sweeping starts in synchronization with the rise or fall of the waveform. A trigger level indicator showing the trigger level is displayed on the screen.
- Wide IF video trigger:

An IF signal with a wide passing band of about 5 MHz is detected, and sweeping starts in synchronization with either the rise or fall of the detected signal.

- External trigger:
  - Sweeping starts in synchronization with the rise or fall of the signal input via the Trigger Input connector.
- Frame trigger:

An equipment-internal trigger signal is used to generate a trigger and start the sweep. The generation period (Period) and offset time (Offset) for the trigger signal can be set. It is also possible to resynchronize the trigger signal with either the Wide IF Video signal or an external trigger.

#### **Three Built-in External Interfaces**

The built-in Gigabit Ethernet, USB2.0, and GPIB interfaces support remote operation.

GPIB: IEEE488.2, Rear panel, IEEE488 bus connector Interface functions: SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, C0, E2

Ethernet: 10/100/1000BASE-T, Rear panel, RJ-45 USB (B): USB2.0, Rear panel, USB-B connector

#### **Saving Measurement Results**

Measurement results can be saved to internal hard disk or external USB memory. Screen dumps and trace data can be saved too.

- Screen dump file type BMP
  - PNG
- The color of the screen hard copy can be set as follows:

Normal (same as screen display)

Reverse

Monochrome

Reversed Monochrome

## **Signal Analyzer: Basic Performance/Functions**

#### Wide bandwidth × High Accuracy FFT Analysis

Analysis Bandwidth

MS2830A-006: 10 MHz max.

(20 MHz max. sampling rate = 50 ns resolution, ADC resolution 16 bits) MS2830A-005\*1, MS2830A-009\*2: 31.25 MHz max.


(50 MHz max. sampling rate = 20 ns resolution, ADC resolution 16 bits) MS2830A-077\*3: 62.5 MHz max.

(100 MHz max. sampling rate = 10 ns resolution, ADC resolution 14 bits) MS2830A-078\* $^{4}$ : 125 MHz max.

(200 MHz max. sampling rate = 5 ns resolution, ADC resolution 14 bits)

Note: An image response is received when setting the bandwidth to more than 31.25 MHz. This can be used when not inputting a signal frequency outside the MS2830A analysis bandwidth (125 MHz max.). The Signal Analyzer MS2690A is recommended for other measurement purposes.


Based on the excellent level accuracy and wide dynamic range of the MS2830A, a signal with an FFT analysis bandwidth of up to 125 MHz can be captured with a level accuracy of  $\pm 0.3$  dB.

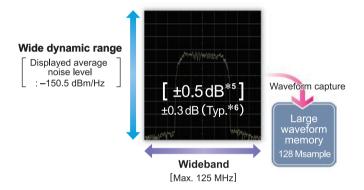

- \*1: MS2830A-005 can be installed in MS2830A-044. Requires MS2830A-006.
- \*2: MS2830A-009 can be installed in MS2830A-045. Requires MS2830A-006.
- \*3: Requires MS2830A-006 and MS2830A-005 (for MS2830A-044). Requires MS2830A-006 and MS2830A-009 (for MS2830A-045).
- \*4: Requires MS2830A-006, MS2830A-005 and MS2830A-077 (for MS2830A-044). Requires MS2830A-006, MS2830A-009 and MS2830A-077 (for MS2830A-045).
- \*5: 300 kHz  $\leq$  f < 4 GHz, Frequency band mode Normal.
- \*6: Excluding Guard Band

#### **Vector Signal Analysis (VSA) Function**

Seamless signal capture and VSA analysis in multiple domains make it easy to evaluate burst-signal responses and capture degraded spectrum transients, etc., which cannot be checked by conventional sweep spectrum analyzers. This greatly improves design verification and troubleshooting efficiency.

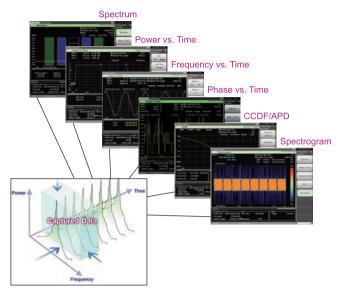

## **Signal Analyzer: Basic Performance/Functions**

#### **Save Signals in Internal Memory**

Max. Capture Time: 0.5 s to 2000 s Max. Number of Samples: 100 Msamples

The "Analysis bandwidth  $\times$  Analysis time" signal is held in internal memory and saved to hard disk.

Up to 100 Msamples of data can be saved to memory for one measurement. The frequency span determines the sampling rate. The following chart shows the maximum capture time per frequency span.

Span*	Sampling Rate	Capture Time	Max. Sampling Data
1 kHz	2 kHz	2000 s	4M
2.5 kHz	5 kHz	2000 s	10M
5 kHz	10 kHz	2000 s	20M
10 kHz	20 kHz	2000 s	40M
25 kHz	50 kHz	2000 s	100M
50 kHz	100 kHz	1000 s	100M
100 kHz	200 kHz	500 s	100M
250 kHz	500 kHz	200 s	100M
500 kHz	1 MHz	100 s	100M
1 MHz	2 MHz	50 s	100M
2.5 MHz	5 MHz	20 s	100M
5 MHz	10 MHz	10 s	100M
10 MHz	20 MHz	5 s	100M
25 MHz	50 MHz	2 s	100M
31.25 MHz	50 MHz	2 s	100M
50 MHz	100 MHz	500 ms	50M
62.5 MHz	100 MHz	500 ms	50M
100 MHz	200 MHz	500 ms	100M
125 MHz	200 MHz	500 ms	100M

<sup>\*:</sup> With MS2830A-006: 1 kHz to 10 MHz

With MS2830A-005/006 (for MS2830A-044) or

MS2830A-006/009 (for MS2830A-045): 1 kHz to 31.25 MHz

With MS2830A-005/006/077 (for MS2830A-044) or

MS2830A-006/009/077 (for MS2830A-045): 1 kHz to 62.5 MHz

With MS2830A-005/006/077/078 (for MS2830A-044) or


MS2830A-006/009/077/078 (for MS2830A-045): 1 kHz to 125 MHz

#### **Replay Function for Comparison Evaluation**

This function reads saved data and replays it using the signal analyzer measurement function.


#### Examples:

- 1. Data sharing between separate R&D and manufacturing
- 2. Later laboratory bench-top analysis of on-site signals
- 3. Save data at shipment and re-verify if problem occurs

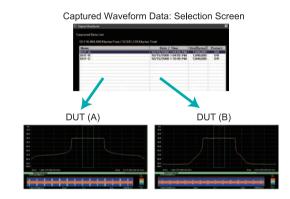


#### Spectrum

The Spectrum trace displays a graph with amplitude on the y-axis and frequency on the x-axis. The captured IQ data is FFT processed (fast Fourier transformed) and converted from the time domain to the frequency domain for display as a spectrum.

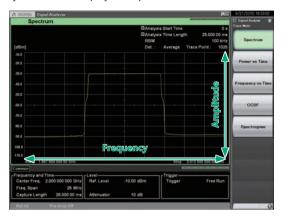


#### Power vs. Time

The Power vs. Time trace displays a graph with amplitude on the y-axis and time on the x-axis to confirm changes in power with time of measured signals.

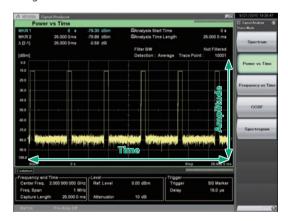


### Frequency vs. Time

The Frequency vs. Time trace displays a graph with frequency on the y-axis and time on the x-axis to confirm time variation of the measured signal frequency.

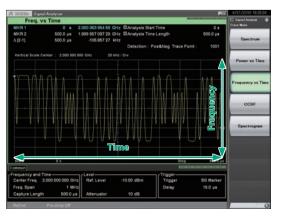

#### Phase vs. Time

The Phase vs. Time trace displays a graph with phase on the y-axis and time on the x-axis to confirm time variation of the measured signal phase.

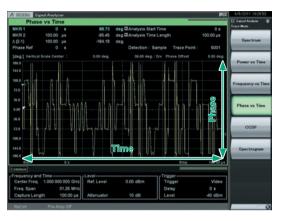

#### CCDF\*1/APD\*2

The CCDF trace displays the power variation probability on the y-axis and power variation on the y-axis to confirm the CCDF and APD of measured signals.

- \*1: CCDF (Complementary Cumulative Distribution Function)
- \*2: APD (Amplitude Probability Density)



#### Measurement Results

- CCDF: The CCDF display indicates the cumulative distribution of transient power variations compared to average power.
- APD: The APD display indicates the probability distribution of transient power fluctuations compared to average power.

#### **Spectrogram**


The Spectrogram trace displays the level as color with frequency on the y-axis and time on the x-axis. The captured IQ data is FFT processed to confirm time variations in the continuous spectrum.

It is useful for monitoring frequency hopping and transient signals.



#### No Trace

No Trace mode does not execute signal analysis. Therefore, "IQ data output" and "IQ data readout using remote commands" can be executed quickly without the need to wait for completion of analysis.

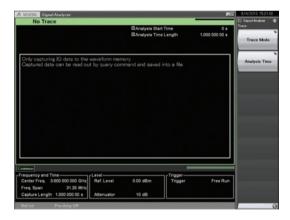


#### **Measurement with Sub-trace Display**

This function splits the screen into top and bottom halves; simultaneous display of the sub-trace supports easy monitoring of fault locations and transient phenomena.

Main: Spectrum, Frequency vs. Time, Power vs. Time, Phase vs. Time, CCDF/APD, Spectrogram

Sub: Power vs. Time, Spectrogram

The part of a previously captured long-term signal to be monitored can be selected (red part) on the sub-trace to display the problem part only on the main trace.

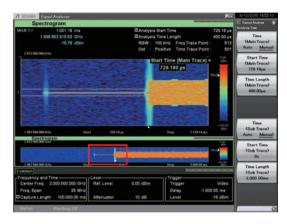

## **Signal Analyzer: Trace**



#### **Useful for Tx Characteristics Evaluation**

The MS2830A is fully loaded with all the functions required for evaluating Tx characteristics. Tests can be performed simply and in accordance with standards using functions tailored to measurement contents.

Measure Function	SPA*1	VSA*2	
Channel Power	✓	✓	
Occupied Bandwidth	✓	✓	
Adjacent Channel Leakage Power	✓	<b>✓</b>	
Spectrum Emission Mask	<b>✓</b>		
Burst Average Power	<b>✓</b>	<b>√</b>	
Spurious Emission	✓		
AM Depth		<b>✓</b>	
FM Deviation		<b>✓</b>	
Multi-marker & Marker List	<b>✓</b>	✓	
Highest 10 Markers	✓	✓	
Limit Line	✓		
Frequency Counter	✓		
2-tone 3rd-order Intermodulation Distortion	✓		
Annotation Display (On/Off)	✓		
Power Meter	Independent function*3		
Phase Noise	MS2830A-010		
Noise Figure	MS2830A-017*4		

- \*1: SPA (Spectrum Analyzer)
- \*2: VSA (Vector Signal Analyzer), requires MS2830A-005/006/009/077/078
- \*3: Use USB Power Sensors
- \*4: Use Noise Sources (Noisecom, NC346 series)


#### **Channel Power**





This function measures channel bandwidth power. Three types of filters (Rect, Nyquist, Root Nyquist) can be selected.

Pre-installed templates for each standard support easy parameter setting.

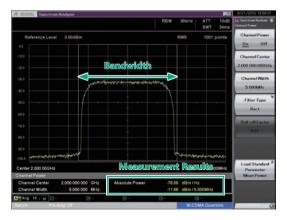

#### Measurement Results

- Absolute power per Hz in channel band
- Total power in channel band


### **Occupied Bandwidth**





Occupied bandwidth is measured by selecting either the N% or X-dB mode.

Pre-installed templates for each standard support easy parameter setting.

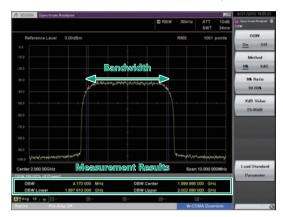

Measurement Results


• Bandwidth for specified conditions

### **Adjacent Channel Leakage Power**





This function measures carrier adjacent channel (offset) power (In-Band). 1 to 12 carriers can be set and switched instantaneously on-screen. True ACLR performance is measured using the noise cancellation function to subtract main unit noise from the measurement result. Pre-installed templates for each standard support easy parameter setting.

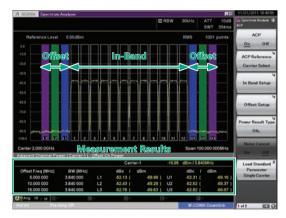


Measurement Results

- · Absolute power of Offset channel
- Relative values in relation to reference power selected in ACP reference

#### **Spectrum Emission Mask**



This function splits the offset part into up to 12 segments: the measurement parameters and limit lines can be specified to measure the peak power and margin for each segment. The results are tabulated below the trace and marked PASS/FAIL. Pre-installed templates for each standard support easy parameter setting.

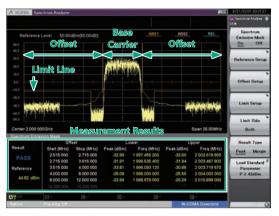

Measurement Results

- · Peak power (or margin) at offset
- · Each peak frequency

#### **Burst Average Power**





The average power for the range specified by two markers is displayed in the time domain. Measurement only requires setting the measurement start and stop positions on the screen. True performance is measured using the noise cancellation function to subtract main unit noise from the measurement result.

Pre-installed templates for each standard support easy parameter setting.




Measurement Results

· Average power of specified range

### **Spurious Emission**



This function splits the frequency range into up to 20 segments for sweeping; the measurement parameters and limit lines can be specified to measure the peak power and margin for each segment. The results are tabulated below the trace and marked PASS/FAIL. And, zero-span capturing of peak power in time domain is also supported.

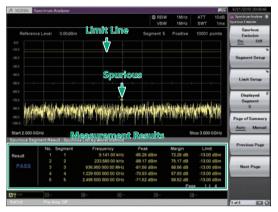


Measurement Results

- Each segment peak power and margin
- Each peak frequency

#### **Example: Spurious Emission**

The Japanese Radio Law governing measurement of spurious specifies searching for the peak level in the swept frequency segment using different parameter settings and then performing zero-span measurement of the found peak point. The MS2830A spurious measurement function not only performs the sweep search but also performs the zero-span measurement automatically as well, and displays the results of both. Using zero-span measurement, the search screen is displayed as is while zero-span measurement runs in the background and the result markers are plotted on the search screen. Time wasted by screen switching is reduced and the correlation with the search results can be seen at a glance.

#### Measurement Example

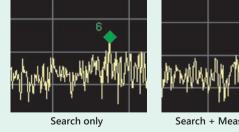


Search + Measurement

#### **AM Depth**



The Power vs. Time trace measurement function is used to confirm  ${\sf AM}$  depth.

It measures the measured signal AM based on trace data at the displayed marker. When marker is Off, the whole range is measured.

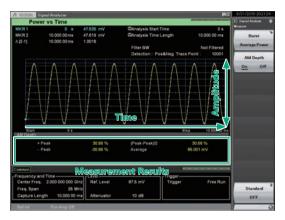


#### Measurement Results

• +Peak, -Peak, (Peak-Peak)/2, Average

#### **FM Deviation**



The Frequency vs. Time trace measurement is used to confirm the FM deviation. It measures the maximum and minimum frequencies from trace data in the marker range. When marker is Off, the whole range is measured.

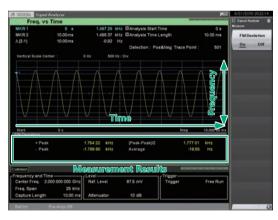

#### Measurement Results


• +Peak, -Peak, (Peak-Peak)/2, Average

#### Multi-marker & Marker List





Up to 10 markers can be set for this function. Markers may be either a spot or a zone. Using a zone marker, the peak of a signal with an unstable variable frequency can be tracked and measured. Not only can the 10 markers be listed below the trace but the differences between markers can be calculated and displayed using the delta setting.

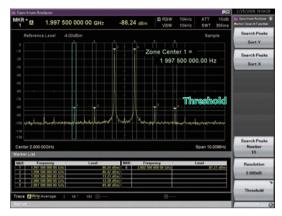

Measurement Results


- · Marker point frequency
- Marker point power
- Absolute power per Hz in marker bandwidth
- Total power in marker bandwidth
- · Difference between any markers

#### **Highest 10 Markers**





This function sets the threshold level and auto-detects peaks in the X (frequency) and Y (level/time) directions.

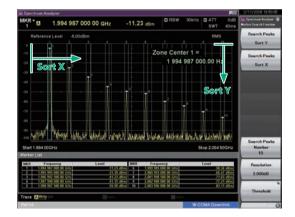

Measurement Results

- Peak Search Y:
  - Sets up to 10 markers in order of peak level
- Peak Search X:

Sets up to 10 markers in order of frequency (time) level

#### **Limit Lines**

#### **Setting Limit Lines**

Up to six types of Limit line can be set on the spectrum display (frequency domain).

In addition to setting the frequency and level of crossover points manually in sequence from the low frequency, after creating the right half of a line, the left half can be created by reversing and copying the right half, to set a symmetric limit line. Additionally, a Limit line that traces the measured waveform can be created using the Limit Envelope function. A margin can be set on the Limit line in the amplitude direction.


#### **Evaluating using Limit Line Setting (Limit Test Function)**

When the waveform is above or below the Limit line, it is evaluated automatically as PASS or FAIL. Evaluation is also possible with an added margin. The target evaluation line can be chosen from any of six types.

## Auto-saving Waveform Data using Limit Line Setting (Save on Event Function)

When the waveform matches the evaluation conditions (Event), it can be saved automaticaly as a csv format file. Any one of the following five Event types can be selected.

- (1) Limit Fail: Saves waveform file when evaluation result is Fail
- (2) Limit Pass: Saves waveform file when evaluation result is Pass
- (3) Margin Fail: Saves waveform file when evaluation result including margin is Fail
- (4) Margin Pass: Saves waveform file when evaluation result including margin is Pass
- (5) Sweep Complete: Saves waveform file at every measurement regardless of evaluation result

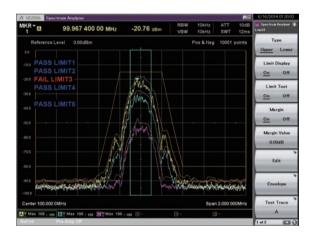

#### Example:

PASS/FAIL evaluation is performed by changing the input signal level.

The evaluation results for the five line types can be displayed simultaneously on one screen.

Line: Limit 1, Limit 2, Limit 3, Limit 4, Limit 5, Limit 6 Evaluation Type: Upper Limit, Lower Limit

Crossover (Point): 1 to 100

Margin: Set Margin line for each Limit 1, 2, 3, 4, 5, 6

Evaluation Result: PASS, FAIL

Result Save: Auto-save as csv format file

## (SPA)

#### **Frequency Counter**

This function of the marker functions is used to measure CW frequencies.

Gate Time sets the measurement target time.




Measurement Results

Marker point frequency

#### 2-tone 3rd-order Intermodulation Distortion



By inputting two different frequency CW signals (desired waves), two-tone third-order intermodulation distortion is generated close to the desired waves according to non-linear characteristics of Device Under Test (DUT). Then, Third Order Intercept (TOI) is calculated from the two-tone third-order intermodulation distortion.

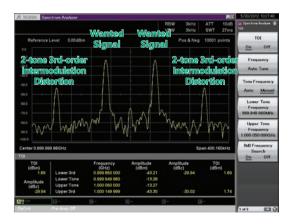


Measurement Results

- TOI: [dBm]
- Amplitude: [dBc]

SPA


#### **Annotation Display**

Screen annotations can be set to On or Off. Annotations about frequency, level, etc., are not displayed at the Off setting.

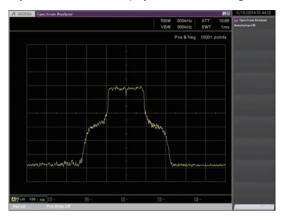

#### **Power Meter**

Power meter function can connect a USB power sensor to the MS2830A and read the measurement values.

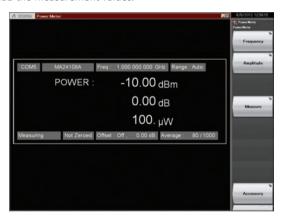

Measurement Results

• Power: [dBm], [W]

• Relative power: [dB]

### **Compatible USB Power Sensors**

Model	Frequency Range	Dynamic Range
MA24104A*	600 MHz to 4 GHz	+3 to +51.76 dBm
MA24105A	350 MHz to 4 GHz	+3 to +51.76 dBm
MA24106A	50 MHz to 6 GHz	-40 to +23 dBm
MA24108A	10 MHz to 8 GHz	-40 to +20 dBm
MA24118A	10 MHz to 18 GHz	-40 to +20 dBm
MA24126A	10 MHz to 26 GHz	-40 to +20 dBm

\*: MA24104A has been discontinued.

#### Installing the PowerXpert™

Installing the PowerXpert™ PC application software for the Anritsu USB Power Sensor in the MS2830A supports various measurement functions offered by PowerXpert™, as well as use of other USB power sensors by the MS2830A.

PowerXpert™ for the MS2830A can be downloaded from the MS2830A and MS2830A Microwave product pages at the Anritsu website. When using the PowerXpert™ software with a PC, download the latest version from the USB Power Sensor product page at the Anritsu website.

## SPA

#### Phase Noise (MS2830A-010)

This function measures phase noise in the 10 Hz to 10 MHz frequency offset range.



Measurement Results

- Carrier level
- Error between set frequency and carrier frequency
- Marker point phase noise level

#### Noise Figure Measurement (MS2830A-017)

Noise Figure is measured with the measurement method of Y-factor method which uses a Noise Source. The Noisecom NC346 series of noise sources is supported. Please refer to the next page.

Frequency Mode: Fixed, List, Sweep

DUT Mode: Amplifier, Down Converter, Up Converter

Screen Layout: Graph, Table


Measurement Results Display Graph/List/Spot

Displays measurement results for each trace (Trace1/Trace2).


- Noise Figure (NF) [dB]
- Noise Factor (F) [Linear]
- Gain
- Y-Factor: Power ratio when Noise Source is turned ON/OFF
- T effective: Effective noise temperature
- P Hot: Power measured when Noise Source is On.
- P Cold: Power measured when Noise Source is Off.



Measurement Result: Example of Graph display (Frequency Mode: Sweep, Screen Layout: Graph)

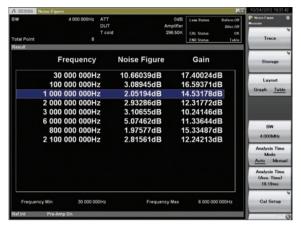

Measurement Result: Example of List display (Frequency Mode: List, Screen Layout: List)

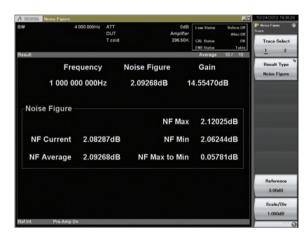

Measurement Result: Example of Spot display (Frequency Mode: Fixed)

#### **Noise Source**

Supports noise sources from Noisecom NC346 series. NC346 series models and summary specifications are listed below. Operation is not guaranteed when using other noise sources.

See the NC346 series catalog and datasheet for detailed specifications.


#### NC346 series summary specifications


Model	RF Connector	Frequency	Output ENR	VS	SWR (maximum	lz]	DC Offset	DC Block	
iviodei	Kr Connector	[ĠHz] ´	[dB]	0.01 to 5	5 to 18	18 to 26.5	26.5 to 40	DC Ollset	DC Block
NC346A	SMA (M)	0.01 to 18.0	5 to 7	1.15: 1	1.25: 1	_	_	No	Not required
NC346A Precision	APC3.5 (M)	0.01 to 18.0	5 to 7	1.15: 1	1.25: 1	_	_	No	Not required
NC346A Option 1	N (M)	0.01 to 18.0	5 to 7	1.15: 1	1.25: 1	_	_	No	Not required
NC346A Option 2	APC7	0.01 to 18.0	5 to 7	1.15: 1	1.25: 1	_	_	No	Not required
NC346A Option 4	N (F)	0.01 to 18.0	5 to 7	1.15: 1	1.25: 1	_	_	No	Not required
NC346B	SMA (M)	0.01 to 18.0	14 to 16	1.15: 1	1.25: 1	_	_	No	Not required
NC346B Precision	APC3.5 (M)	0.01 to 18.0	14 to 16	1.15: 1	1.25: 1	_	_	No	Not required
NC346B Option 1	N (M)	0.01 to 18.0	14 to 16	1.15: 1	1.35: 1	_	_	No	Not required
NC346B Option 2	APC7	0.01 to 18.0	14 to 16	1.15: 1	1.25: 1	_	_	No	Not required
NC346B Option 4	N (F)	0.01 to 18.0	14 to 16	1.15: 1	1.35: 1	_	_	No	Not required
NC346D	SMA (M)	0.01 to 18.0	19 to 25*1	1.50: 1	1.50: 1	_	_	No	Not required
NC346D Precision	APC3.5 (M)	0.01 to 18.0	19 to 25*1	1.50: 1	1.50: 1	_	_	No	Not required
NC346D Option 1	N (M)	0.01 to 18.0	19 to 25*1	1.50: 1	1.75: 1	_	_	No	Not required
NC346D Option 2	APC7	0.01 to 18.0	19 to 25*1	1.50: 1	1.50: 1	_	_	No	Not required
NC346D Option 3	N (F)	0.01 to 18.0	19 to 25*1	1.50: 1	1.75: 1	_	_	No	Not required
NC346C	APC3.5 (M)	0.01 to 26.5	13 to 17	1.15: 1	1.25: 1	1.35: 1	_	Yes*3	Required*3
NC346E	APC3.5 (M)	0.01 to 26.5	19 to 25*1	1.50: 1	1.50: 1	1.50: 1	_	Yes*3	Required*3
NC346Ka	K (M)*2	0.10 to 40.0	10 to 17	1.25: 1	1.30: 1	1.40: 1	1.50: 1	Yes*3	Required*3

<sup>\*1:</sup> Flatness better than ±2 dB

#### Specifications outlines of recommended DC Blocks and Adapters

	Ordering		RF Connector	Frequency Range	VSWR	
	Model	Name	Kr Connector	Frequency Kange	VSVVR	
	J0805	DC Block, N type (MODEL 7003)	N (M)-N (F)	10 kHz to 18 GHz	1.35 (max.)	
DC Block	J1555A	DC Block, SMA type (MODEL 7006-1)	SMA (M)-SMA (F)	9 kHz to 20 GHz	1.50 (9 kHz to 10 kHz) 1.50 (11 kHz to 20 kHz) 1.30 (20 kHz to 20 GHz)	
	K261	DC Block	K (M)-K (F)	10 kHz to 40 GHz	See figure (return loss) below	
	J0004	Coaxial Adapter	N (M)-SMA (F)	DC to 12.4 GHz	≤1.08 (DC to 3 GHz) ≤1.11 (3 GHz to 6 GHz) ≤1.18 (6 GHz to 12.4 GHz)	
Adapter	J1398A	N-SMA Adapter	N (M)-SMA (F)	DC to 26.5 GHz	≤1.05 (DC to 3 GHz) ≤1.07 (3 GHz to 6 GHz) ≤1.2 (6 GHz to 13.5 GHz) ≤1.3 (13.5 GHz to 20 GHz) ≤1.45 (20 GHz to 26.5 GHz)	

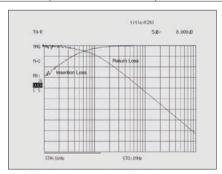

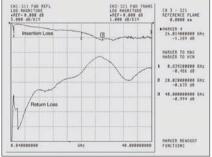

Typical Low Frequency Insertion Loss measured on K261 over the range of 1 kHz to 1 MHz.

oss measured Insertion Loss and Return Loss measured on to 1 MHz. K261 over the range of 40 MHz to 40 GHz. K261 DC Block Return Loss

#### Recommended DC blocks/Adaptor combinations for MS2830A/MS269xA series signal analyzer

	Model	Model Frequency Range		Recommended DC Block Order Name	Recommended Adapter Order Name
	MS2830A-040	9 kHz to 3.6 GHz	N (F)	Not required	Not required
	MS2830A-041	MS2830A-041 9 kHz to 6 GHz		Not required	Not required
MS2830A series	MS2830A-043	9 kHz to 13.5 GHz	N (F)	Not required	Not required
	MS2830A-044	9 kHz to 26.5 GHz	N (F)	J1555A (9 kHz to 20 GHz)	J1398A
	MS2830A-045	9 kHz to 43 GHz	K (F)	K261	Not required
	MS2690A	50 Hz to 6 GHz	N (F)	J1555A (from 9 kHz)	J0004
MS269xA series	MS2691A	50 Hz to 13.5 GHz	N (F)	J1555A (from 9 kHz)	J1398A
	MS2692A	50 Hz to 26.5 GHz	N (F)	J1555A (9 kHz to 20 GHz)	J1398A

<sup>\*2:</sup> Compatible with SMA and APC3.5

<sup>\*3:</sup> When using noise sources output by DC, always use in combination with a DC block.

## BER Measurement Function (MS2830A-026): Basic Performance

#### **Convenient Built-in BER Measurement Function for Rx Evaluations**

The MS2830A with the BER Measurement Function MS2830A-026 supports measurement up to 10 Mbps.

It supports Rx sensitivity tests by inputting the receiver-demodulated Data/Clock/Enable to the back of the MS2830A.

- Input Signal: Data, Clock, Enable (Polarity reversal supported)
- Input Bit Rate: 100 bps to 10 Mbps
- Input Level: TTL 3.3 V
- Connector: Rear panel, AUX connector\*
- \*: Can convert to BNC by connecting AUX conversion adapter (J1556A).
- Measured Patterns:

PN9, PN11, PN15, PN20, PN23, ALL0, ALL1, Alternate (0101...), PN9Fix, PN11Fix, PN15Fix, PN20Fix, PN23Fix, UserDefine (4096 bits Max.)

- Measurable Bit Count: 1000 to 4294967295 bits (2<sup>32</sup> 1 bits)
- Measurable Error Bit Count: 1 to 2147483647 bits (231 1 bits)
- Count Mode


Data: Measures until specified Data count Error: Measures until specified Error count

• Measurement Mode

Single: Measures specified measurement bit count once Continuous: Repeats Single measurement Endless: Continues measurement to upper limit of measurement bits



**BER Measurement Function Main Screen** 

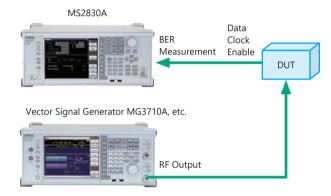

BER Measurement Setup Example (using external vector signal generator)

## **Excellent Expandability Platform (Hardware)**

The versatility of the MS2830A series is tailored easily to the application by installing modules in expansion slots.

#### **Basic Performance and Function Improvement**

#### Rubidium Reference Oscillator/Retrofit MS2830A-001/101

This option is a 10 MHz reference crystal oscillator with excellent frequency stability startup characteristics of  $\pm 1 \times 10^{-9}$  at 7 minutes after power-on.

Aging Rate: ±1 × 10<sup>-10</sup>/month

Start-up Characteristics:  $\pm 1 \times 10^{-9}$  (7 minutes after power-on)

#### Preamplifier/Retrofit MS2830A-008/108

This option is used to measure low-level signals, such as noise and interference signals.

Frequency Range: 100 kHz to 6 GHz

\*: Cannot be installed simultaneously with MS2830A-068/168

#### Precompliance EMI Function/Retrofit MS2830A-016/116

This option adds an EMI measurement detection mode and RBW to the spectrum analyzer function. Both the detection mode used for CISPR standards (Quasi-Peak, CISPR-AVG, RMS-AVG) and RBW (200 Hz (6 dB), 9 kHz (6 dB), 120 kHz (6 dB), 1 MHz (Imp)) as well as conventional settings can be selected.

#### Microwave Preselector Bypass/Retrofit MS2830A-067/167

Bypassing the preselector used for the microwave band improves RF frequency characteristics and in-band frequency characteristics.

\*: Add MS2830A-067 when using the signal analyzer measurement functions at bandwidth: >31.25 MHz and frequency: >6 GHz.

#### Microwave Preamplifier/Retrofit MS2830A-068/168

This option is used to measure low-level signals, such as noise and interference signals.

Frequency Range: 100 kHz to 26.5 GHz (MS2830A-044) 100 kHz to 43 GHz (MS2830A-045)

\*: Cannot be installed simultaneously with MS2830A-008/108

#### **Signal Analyzer Function and Performance Improvement**

#### Analysis Bandwidth Extension to 31.25 MHz/Retrofit MS2830A-005/105

This option extends the analysis bandwidth to 31.25 MHz.

\*: Requires MS2830A-006/106

Not supported by MS2830A-045 (43 GHz Signal Analyzer) - use MS2830A-009

#### Analysis Bandwidth 10 MHz/Retrofit MS2830A-006/106

This option supports the VSA and digitize functions.

## Bandwidth Extension to 31.25 MHz for Millimeter-wave/Retrofit MS2830A-009/109

This option extends the MS2830A-045 (43 GHz Signal Analyzer) analysis bandwidth to 31.25 MHz.

\*: Requires MS2830A-006/106

Dedicated option for MS2830A-045 (43 GHz Signal Analyzer)

#### Analysis Bandwidth Extension to 62.5 MHz MS2830A-077

This option extends the analysis bandwidth to 62.5 MHz.

\*: Retrofit not supported.

Requires MS2830A-006 and MS2830A-005 (for MS2830A-044). Requires MS2830A-006 and MS2830A-009 (for MS2830A-045).

### Analysis Bandwidth Extension to 125 MHz MS2830A-078

This option extends the analysis bandwidth to 125 MHz.

\*: Retrofit not supported.

Requires MS2830A-006, MS2830A-005 and MS2830A-077 (for MS2830A-044). Requires MS2830A-006, MS2830A-009 and MS2830A-077 (for MS2830A-045).

Note: An image response is received when setting the bandwidth to more than 31.25 MHz. This can be used when not inputting a signal frequency outside the MS2830A analysis bandwidth (125 MHz max.). The Signal Analyzer MS2690A is recommended for other measurement purposes.

#### **Expansion Functions**

#### Phase Noise Measurement Function/Retrofit MS2830A-010/110

Phase Noise Measurements

Frequency Range: 10 MHz to main unit upper limit frequency Offset Frequency Range: 10 Hz to 10 MHz

#### 2ndary HDD/Retrofit MS2830A-011/111

This removable 2ndary HDD is installed in the HDD Option Slot of the MS2830A main unit to expand the user data storage space. It does not have the Windows OS installed. The MS2830A ships with it installed. Only one expansion HDD can be installed in the MS2830A. It is useful when taking the instrument for calibration but the security of saved user data, such as measurement results, must be protected.

#### 2ndary HDD Retrofit MS2830A-311

This removable 2ndary HDD is installed in the HDD Option Slot of the MS2830A main unit to expand the user data storage space. It does not have the Windows OS installed.

It is useful when taking the instrument for calibration but the security of saved user data, such as measurement results, must be protected.

#### Removable HDD, Win10/Retrofit MS2830A-014/114

This additional user-changeable hard disk contains the same Windows OS and programs as the factory installed system HDD.

It supports a Windows 10 install for one specific MS2830A and is for use during service repair and calibration.

#### Noise Figure Measurement Function/Retrofit MS2830A-017/117

Adds noise figure measurement function.

Noise Figure is measured with the measurement method of Y-factor method which uses a Noise Source.

#### BER Measurement Function/Retrofit MS2830A-026/126

Adds BER measurement function.

It supports Rx sensitivity tests by inputting the receiver-demodulated Data/Clock/Enable to the back of the MS2830A.

Input Bit Rate: 100 bps to 10 Mbps

\*: See each software catalog for more details.

Adding measurement software options to the signal analyzer assures that the modulation analysis and other functions will support all common current and future communications systems.

#### **Measurement Software**

Communications Systems	Model	Name	Addition to Main unit (✓: Can be installed, No: Cannot be installed)		Analysis Bandwidth Extension Option ( : Required,  : Function expansion, Space (no symbol): No specification)			
			MS2830A- 040/041/043	MS2830A- 044/045	MS2830A- 006	MS2830A- 005/009	MS2830A- 077	MS2830A- 078
	MX269020A	LTE Downlink Measurement Software	✓	✓	✓	✓		
LTE/LTE-Advanced (FDD)	MX269020A-001	LTE-Advanced FDD Downlink Measurement Software	✓	✓	✓	✓	<b>√</b> +*¹	<b>√</b> +*1
LIE/LIE-Advanced (FDD)	MX269021A	LTE Uplink Measurement Software	✓	✓	✓	✓		
	MX269021A-001	LTE-Advanced FDD Uplink Measurement Software	✓	✓	✓	✓	<b>√</b> +	<b>√</b> +
	MX269022A	LTE TDD Downlink Measurement Software	✓	✓	✓	✓		
LTE/LTE Advanced (TDD)	MX269022A-001	LTE-Advanced TDD Downlink Measurement Software	✓	✓	✓	✓	<b>√</b> +*1	<b>√</b> +*1
LTE/LTE-Advanced (TDD)	MX269023A	LTE TDD Uplink Measurement Software	✓	✓	✓	✓		
	MX269023A-001	LTE-Advanced TDD Uplink Measurement Software	✓	✓	✓	✓	<b>√</b> +	<b>√</b> +
W-CDMA/HSPA/	MX269011A	W-CDMA/HSPA Downlink Measurement Software	✓	✓	✓			
HSPA Evolution	MX269012A	W-CDMA/HSPA Uplink Measurement Software	✓	✓	✓			
W-CDMA/HSPA (Downlink)	MX269030A	W-CDMA BS Measurement Software	✓	✓	<b>✓</b>			
TD-SCDMA	MX269015A	TD-SCDMA Measurement Software	✓	✓	✓			
CD1442000	MX269024A	CDMA2000 Forward Link Measurement Software	✓	✓	✓			
CDMA2000	MX269024A-001	All Measure Function	✓	✓	✓			
1xEV-DO	MX269026A	EV-DO Forward Link Measurement Software	✓	✓	✓			
IXEV-DO	MX269026A-001	All Measure Function	✓	✓	✓			
GSM/EDGE	MX269013A	GSM/EDGE Measurement Software	✓	✓	✓			
EDGE Evolution	MX269013A-001	EDGE Evolution Measurement Software	✓	✓	✓			
World Digital Wireless Standards	MX269017A	Vector Modulation Analysis Software	✓	<b>√</b> *2	<b>✓</b>	<b>√</b> +	<b>√</b> +	<b>√</b> +
Analog Wireless	MX269018A	Analog Measurement Software	<b>√</b> *3	No				
WLAN IEEE 802.11a/b/g/n/j/p	MX269028A	WLAN (802.11) Measurement Software (Supports IEEE 802.11n/11a/11b/11g/11j/11p)	✓	✓	<b>✓</b>	✓		
WLAN IEEE 802.11ac (80 MHz)	MX269028A-001*4	802.11ac (80 MHz) Measurement Software	<i>' ' ' '</i>				✓	<b>✓</b>

\*1: The LTE-Advanced Carrier Aggregation measurement range varies as follows, depending on the Analysis Bandwidth Extension option configuration.

Main unit	Analysis Bandwidth Extension Option Configuration	Maximum Analysis Bandwidth (In-band carrier aggregation range)	Maximum Number of Bands	Maximum Number of Component Carriers
	MS2830A-078 installed	125 MHz	1	5
MS2830A	MS2830A-077 installed	31.25 MHz	3	5
	MS2830A-005/009 installed	31.25 MHz	3	5
	MS2690A-078 installed	125 MHz	3	5
MS2690A	MS2690A-077 installed	31.25 MHz	3	5
	Standard	31.25 MHz	3	5

<sup>\*2:</sup> By the measurement of the narrowband signal, add MS2830A-066. (Channel bandwidth: x kHz to 100 kHz) MS2830A-044/045 cannot be installed MS2830A-066.

<sup>\*4:</sup> Requires MX269028A. The IEEE 802.11ac measurement range varies as follows, depending on the Analysis Bandwidth Extension option configuration.

	Model			Bandwidth of IEEE 802.11ac signal				
Main unit	Measurement Software	Analysis Bandwidth Extension Option Configuration	20 MHz   40 MHz   80 MI		80 MHz	160 MHz	80 MHz + 80 MHz	
	MX269028A-001 (Only for MS2830A)	MS2830A-078 installed		✓	<b>√</b> *4-2			
MS2830A		MS2830A-077 installed	✓	✓				
	(Offig for Miszesson)	MS2830A-005/009 installed	✓	✓				
		MS2690A-078 installed	✓	✓	✓	✓	<b>√</b> *4-1	
MS2690A	MS2690A   MX269028A-002 (Only for MS2690A)	MS2690A-077 installed	✓	✓				
	(Offig for M32690A)	Standard	✓	✓				

<sup>\*4-1:</sup> Measurement required for each carrier signal (80-MHz bandwidth)

<sup>\*3:</sup> MS2830A-043 can implement only either MS2830A-020/021 or MS2830A-066.

By the system that MS2830A-066 is necessary, MS2830A-020/021 is not added to MS2830A-043.

<sup>\*4-2:</sup> Measurement is only possible when the carrier signal (80-MHz bandwidth) is input due to the effect of the image response.

<sup>•</sup> CDMA2000® is a registered trademark of the Telecommunications Industry Association (TIA-USA).

<sup>•</sup> The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and are used of such marks by Anritsu is under license.

The specification is the value after 30-minute warm-up at a constant ambient temperature.

The specifications are defined under the following conditions unless otherwise specified.

Auto sweep time select: Normal, Auto sweep type rules: Sweep only, Switching speed mode: Normal mode

The specifications of the Signal Analyzer function are values at the center frequency if not specified. Nominal values indicate expected performance or describe product performance. That is not covered by the product warranty. Specifications above 26.5 GHz: MS2830A-045 only.

### Signal Analyzer/Spectrum Analyzer

#### Frequency

Frequency Range	9 kHz to 26.5 GHz [MS2830	)A-044	l], 9 kHz to	o 43 GHz [M:	S2830A-045]	
	Frequency range		Band	Mixer harr	nonics order (N)	
	9 kHz to 4 GHz		0		1	
	3.5 GHz to 4.4 GHz		1		1/2	
	4.3 GHz to 6 GHz		1		1	
	3.9 GHz to 8 GHz		3		1	
Frequency Bands	7.9 GHz to 10.575 GH	Ηz	4		1	
	10.475 GHz to 12.2 GHz		5		2	
	12.1 GHz to 18.4 GHz		6		2	
	18.3 GHz to 26.6 GHz		7		4	
	26.5 GHz to 41.9 GHz		8		4	
	41.8 GHz to 43 GHz		9		8	
Frequency Setting Range	-100 MHz to 26.6 GHz [MS -100 MHz to 43.1 GHz [MS Setting resolution: 1 Hz		-			
	MS2830A-044	1S2830A-0	)45			
Pre-selector Range	4 GHz to 26.5 GHz	4 GHz to 26.5 GHz 4 G		GHz (F	requency band n	node: Normal)
	3.5 GHz to 26.5 GHz	3.5 G	Hz to 43 (	GHz (F	requency band n	node: Spurious)
Internal Reference Oscillator	Aging rate: $\pm 1 \times 10^{-7}$ /yea Temperature stability: $\pm 2$	:5 × 10 ir	0 <sup>–7</sup> (2 minu	utes after po		-8 (5 minutes after power-on)
	With MS2830A-001 23°C, Referenced to frequency at 24-hour after power-on Start-up characteristics: ±1 × 10 <sup>-9</sup> (7 minutes after power-on) Aging rate: ±1 × 10 <sup>-10</sup> /month Temperature stability: ±1 × 10 <sup>-9</sup> (5°C to 45°C)					
SSB Phase Noise	18°C to 28°C, 500 MHz, Spectrum Analyzer mode, Switching speed mode: Normal –115 dBc/Hz (100 kHz offset) –133 dBc/Hz (1 MHz offset)					

### Amplitude

Amplitude					
Lavel Massurament Dance	Without MS2830A-008/068, or Preamp: Off DANL to +30 dBm				
Level Measurement Range	With MS2830A-008/068, Preamp: On DANL to +10 dBm				
Maximum Input Level	Without MS2830A-008/068, or Preamp: Off Average total power: +30 dBm (Input attenuator: ≥10 dB) DC voltage: ±0 Vdc				
iviaximum input Level	With MS2830A-008/068, Preamp: On Average total power: +10 dBm (Input attenuator: 0 dB) DC voltage: ±0 Vdc				
	With MS2830A-044 0 to 60 dB, 2 dB steps				
Input Attenuator Range	With MS2830A-045 0 to 60 dB, 10 dB steps (ATT mode: Mechanical ATT only, or E-ATT combined mode, Stop frequency: ≥6 GHz) 0 to 10 dB, 10 dB steps/10 to 40 dB, 2 dB steps/40 to 60 dB, 10 dB steps (Attenuator mode: E-ATT combined mode, Stop frequency: <6 GHz)				
	18°C to 28°C, Referenced to 10 dB, ATT mode: Mechanical ATT only				
Input Attenuator Switching Uncertainty	Without MS2830A-008/068, or Preamp: Off $\pm 0.2$ dB (10 to 60 dB) (300 kHz $\leq$ f $<$ 4 GHz, Frequency band mode: Normal) (300 kHz $\leq$ f $<$ 3.5 GHz, Frequency band mode: Spurious) $\pm 0.75$ dB (10 to 60 dB) (4 GHz $\leq$ f $\leq$ 13.8 GHz, Frequency band mode: Normal) (3.5 GHz $\leq$ f $\leq$ 13.8 GHz, Frequency band mode: Spurious) $\pm 0.8$ dB (10 to 60 dB) (13.8 GHz $<$ f $\leq$ 26.5 GHz)				
	$\pm 1.0 \text{ dB} (10 \text{ to } 60 \text{ dB})$ (26.5 GHz < f $\leq$ 40 GHz) $\pm 1.0 \text{ dB} (10 \text{ to } 60 \text{ dB})$ (typ., 40 GHz < f $\leq$ 43 GHz)				

## Signal Analyzer/Spectrum Analyzer (continued)

## Reference Level

Setting Range	Log scale: –120 to +50 dBm, or Equivalent level (Signal Analyzer function)  –130 to +50 dBm, or Equivalent level (Spectrum Analyzer function)  Linear scale: 22.4 µV to 70.7 V, or Equivalent level (Signal Analyzer function)  70.7 nV to 70.7 V, or Equivalent level (Spectrum Analyzer function)  Setting resolution: 0.01 dB, or Equivalent level	
Scale Units	Log scale: dBm, dBμV, dBmV, dBμV (emf), dBμV/m, V, W Linear scale: V	
Linearity Error	Excluding the noise floor effect, Input level: ≤-10 dB (f: <30 MHz) ±0.07 dB (Mixer input level: ≤-20 dBm) ±0.10 dB (Mixer input level: ≤-10 dBm)	
RF Frequency Characteristics	18°C to 28°C, After Cal, Input attenuator: 10 dB	
1 dB Gain Compression	Without MS2830A-008/068, or Preamp: Off, At mixer input level ≥+3 dBm (300 MHz ≤ f ≤ 4 GHz) ≥-1 dBm (4 GHz < f ≤ 13.5 GHz) ≥-1 dBm (13.5 GHz < f ≤ 26.5 GHz) ≥-1 dBm (nom., 26.5 GHz < f ≤ 40 GHz) With MS2830A-068, Preamp: On, At preamp input level ≥-15 dBm (300 MHz ≤ f ≤ 4 GHz) ≥-21 dBm (4 GHz < f ≤ 13.5 GHz) ≥-21 dBm (13.5 GHz < f ≤ 26.5 GHz) ≥-21 dBm (nom., 26.5 GHz < f ≤ 40 GHz)	

## Signal Analyzer/Spectrum Analyzer (continued)

## **Spurious Responses**

	Without MS2830A-008/068, without MS2830A-067		
	Mixer input level: –30 dE		
	Harmonic distortion	SHI	
	≤–60 dBc	≥+30 dBm	(10 MHz ≤ f ≤ 300 MHz)
	≤–65 dBc	≥+35 dBm	(300 MHz < f ≤ 1 GHz)
	≤–65 dBc	≥+35 dBm	(1 GHz < f ≤ 2 GHz, Frequency band mode: Normal)
	≤–65 dBc	≥+35 dBm	(1 GHz < f < 1.75 GHz, Frequency band mode: Spurious)
	Mixer input level: -10 de		
	Harmonic distortion	SHI	
	≤–70 dBc	≥+60 dBm	(2 GHz < f ≤ 3 GHz, Frequency band mode: Normal)
	≤-70 dBc	≥+60 dBm	(1.75 GHz ≤ f ≤ 3 GHz, Frequency band mode: Spurious)
	≤–90 dBc	≥+80 dBm	(3 GHz < f ≤ 13.25 GHz)
	≤-90 dBc	≥+80 dBm	(13.25 GHz < f ≤ 21.5 GHz, nom.)
	With MS2830A-068, Pre Mixer input level: –30 dB		MS2830A-067, Microwave Preselector Bypass: Off
	Harmonic distortion	SHI	
	≤–60 dBc	≥+30 dBm	(10 MHz ≤ f ≤ 300 MHz)
Second Harmonic Distortion	≤-60 dBc ≤-65 dBc	≥+35 dBm	(300 MHz < f ≤ 1 GHz)
Second Harmonic Distortion	≤-65 dBc	≥+35 dBm	(1 GHz < f ≤ 2 GHz, Frequency band mode: Normal)
	≤-65 dBc	≥+35 dBm	(1 GHz < f < 1.75 GHz, frequency band mode: Spurious)
	Mixer input level: –10 dE		(1 driz < 1 < 1.73 driz, frequency band fridge. Spurious)
		SHI	
	Harmonic distortion ≤–70 dBc	≥+60 dBm	(2 CHz x f x 2 CHz Fraguengy hand mode: Normal)
	1		(2 GHz < f ≤ 3 GHz, Frequency band mode: Normal)
	≤-70 dBc	≥+60 dBm	(1.75 GHz ≤ f ≤ 3 GHz, Frequency band mode: Spurious)
	≤-70 dBc	≥+60 dBm	(2 GHz < f ≤ 3 GHz, Frequency band mode: Spurious)
	≤-70 dBc	≥+60 dBm	(3 GHz < f ≤ 13.25 GHz)
	≤-70 dBc	≥+60 dBm	(13.25 GHz < f ≤ 21.5 GHz, nom.)
			MS2830A-067, Microwave Preselector Bypass: Off
	Preamp input level: –45		
	Harmonic distortion	SHI	
	≤-50 dBc	≥+5 dBm	(10 MHz ≤ f ≤ 300 MHz)
	≤–55 dBc	≥+10 dBm	(300 MHz < f ≤ 2 GHz)
	≤–45 dBc	≥0 dBm	(2 GHz < f ≤ 13.25 GHz)
	≤–40 dBc	≥–5 dBm	(13.25 GHz < f < 21.5 GHz, nom.)
	SHI: Second harmonic in	ntercept	
	Frequency: ≥1 MHz, Inp	ut attenuator: 0 dE	3, $50\Omega$ terminated
	With MS2830A-077/078	, except bandwidt	h setting: >31.25 GHz
	≤-100 dBm (up to 1 G	Hz)	
Residual Responses	≤-90 dBm (typ., 1 GHz	z to 6 GHz)	
	≤-90 dBm (nom., 6 GF	Hz to 13.5 GHz)	
	≤-90 dBm (nom., 13.2	5 GHz to 26.5 GHz	·)
	≤-80 dBm (nom., 26.5		

## **Spectrum Analyzer**

## Frequency

Coop	Range: 0 Hz, 300 Hz to 26.5 GHz [MS2830A-044]
	0 Hz, 300 Hz to 43 GHz [MS2830A-045]
Span	Resolution: 2 Hz
	Accuracy: ±0.2% (Sweep points: 10001)
	± (Display frequency × Frequency reference accuracy + Span frequency × Span accuracy + RBW × 0.05 + 2 × N + Span frequency/
Frequency Readout Accuracy	(Sweep points – 1)) Hz
	N: Mixer harmonic order
	Setting range: 1 Hz to 3 MHz (1-3 sequence), 500 Hz, 50 kHz, 2 MHz, 5 MHz, 10 MHz, 20 MHz, 31.25 MHz
	1 Hz to 10 Hz: Can not be set when span: 0 Hz
Resolution Bandwidth (RBW)	31.25 MHz: Can be set when span: 0 Hz only
	20 MHz, 31.25 MHz: Can be set when with MS2830A-005 or MS2830A-009
	Selectivity (-60 dB/-3 dB): 4.5: 1 (nom., 1 Hz to 10 MHz)
Resolution Bandwidth	With MS2830A-016
(CISPR RBW)	Setting range: 200 Hz (6 dB), 9 kHz (6 dB), 120 kHz (6 dB), 1 MHz (Impulse)
Video Boodwidth (VD)A()	1 Hz to 3 kHz (1-3 sequence), 5 kHz, 10 kHz to 10 MHz (1-3 sequence), Off
Video Bandwidth (VBW)	VBW mode: Video average, Power average

## Amplitude

		18°C to 28°C, Detector: Sample, VBW: 1 Hz (Video average), Input attenuator: 0 dB	
-144 dBm/Hz (24 GHz < f ≤ 40 GHz) [MS2830A-045] -140 dBm/Hz (40 GHz < f ≤ 43 GHz) [MS2830A-045] Without MS2830A-067, with MS2830A-068, Preamp: Off, Frequency band mode: Normal -120 dBm/Hz (9 kHz ≤ f < 100 kHz, nom.) -134 dBm/Hz (100 kHz < f < 1 MHz, nom.) -134 dBm/Hz (100 kHz < f < 1 MHz, nom.) -144 dBm/Hz (1 MHz) -144 dBm/Hz (1 MHz) -150 dBm/Hz (10 MHz ≤ f < 30 MHz, nom.) -153 dBm/Hz (100 kHz < f < 30 MHz, nom.) -153 dBm/Hz (100 kHz < f < 30 MHz, nom.) -153 dBm/Hz (100 kHz < f < 30 HHz, nom.) -153 dBm/Hz (10 MHz ≤ f < 1 GHz) -153 dBm/Hz (2.4 GHz ≤ f ≤ 3.5 GHz) -144 dBm/Hz (2.5 GHz < f ≤ 4 GHz) -144 dBm/Hz (2.5 GHz < f ≤ 6 GHz) -144 dBm/Hz (6 GHz < f ≤ 6 GHz) -144 dBm/Hz (18.3 GHz < f ≤ 13.5 GHz) -141 dBm/Hz (3.4 GHz < f ≤ 3 GHz) -141 dBm/Hz (3.5 GHz < f ≤ 4 GHz) -141 dBm/Hz (3.6 GHz < f ≤ 4 GHz) -141 dBm/Hz (3.6 GHz < f ≤ 4 GHz) -141 dBm/Hz (18.3 GHz < f ≤ 2.5 GHz) -141 dBm/Hz (1.3 GHz < f ≤ 2.5 GHz) -141 dBm/Hz (1.3 GHz < f ≤ 3 GHz) [MS2830A-045] -135 dBm/Hz (3 dHz < f ≤ 4 GHz) [MS2830A-045] -132 dBm/Hz (3 GHz < f ≤ 4 GHz) [MS2830A-045] -132 dBm/Hz (10 kHz, nom.) -156 dBm/Hz (10 kHz, nom.) -156 dBm/Hz (10 kHz ≤ f < 2 GHz) -155 dBm/Hz (3 GHz < f ≤ 4 GHz) -155 dBm/Hz (10 kHz < f < 6 GHz) -155 dBm/Hz (10 kHz < f < 6 GHz) -155 dBm/Hz (10 kHz < f < 6 GHz) -155 dBm/Hz (10 kHz < f < 6 GHz) -155 dBm/Hz (10 kHz < f < 6 GHz) -156 dBm/Hz (10 kHz < f < 6 GHz) -156 dBm/Hz (10 kHz < f < 6 GHz) -156 dBm/Hz (10 kHz < f < 6 GHz) -156 dBm/Hz (10 kHz < f < 6 GHz) -156 dBm/Hz (10 kHz < f < 6 GHz) -156 dBm/Hz (10 kHz < f < 6 GHz) -156 dBm/Hz (10 KHz < f < 6 GHz) -156 dBm/Hz (10 KHz < f < 6 GHz) -156 dBm/Hz (10 KHz < f < 6 GHz) -156 dBm/Hz (10 KHz < f < 6 GHz) -156 dBm/Hz (10 KHz < f < 6 GHz) -156 dBm/Hz (10 KHz < f < 4 GHz) -156 dBm/Hz (10 KHz < f < 4 GHz) -156 dBm/Hz (10 KHz < f < 4 GHz) -156 dBm/Hz (10 KHz < f < 4 GHz) -156 dBm/Hz (10 KHz < f < 4 GHz) -156 dBm/Hz (10 KHz < f < 4 GHz) -156 dBm/Hz (10 KHz < f < 4 GHz) -157 dBm/Hz (10 KHz < f < 4 GHz) -158 dBm/Hz (10 KHz < f < 4 GHz) -159 dBm/Hz (10 KHz < f < 4 GHz) -150 dBm/Hz (	Ampiitude	Without MS2830A-067/068, Frequency band mode: Normal $-120 \text{ dBm/Hz}$ (9 kHz $\leq$ f $<$ 100 kHz, nom.) $-134 \text{ dBm/Hz}$ (100 kHz) $-134 \text{ dBm/Hz}$ (100 kHz $<$ f $<$ 1 MHz, nom.) $-144 \text{ dBm/Hz}$ (1 MHz) $-144 \text{ dBm/Hz}$ (1 MHz $<$ f $<$ 10 MHz, nom.) $-150 \text{ dBm/Hz}$ (1 MHz $\leq$ f $<$ 30 MHz, nom.) $-150 \text{ dBm/Hz}$ (30 MHz $\leq$ f $<$ 10 GHz) $-150 \text{ dBm/Hz}$ (30 MHz $\leq$ f $<$ 2.4 GHz) $-150 \text{ dBm/Hz}$ (2.4 GHz $\leq$ f $<$ 2.5 GHz) $-147 \text{ dBm/Hz}$ (2.4 GHz $\leq$ f $\leq$ 4 GHz) $-144 \text{ dBm/Hz}$ (3.5 GHz $<$ f $\leq$ 4 GHz) $-144 \text{ dBm/Hz}$ (3.5 GHz $<$ f $\leq$ 6 GHz) $-144 \text{ dBm/Hz}$ (6 GHz $<$ f $\leq$ 13.5 GHz) $-149 \text{ dBm/Hz}$ (13.5 GHz $<$ f $\leq$ 18.3 GHz) $-140 \text{ dBm/Hz}$ (13.5 GHz $<$ f $\leq$ 18.3 GHz) $-140 \text{ dBm/Hz}$ (13.5 GHz $<$ f $\leq$ 18.3 GHz) $-140 \text{ dBm/Hz}$ (13.5 GHz $<$ f $\leq$ 18.3 GHz) $-140 \text{ dBm/Hz}$ (13.5 GHz $<$ f $\leq$ 26.5 GHz)	
-134 dBm/Hz (100 kHz) -134 dBm/Hz (100 kHz) -134 dBm/Hz (10 kHz < f < 1 MHz, nom.) -144 dBm/Hz (1 MHz) -144 dBm/Hz (1 MHz) -144 dBm/Hz (1 MHz) -150 dBm/Hz (10 MHz = f < 3 0 MHz, nom.) -150 dBm/Hz (10 MHz = f < 1 GHz) -150 dBm/Hz (10 MHz = f < 2 4 GHz) -150 dBm/Hz (10 MHz = f < 2 4 GHz) -147 dBm/Hz (2.4 GHz = f ≤ 3.5 GHz) -144 dBm/Hz (3.5 GHz < f ≤ 6 GHz) -144 dBm/Hz (3.5 GHz < f ≤ 6 GHz) -144 dBm/Hz (4 GHz < f ≤ 6 GHz) -145 dBm/Hz (3.5 GHz < f ≤ 18.3 GHz) -141 dBm/Hz (18.3 GHz < f ≤ 15.5 GHz) -141 dBm/Hz (18.3 GHz < f ≤ 2.5 GHz) -141 dBm/Hz (18.3 GHz < f ≤ 2.5 GHz) -141 dBm/Hz (2.6.5 GHz < f ≤ 3 4 GHz) [MS2830A-045] -135 dBm/Hz (3 GHz < f ≤ 4 3 GHz) [MS2830A-045] -132 dBm/Hz (4 GHz < f ≤ 4 GHz) -134 dBm/Hz (100 kHz, nom.) -156 dBm/Hz (3 0 MHz ≤ f < 1 GHz) -151 dBm/Hz (3 0 MHz ≤ f < 3 GHz) -152 dBm/Hz (3 0 MHz ≤ f < 3 GHz) -153 dBm/Hz (3 0 MHz ≤ f < 3 GHz) -154 dBm/Hz (3 0 MHz ≤ f < 3 GHz) -155 dBm/Hz (3.5 GHz < f ≤ 3.5 GHz) -159 dBm/Hz (3 GHz < f ≤ 6 GHz) -159 dBm/Hz (3 GHz < f ≤ 6 GHz) -159 dBm/Hz (3 GHz < f ≤ 6 GHz) -159 dBm/Hz (6 GHz < f ≤ 6 GHz) -159 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 4 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz < f ≤ 6 GHz) -150 dBm/Hz (6 GHz <		$-144$ dBm/Hz (34 GHz $<$ f $\le$ 40 GHz) [MS2830A-045] $-140$ dBm/Hz (40 GHz $<$ f $\le$ 43 GHz) [MS2830A-045] Without MS2830A-067, with MS2830A-068, Preamp: Off, Frequency band mode: Normal	
With MS2830A-068, Preamp: On, Frequency band mode: Normal $-147 \text{ dBm/Hz} (100 \text{ kHz}, \text{ nom.})$ $-156 \text{ dBm/Hz} (1 \text{ MHz})$ $-163 \text{ dBm/Hz} (30 \text{ MHz} \le f < 1 \text{ GHz})$ $-161 \text{ dBm/Hz} (30 \text{ MHz} \le f < 2 \text{ GHz})$ $-159 \text{ dBm/Hz} (2 \text{ GHz} \le f \le 3.5 \text{ GHz})$ $-159 \text{ dBm/Hz} (2 \text{ GHz} \le f \le 3.5 \text{ GHz})$ $-155 \text{ dBm/Hz} (3.5 \text{ GHz} < f \le 4 \text{ GHz})$ $-155 \text{ dBm/Hz} (4 \text{ GHz} < f \le 6 \text{ GHz})$ $-160 \text{ dBm/Hz} (6 \text{ GHz} < f \le 13.5 \text{ GHz})$ $-158 \text{ dBm/Hz} (13.5 \text{ GHz} < f \le 18.3 \text{ GHz})$ $-156 \text{ dBm/Hz} (18.3 \text{ GHz} < f \le 26.5 \text{ GHz})$ $-156 \text{ dBm/Hz} (26.5 \text{ GHz} < f \le 34 \text{ GHz}) [\text{MS2830A-045}]$ $-150 \text{ dBm/Hz} (34 \text{ GHz} < f \le 40 \text{ GHz}) [\text{MS2830A-045}]$ $-147 \text{ dBm/Hz} (40 \text{ GHz} < f \le 43 \text{ GHz}) [\text{MS2830A-045}]$	Displayed Average Noise Level (DANL)	-134 dBm/Hz (100 kHz) -134 dBm/Hz (100 kHz < f < 1 MHz, nom.) -144 dBm/Hz (1 MHz) -144 dBm/Hz (1 MHz < f < 10 MHz, nom.) -150 dBm/Hz (10 MHz ≤ f < 30 MHz, nom.) -153 dBm/Hz (30 MHz ≤ f < 1 GHz) -150 dBm/Hz (10 Hz ≤ f < 2.4 GHz) -150 dBm/Hz (2.4 GHz ≤ f < 2.4 GHz) -147 dBm/Hz (2.4 GHz ≤ f ≤ 3.5 GHz) -144 dBm/Hz (3.5 GHz < f ≤ 4 GHz) -144 dBm/Hz (4 GHz < f ≤ 6 GHz) -147 dBm/Hz (6 GHz < f ≤ 18.3 GHz) -145 dBm/Hz (13.5 GHz < f ≤ 18.3 GHz) -141 dBm/Hz (13.5 GHz < f ≤ 4 GHz) -141 dBm/Hz (26.5 GHz < f ≤ 34 GHz) -141 dBm/Hz (26.5 GHz < f ≤ 34 GHz) [MS2830A-045] -135 dBm/Hz (34 GHz < f ≤ 40 GHz) [MS2830A-045]	
With MS2830A-067: See Microwave Preselector Bypass (Displayed average noise level)		Without MS2830A-067, or Microwave Preselector Bypass: Off With MS2830A-068, Preamp: On, Frequency band mode: Normal $-147 \text{ dBm/Hz (100 \text{ kHz, nom.)}}$ $-156 \text{ dBm/Hz (1 \text{ MHz)}}$ $-163 \text{ dBm/Hz (30 \text{ MHz} \leq f < 1 \text{ GHz})$ $-161 \text{ dBm/Hz (1 \text{ GHz} \leq f < 2 \text{ GHz})$ $-159 \text{ dBm/Hz (2 \text{ GHz} \leq f \leq 3.5 \text{ GHz})$ $-155 \text{ dBm/Hz (3.5 \text{ GHz} < f \leq 4 \text{ GHz})$ $-155 \text{ dBm/Hz (4 \text{ GHz} < f \leq 6 \text{ GHz})$ $-160 \text{ dBm/Hz (6 \text{ GHz} < f \leq 6 \text{ GHz})$ $-158 \text{ dBm/Hz (13.5 \text{ GHz} < f \leq 18.3 \text{ GHz}) -156 \text{ dBm/Hz (18.3 \text{ GHz} < f \leq 26.5 \text{ GHz}) -156 \text{ dBm/Hz (26.5 \text{ GHz} < f \leq 34 \text{ GHz}) \text{ [MS2830A-045]} -150 \text{ dBm/Hz (34 \text{ GHz} < f \leq 40 \text{ GHz}) \text{ [MS2830A-045]}$	
		With MS2830A-067: See Microwave Preselector Bypass (Displayed average noise level)	

#### Spectrum Analyzer (continued)

Amplitude (continued)

```
18°C to 28°C, After Cal, Auto sweep time select: Normal, 30 Hz ≤ RBW ≤ 1 MHz, Detector: Positive, CW,
                                     Excluding the noise floor effect, and FFT runtime (Display: On)
                                     Without MS2830A-068, or Preamp: Off
                                     Input attenuator: ≥10 dB, Input level: ≤-10 dBm (f: <30 MHz), Mixer input level: ≤-10 dBm (f: ≥30 MHz)
                                      \pm 0.5 dB (300 kHz \leq f < 4 GHz, Frequency band mode: Normal)
                                                (300 \text{ kHz} \le f < 3.5 \text{ GHz}, \text{ Frequency band mode: Spurious})
                                      \pm 1.8 dB (4 GHz \leq f \leq 6 GHz, Frequency band mode: Normal)
                                                (3.5 \text{ GHz} \le f \le 4 \text{ GHz}, \text{ Frequency band mode: Spurious})
Total Absolute Amplitude
                                      \pm 1.8 dB (6 GHz < f \leq 13.8 GHz, Frequency band mode: Normal)
Accuracy*
                                                (4 GHz < f ≤ 13.8 GHz, Frequency band mode: Spurious)
*: Total absolute amplitude
                                       \pm 3.0 \text{ dB} (13.8 \text{ GHz} < f \le 26.5 \text{ GHz})
  accuracy is found from root
                                      \pm 3.0 \text{ dB} (26.5 \text{ GHz} < f \le 40 \text{ GHz})
  sum of squares (RSS) of RF
                                      \pm 3.5 dB (nom., 40 GHz < f \leq 43 GHz)
  frequency characteristics,
                                     With MS2830A-068, Preamp: On
  Linearity error, and Input
                                     Input attenuator: 10 dB, Preamp input level: ≤-30 dBm
  attenuator switching
                                      \pm 1.0 dB (300 kHz \leq f < 4 GHz, Frequency band mode: Normal)
  uncertainty.
                                                (300 kHz ≤ f < 3.5 GHz, Frequency band mode: Spurious)
                                      \pm 1.8 dB (4 GHz \leq f \leq 6 GHz, Frequency band mode: Normal)
                                                (3.5 GHz \leq f \leq 4 GHz, Frequency band mode: Spurious)
                                       \pm 2.0 dB (6 GHz < f \leq 13.8 GHz, Frequency band mode: Normal)
                                                (4 GHz < f ≤ 13.8 GHz, Frequency band mode: Spurious)
                                       \pm 3.0 \text{ dB} (13.8 \text{ GHz} < f \le 26.5 \text{ GHz})
                                      \pm 4.0 \text{ dB} (26.5 \text{ GHz} < f \le 40 \text{ GHz})
                                      \pm 4.0 dB (nom., 40 GHz < f \le 43 GHz)
```

#### **Spurious Responses**

	18°C to 28°C, ≥300 kHz separation
2-tone 3rd-order Intermodulation Distortion	18°C to 28°C, ≥300 kHz separation  Without MS2830A-068, or Preamp: Off, Mixer input level: −15 dBm (1 wave)  ≤−54 dBc, TOI = +12 dBm (30 MHz ≤ f < 300 MHz)  ≤−60 dBc, TOI = +15 dBm (300 MHz ≤ f < 3.5 GHz)  ≤−58 dBc, TOI = +14 dBm (3.5 GHz ≤ f ≤ 6 GHz, Frequency band mode: Normal)  ≤−56 dBc, TOI = +13 dBm (6 GHz < f ≤ 13.5 GHz)  ≤−56 dBc, TOI = +13 dBm (13.5 GHz < f ≤ 26.5 GHz)  ≤−56 dBc, TOI = +13 dBm (nom., 26.5 GHz < f ≤ 40 GHz)  With MS2830A-068, Preamp: On  Without MS2830A-067, Microwave Preselector Bypass: Off, Preamp input level: −45 dBm (1 wave)  ≤−73 dBc, TOI = −8.5 dBm (30 MHz ≤ f < 300 MHz)  ≤−78 dBc, TOI = −6 dBm (300 MHz ≤ f ≤ 700 MHz)  ≤−81 dBc, TOI = −4.5 dBm (700 MHz < f < 4 GHz, Frequency band mode: Normal)  (700 MHz < f < 3.5 GHz, Frequency band mode: Spurious)  ≤−70 dBc, TOI = −10 dBm (6 GHz < f ≤ 13.5 GHz, Frequency band mode: Normal)  (4 GHz < f ≤ 13.5 GHz, Frequency band mode: Normal)  (4 GHz < f ≤ 13.5 GHz, Frequency band mode: Spurious)  ≤−70 dBc, TOI = −10 dBm (13.5 GHz < f ≤ 26.5 GHz)
	$\leq$ -70 dBc, TOI = -10 dBm (nom., 26.5 GHz < f \le 40 GHz)
	TOI: Third-order intermodulation distortion
	ATT mode: Mechanical ATT only, Frequency band mode: Normal
Image Responses	Without MS2830A-067 $\leq$ -70 dBc (10 MHz $\leq$ f < 4 GHz) $\leq$ -55 dBc (4 GHz $\leq$ f $\leq$ 6 GHz) $\leq$ -70 dBc (6 GHz < f $\leq$ 13.5 GHz) $\leq$ -70 dBc (13.5 GHz < f $\leq$ 26.5 GHz) With MS2830A-067: See Microwave Preselector Bypass (Image responses)

## Sweep

Sweep Mode	Continuous, Single
Sweep Time	Setting range: 1 ms to 1000 s (Span: ≥300 Hz)
	1 μs to 1000 s (Span: 0 Hz)

## **Spectrum Analyzer** (continued)

## **Waveform Display**

Detector	Positive & Negative, Positive peak, Sample, Negative peak, RMS		
CISPR Detector	Quasi-Peak, CISPR-AVG, RMS-AVG (with MS2830A-016)		
	SPAN		
	> 30 GHz	5001 to 30001	
	500 MHz < SPAN ≤ 30 GHz	1001 to 30001	
	100 MHz < SPAN ≤ 500 MHz	101 to 30001	
Sweep (Trace) Point	300 Hz ≤ SPAN ≤ 100 MHz and Sweep Time > 10 s	101 to 30001	
	300 Hz ≤ SPAN ≤ 100 MHz and Sweep Time ≤ 10 s	11 to 30001	
	SPAN = 0 Hz and Sweep Time > 10 s	101 to 30001	
	SPAN = 0 Hz and Sweep Time ≤ 10 s	11 to 30001	
	Setting resolution: 1 point		
Scale	Log scale: 10 div/12 div, 0.1 to 20 dB/div (1-2-5 sequen Linear scale: 10 div, 1 to 10%/div (1-2-5 sequence)	ice)	
Trigger	Free run (Trigger off), Video, Wide IF video, External, Frame		
Gate	Off, Wide IF video, External, Frame		

### **Measure Function**

Adjust Channel Power (ACP)  Reference: Span total, Carrier total, Both sides of carriers, Carrier select Adjust channel specifications: 3 channels × 2 (Normal mode), 8 channels × 2 (Advanced mode)		
Burst Avera	ge Power	Displayed average power of specified interval at time domain
Channel Po	wer	Measurement of absolute values: dBm, dBm/Hz
Occupied B	andwidth (OBW)	N% of power, X-dB down
Spectrum Emission Mask (SEM)		Decision to Pass/Fail at Peak/Margin measurement
Spurious Emission		Decision to Pass/Fail at Worst/Peaks measurement
Frequency Counter	Accuracy	Span: ≤1 MHz, RBW: 1 kHz, S/N: ≥50 dB, Gate time: ≥100 ms ± (Marker frequency × Frequency reference accuracy + (0.1 × N / Gate time [s] Hz) N: Mixer harmonic order
	Gate Time Setting	100 μs to 1 s
2-tone 3rd-order Intermodulation Distortion		Measures IM3 and TOI from two-tone signal

**Signal Analyzer**Display waveform data, such as Spectrum, Power vs. Time captured at specific time

Trace Mode	Spectrum, Power vs. Time, Frequency vs. Time, Phase vs. Time, CCDF, Spectrogram, No trace
Analysis Bandwidth	Sets capture analysis bandwidth from center frequency  1 kHz to 10 MHz (1-2.5-5 sequence) (with MS2830A-006)  1 kHz to 25 MHz (1-2.5-5 sequence), 31.25 MHz (with MS2830A-005, or with MS2830A-009)  1 kHz to 25 MHz (1-2.5-5 sequence), 31.25 MHz, 50 MHz, 62.5 MHz (with MS2830A-077)  1 kHz to 25 MHz (1-2.5-5 sequence), 31.25 MHz, 50 MHz, 62.5 MHz, 100 MHz, 125 MHz (with MS2830A-078)  *MS2830A-005 is not available when MS2830A-045 is installed.
Sampling Rate	Auto setting by conditions of analysis bandwidth 2 kHz to 20 MHz (1-2-5 sequence) (with MS2830A-006) 2 kHz to 50 MHz (1-2-5 sequence) (with MS2830A-005, or with MS2830A-009) 2 kHz to 100 MHz (1-2-5 sequence) (with MS2830A-077) 2 kHz to 200 MHz (1-2-5 sequence) (with MS2830A-078)
	Without MS2830A-077/078, or ≤31.25 MHz bandwidth  Setting capture time length  Minimum capture time length: 2 μs to 50 ms (Determined according to analysis bandwidth)  Maximum capture time length: 2 s to 2000 s (Determined according to analysis bandwidth)  Setting mode: Auto, Manual  With MS2830A-077, >31.25 MHz bandwidth
Capture Time	Setting capture time length Minimum capture time length: 1 μs Maximum capture time length: 500 ms Setting mode: Auto, Manual
	With MS2830A-078, >31.25 MHz bandwidth Setting capture time length Minimum capture time length: 500 ns to 1 µs (Determined according to analysis bandwidth) Maximum capture time length: 500 ms Setting mode: Auto, Manual
Trigger	Free run (Trigger off), Video, Wide IF video, Frame, External
ADC Resolution	Without MS2830A-077/078, or ≤31.25 MHz bandwidth 16 bits

## Signal Analyzer (continued)

## **Spectrum Displayed Function**

Function Outline	Displayed spectrum of any time length and frequency range within captured waveform data
Analysis Time Length	Analysis start time: Sets analysis start time point from waveform data header Analysis time length: Sets analysis time length Setting mode: Auto, Manual
Frequency	Can be set center frequency and span at frequency range in waveform data
Frequency Setting	Without MS2830A-077/078, or ≤31.25 MHz bandwidth  0 MHz to 26.5 GHz [MS2830A-044]  0 MHz to 43 GHz [MS2830A-045]  With MS2830A-077/078, without MS2830A-067, >31.25 MHz bandwidth  300 MHz to 6 GHz [MS2830A-044]  300 MHz to 6 GHz [MS2830A-045]  With MS2830A-077/078, MS2830A-067, >31.25 MHz bandwidth  300 MHz to 26.5 GHz [MS2830A-044]  300 MHz to 26.5 GHz [MS2830A-044]  300 MHz to 43 GHz [MS2830A-045]
Resolution Bandwidth (RBW)	Without MS2830A-077/078, or ≤31.25 MHz bandwidth  Setting range: 1 Hz to 1 MHz (1-3 sequence)  Selectivity (-60 dB/-3 dB): 4.5: 1 (nom.)  With MS2830A-077, >31.25 MHz bandwidth  Setting range: 3 kHz to 3 MHz (1-3 sequence)  Selectivity (-60 dB/-3 dB): 4.5: 1 (nom.)  With MS2830A-078, >31.25 MHz bandwidth  Setting range: 3 kHz to 10 MHz (1-3 sequence)  Selectivity (-60 dB/-3 dB): 4.5: 1 (nom.)
Total Absolute Amplitude Accuracy*  *: Total absolute amplitude accuracy is found from root sum of squares (RSS) of RF frequency characteristics, Linearity error, and Input attenuator switching uncertainty.	18°C to 28°C, After Cal, Input attenuator: ≥10 dB, RBW: Auto, Time detection: Average, Marker result: Integration or Peak (Accuracy), Center frequency, CW, Excluding the noise floor effect Without MS2830A-068, or Preamp: Off Input attenuator: ≥10 dB, Input level: ≤-10 dBm (f: <30 MHz), Mixer input level: ≤-10 dBm (f: ≥30 MHz) ±0.5 dB (300 kHz ≤ f < 4 GHz, Frequency band mode: Normal) (300 kHz ≤ f < 3.5 GHz, Frequency band mode: Spurious) ±1.8 dB (4 GHz ≤ f ≤ 6 GHz, Frequency band mode: Spurious) ±1.8 dB (6 GHz < f ≤ 13.8 GHz, Frequency band mode: Spurious) ±1.8 dB (6 GHz < f ≤ 13.8 GHz, Frequency band mode: Normal) (4 GHz < f ≤ 13.8 GHz, Frequency band mode: Spurious) ±3.0 dB (13.8 GHz < f ≤ 40 GHz) ±3.5 dB (nom, 40 GHz < f ≤ 43 GHz) With MS2830A-068, Preamp: On Input attenuator: 10 dB, Preamp Input level: ≤-30 dBm ±1.0 dB (300 kHz ≤ f < 4 GHz, Frequency band mode: Normal) (300 kHz ≤ f < 3.5 GHz, Frequency band mode: Spurious) ±1.8 dB (4 GHz < f ≤ 4 GHz, Frequency band mode: Spurious) ±2.0 dB (6 GHz < f ≤ 13.8 GHz, Frequency band mode: Spurious) ±2.0 dB (6 GHz < f ≤ 13.8 GHz, Frequency band mode: Spurious) ±3.0 dB (13.8 GHz < f ≤ 13.8 GHz, Frequency band mode: Spurious) ±3.0 dB (13.8 GHz < f ≤ 4.5 GHz) ±4.0 dB (26.5 GHz < f ≤ 4.0 GHz) ±4.0 dB (nom., 40 GHz < f ≤ 43 GHz)
In-band Frequency Characteristics	18°C to 28°C, Referenced to level at center frequency, Center frequency: $\pm 10$ MHz  Without MS2830A-077/078, or $\leq 31.25$ MHz bandwidth $\pm 0.31$ dB (30 MHz $\leq f \leq 4$ GHz, Frequency band mode: Normal)  (30 MHz $\leq f < 3.5$ GHz, Frequency band mode: Spurious)

## **Signal Analyzer** (continued)

## **Spectrum Displayed Function** (continued)

Without MS2830A-067/068, Frequency band mode: Normal
–131.5 dBm/Hz (100 kHz)
–141.5 dBm/Hz (1 MHz)
–150.5 dBm/Hz (30 MHz ≤ f < 1 GHz)
-147.5  dBm/Hz (1 GHz ≤ f < 2.4 GHz)
–144.5 dBm/Hz (2.4 GHz ≤ f ≤ 3.5 GHz)
–141.5 dBm/Hz (3.5 GHz < f ≤ 4 GHz)
–141.5 dBm/Hz (4 GHz < f ≤ 6 GHz)
-148.5  dBm/Hz (6 GHz ≤ f ≤ 13.5 GHz)
–146.5 dBm/Hz (13.5 GHz < f ≤ 18.3 GHz)
–143.5 dBm/Hz (18.3 GHz < f ≤ 26.5 GHz)
–143.5 dBm/Hz (26.5 GHz < f ≤ 34 GHz)
–141.5 dBm/Hz (34 GHz < f ≤ 40 GHz)
–137.5 dBm/Hz (40 GHz < f ≤ 43 GHz)
Without MS2830A-067, with MS2830A-068, Preamp: Off, Frequency band mode: Normal
-131.5 dBm/Hz (100 kHz)
-141.5 dBm/Hz (1 MHz)
-150.5 dBm/Hz (30 MHz ≤ f < 1 GHz)
$-147.5 \text{ dBm/Hz} (36 \text{ MHz} \frac{1}{2} + 7 + 6 \text{ Hz})$
$-144.5 \text{ dBm/Hz} (1 \text{ GHz} \le 1 < 2.4 \text{ GHz})$ $-144.5 \text{ dBm/Hz} (2.4 \text{ GHz} \le f \le 3.5 \text{ GHz})$
$-141.5 \text{ dBm/Hz}$ (2.5 GHz < f \le 4 GHz)
-141.5 dBm/Hz (4 GHz < f ≤ 6 GHz)
-141.5 dBm/Hz (6 GHz < f ≤ 13.5 GHz)
$-142.5 \text{ dBm/Hz}$ (13.5 GHz $< f \le 18.3 \text{ GHz}$ )
$-138.5 \text{ dBm/Hz}$ (18.3 GHz $< f \le 26.5 \text{ GHz}$ )
-138.5 dBm/Hz (26.5 GHz < f ≤ 34 GHz)
$-132.5 \text{ dBm/Hz} (34 \text{ GHz} < f \le 40 \text{ GHz})$
-129.5  dBm/Hz (34 GHz < f ≤ 43 GHz)
Without MS2830A-067, with MS2830A-068, Preamp: On, Frequency band mode: Normal
–144.5 dBm/Hz (nom., 100 kHz)
-153.5 dBm/Hz (1 MHz)
-160.5 dBm/Hz (30 MHz ≤ f < 1 GHz)
-158.5 dBm/Hz (1 GHz ≤ f < 2 GHz)
$-156.5 \text{ dBm/Hz}$ (2 GHz $\leq f \leq 3.5 \text{ GHz}$ )
-152.5 dBm/Hz (3.5 GHz < f ≤ 4 GHz)
-152.5 dBm/Hz (4 GHz < f ≤ 6 GHz)
-157.5 dBm/Hz (6 GHz < f ≤ 13.5 GHz)
-155.5 dBm/Hz (13.5 GHz < f ≤ 18.3 GHz)
-153.5 dBm/Hz (18.3 GHz < f ≤ 26.5 GHz)
-153.5 dBm/Hz (26.5 GHz < f ≤ 34 GHz)
-147.5 dBm/Hz (34 GHz < f ≤ 40 GHz)
–144.5 dBm/Hz (40 GHz < f ≤ 43 GHz)
With MS2830A-067: See Microwave Preselector Bypass (Displayed average noise level)
Reference: Span total, Carrier total, Both sides of carriers, Carrier select
Adjacent channel specifications: 3 channels × 2
Measurement of absolute values: dBm, dBm/Hz
N% of power, X-dB down
,

## **Signal Analyzer** (continued)

## Power vs. Time Displayed Function

Function Outline	Displayed time changes of power for captured waveform data
Analysis Time Range	Analysis start time: Sets analysis start time position from beginning of waveform data Analysis time length: Sets analysis time length Setting mode: Auto, Manual
Resolution Bandwidth	Filter type: Rect, Gaussian, Nyquist, Root nyquist, Off, (Default: Off) Roll-off ratio: 0.01 to 1 (Set for Nyquist, Root nyquist) Filter frequency offset: Set center frequency of filter in wavelength data frequency band
AM Depth (Peak to Peak Measurement)	Measures with AM depth or marker function +Peak, –Peak, (P-P)/2, Average
Burst Average Power	Measures average power of burst signal

## Frequency vs. Time Displayed Function

Function Outline	Displayed frequency time fluctuations of input signal from captured waveform data		
	Analysis start time: Sets analysis start time point from waveform data header		
Analysis Time Range	Analysis time length: Sets analysis time length		
	Setting mode: Auto, Manual		
Operating Level Range	-17 to +30 dBm (Input attenuator: ≥10 dB)		
Frequency (Vertical Axis)	Can be set center frequency and span at frequency range in waveform data		
	Displayed frequency range: Selectable 1/25, 1/10, 1/5, 1/2 of analysis bandwidth		
	Input frequency range: 10 MHz to 6 GHz		
Frequency Readout Accuracy	Input level: –17 to +30 dBm, Span: ≤31.25 MHz, Scale: Span/25, CW input		
	± (Reference oscillator accuracy × Center frequency + Displayed frequency range × 0.01) Hz		
FM Deviation	Measures FM deviation or marker function		
(Peak to Peak Measurement)	+Peak, –Peak, (P-P)/2, Average		
FMCW Measurement	Display items: FM Error Peak, FM Error RMS, Chirp Deviation, Chirp Rate, Chirp Length		
	The measurement range can be set by automatic detection or marker.		

## Phase vs. Time Displayed Function

Function Outline	Displayed phase time fluctuation of input signal from captured waveform data	
Analysis Time Range	Analysis start time: Sets analysis start time point from waveform data header Analysis time length: Sets analysis time length Setting mode: Auto, Manual	
Phase (Vertical Axis)	Display mode: Wrap, Unwrap ase (Vertical Axis) Displayed phase range: 0.01 deg./div to 200 Gdeg./div Offset: -100 deg. to +100 Mdeg.	

## **CCDF/APD Displayed Function**

Function Outline	Displayed CCDF and APD of waveform date within a given length of time	
Analysis Time Range	Analysis start time: Sets analysis start time point from waveform data header Analysis time length: Sets analysis time length Setting mode: Auto, Manual	
Display	Displayed CCDF or APD as graphs Histogram resolution: 0.01 dB Value: Average power, Max. power, Crest factor	
Resolution Bandwidth	Filter type: Rectangle, Off, (Default: Off) Filter frequency offset: Sets filter center frequency in frequency band of waveform data	

## **Spectrogram Displayed Function**

Function Outline	Displayed spectrogram for arbitrary time length in captured waveform data		
Analysis Time Range	Analysis start time: Sets analysis start time point from waveform data header Analysis time length: Sets analysis time length Setting mode: Auto, Manual		
Frequency	Can be set center frequency and span at frequency range in waveform data		
Resolution Bandwidth (RBW)	ution Bandwidth (RBW)  Setting range: 1 Hz to 1 MHz (1-3 sequence)  Selectivity (-60 dB/-3 dB): 4.5: 1 (nom.)		

## Signal Analyzer (continued)

## Digitize Function

Function Outline	Captured waveform data saved to internal HDD or output to external devices
Waveform Data	Format: I, Q (each 32 bit, Float binary type) Level: 0 dBm input is $\sqrt{(l^2 + Q^2)} = 1$ Level accuracy: Same as signal analyzer absolute amplitude accuracy
External Output	Can be output to external PC via Ethernet

### **Replay Function**

Function Outline	Captured waveforms can be replayed again by using the VSA function to read saved digitize data				
	Format: I, Q (binary format) Combination of span, Sampling rate, and Minimum capture sample				
	Span	Sampling rate	Minimum capture sample		
	1 kHz	2 kHz	74000 (37 s)		
	2.5 kHz	5 kHz	160000 (32 s)		
Conditions for Measurable	5 kHz	10 kHz	310000 (31 s)		
	10 kHz	20 kHz	610000 (30.5 s)		
	25 kHz	50 kHz	730000 (14.6 s)		
	50 kHz	100 kHz	730000 (7.3 s)		
	100 kHz	200 kHz	730000 (3.65 s)		
	250 kHz	500 kHz	730000 (1.46 s)		
	500 kHz	1 MHz	730000 (730 ms)		
Waveform Data	1 MHz	2 MHz	730000 (365 ms)		
	2.5 MHz	5 MHz	730000 (146 ms)		
	5 MHz	10 MHz	730000 (73 ms)		
	10 MHz	20 MHz	730000 (36.5 ms)		
	18.6 MHz	20 MHz	730000 (36.5 ms)		
	20 MHz	25 MHz	730000 (29.2 ms)		
	25 MHz	50 MHz	730000 (14.6 ms)		
	31.25 MHz	50 MHz	730000 (14.6 ms)		
	50 MHz	100 MHz	730000 (7.3 ms)		
	62.5 MHz	100 MHz	730000 (7.3 ms)		
	100 MHz	200 MHz	730000 (3.65 ms)		
	125 MHz	200 MHz	730000 (3.65 ms)		

# **Specifications**

## Connector

Connector	
	18°C to 28°C, Input attenuator: ≥10 dB
	With MS2830A-044
	Connector: N-J (Front panel), $50\Omega$ (nom.)
	VSWR: $\leq$ 1.2 (nom., 40 MHz $\leq$ f $\leq$ 3 GHz)
	≤1.5 (nom., 3 GHz < f ≤ 6 GHz)
	≤1.6 (nom., 6 GHz < f ≤ 13.5 GHz)
	≤1.9 (nom., 13.5 GHz < f ≤ 26.5 GHz)
RF Input	With MS2830A-045
	Connector: K-J (Front panel), $50\Omega$ (nom.)
	VSWR: $\leq 1.2$ (nom., $40 \text{ MHz} \leq f \leq 3 \text{ GHz}$ )
	≤1.3 (nom., 3 GHz < f ≤ 6 GHz)
	≤1.3 (nom., 6 GHz < f ≤ 13.5 GHz)
	≤1.4 (nom., 13.5 GHz < f ≤ 26.5 GHz)
	≤1.6 (nom., 26.5 GHz < f ≤ 40 GHz)
	≤1.6 (Reference data, 40 GHz < f ≤ 43 GHz, V-K converter mounted and included)
	Connector: BNC-J (Rear panel), 50Ω (nom.)
	Frequency: 5, 10, 13 MHz
External Reference Input	Operating range: ±1 ppm
	Input level: $-15$ to $+20$ dBm, $50\Omega$ (AC coupling)
	Connector: BNC-J (Rear panel), 50Ω (nom.)
Reference Signal Output	Frequency: 10 MHz
	Output level: ≥0 dBm (AC coupling)
Sweep Status Output	Connector: BNC-J (Rear panel)
Sweep Status Output	Output level: TTL level (High level at sweeping or waveform capture)
SA Trigger Input	Connector: BNC-J (Rear panel)
3A mgger mput	Output level: TTL level
	This is available when the MS2830A-017/117 is installed.
Noise Source Drive	Supply (+28 V) of the noise source drive.
Thoise source brive	Rear panel, BNC-J
	Output voltage: 28 ±0.5 V, Pulsed
External Controller	Control from external controller (excluding power-on/off)
Ethernet (10/100/1000BASE-T)	Connector: RJ-45 (Rear panel)
GPIB	IEEE488 bus connector (IEEE488.2, Rear panel)
GI IB	Interface function: SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, C0, E2
USB (B)	USB-B connector (USB2.0, Rear panel)
USB	USB-A connector (USB2.0, Front panel: 2 ports, Rear panel: 2 ports)
Monitor Output	Mini D-Sub 15 pin (Compatible with VGA, Rear panel)
AUX	50-pin (Correspond to DX10A-50S, Rear panel), Using extended input/output
	Connector: SMA-J (Rear panel), $50\Omega$ (nom.)
IF Output*	Frequency: 1.875 GHz
	Gain: –10 dB (nom., Input attenuator: 0 dB, Input frequency: 10 GHz)
	Connector: SMA-J (Front panel), 50Ω (nom.)
1st Local Output*	Frequency: 5 GHz to 10 GHz (Local signal output), 1.875 GHz (IF frequency)
	Gain: –10 dB (nom., Input attenuator: 0 dB, Input frequency: 10 GHz)
	<u> </u>

<sup>\*:</sup> With MS2830A-044/045 only

## Display

Display XGA-color LCD (Resolution: 1024 × 768), 8.4 inches (Diagonal: 213 mm)	
---	--

## General

Dimensions Power Supp		426 (W) × 177 (H) × 390 (D) mm (excluding projections) ≤15 kg (excluding other options)  Power voltage: 100 V(ac) to 120 V(ac)/200 V(ac) to 240 V(ac)  Frequency: 50 Hz/60 Hz  Power consumption: 190 VA (nom., excluding other options)
Temperature Range		Operating: +5°C to +45°C, Storage: -20°C to +60°C
	EMC	2014/30/EU, EN61326-1, EN61000-3-2
CE	LVD	2014/35/EU, EN61010-1
R	RoHS	2011/65/EU, (EU) 2015/863, EN IEC 63000: 2018
	EMC	S.I. 2016 No.1091, EN 61326-1, EN61000-3-2
UKCA	LVD	S.I. 2016 No.1101, EN 61010-1
	RoHS	S.I. 2012 No.3032, EN IEC 63000:2018

## External Mixer Function (26.5 GHz to 325 GHz)

Frequency

Frequency range: 26.5 GHz to 325 GHz

Frequency bands:

4			
Model	Band	Frequency range	Mixer harmonics order (N)
MA2741C	Α	26.5 GHz to 40 GHz	4+
MA2742C	Q	33 GHz to 50 GHz	5+
MA2743C	U	40 GHz to 60 GHz	6+
MA2744C	V	50 GHz to 75 GHz	8+
MA2745C	Е	60 GHz to 90 GHz	9+
MA2746C	W	75 GHz to 110 GHz	11+
MA2747C	F	90 GHz to 140 GHz	14+
MA2748C	D	110 GHz to 170 GHz	17+
MA2749C	G	140 GHz to 220 GHz	22+
MA2750C	Υ	170 GHz to 260 GHz	26+
MA2751C	J	220 GHz to 325 GHz	33+

External Mixer\*

Amplitude

Mixer conversion loss

Setting range: 0 to 99.9 dB

Maximum input level, Average noise level, Frequency response: Depends on external mixer

Input/Output

Applicable mixer: 2-port mixer only Local frequency: 5 GHz to 10 GHz

IF frequency: 1.875 GHz

#### **Rubidium Reference Oscillator MS2830A-001**

Generates 10 MHz reference signal with higher frequency stability.

#### Frequency

Internal Reference Oscillator	See Signal Analyzer/Spectrum Analyzer (Internal reference oscillator)
-------------------------------	---

## Analysis Bandwidth 10 MHz MS2830A-006

This option adds a function to analyze 10 MHz bandwidth.

#### Analysis Bandwidth Extension to 31.25 MHz MS2830A-005

This option adds a function to analyze 31.25 MHz bandwidth. (Requires MS2830A-006) MS2830A-005 is not available when MS2830A-045 is installed.

## Bandwidth Extension to 31.25 MHz for Millimeter-wave MS2830A-009

This option adds a function to analyze 31.25 MHz bandwidth (Requires MS2830A-006).

MS2830A-009 is available when MS2830A-045 is installed.

Cannot be set the RBW to more than 10 MHz in Spectrum Analyzer function.

## Preamplifier MS2830A-008

This option amplifies signal prior to mixer to enhance sensitivity.

Cannot install simultaneously with MS2830A-068.

## Frequency

Frequency Range	100 kHz to 6 GHz
-----------------	------------------

#### **Amplitude**

Level Measurement Range	See Signal Analyzer/Spectrum Analyzer (Level measurement range)
Maximum Input Level	See Signal Analyzer/Spectrum Analyzer (Maximum input level)
Displayed Average Noise Level (DANL)	See Spectrum Analyzer, Signal Analyzer (Displayed average noise level (DANL))
RF Frequency Characteristics	See Signal Analyzer/Spectrum Analyzer (RF frequency characteristics)
Input Attenuator Switching Uncertainty	See Signal Analyzer/Spectrum Analyzer (Input attenuator switching uncertainty)
Linearity Error	See Signal Analyzer/Spectrum Analyzer (Linearity error)
Second Harmonic Distortion	See Signal Analyzer/Spectrum Analyzer (Second harmonic distortion)
1 dB Gain Compression	See Signal Analyzer/Spectrum Analyzer (1 dB gain compression)
2-tone 3rd-order Intermodulation Distortion	See Spectrum Analyzer (2-tone 3rd-order intermodulation distortion)

<sup>\*:</sup> With MS2830A-044/045 only

## **Specifications**

## **Phase Noise Measurement Function MS2830A-010**

Displays the phase noise characteristics on a logarithmic scale

## Frequency

Frequency Range	10 MHz to Upper frequency limit
Offset Frequency Range	10 Hz to 10 MHz
Marker Mode	Normal, Integral noise, RMS noise, Jitter, Residual FM

## **Precompliance EMI Function MS2830A-016**

Adds the detection mode and the resolution bandwidth for EMI measurement to the Spectrum Analyzer function.

Resolution Bandwidth (RBW)	Setting range: 200 Hz (6 dB), 9 kHz (6 dB), 120 kHz (6 dB), 1 MHz (Impulse)
Detector	Quasi-Peak, CISPR-AVG, RMS-AVG

## Noise Figure Measurement Function\*1 MS2830A-017

## Frequency

Frequency Range	MS2830A-044: 30 MHz to 26.5 GHz MS2830A-045: 30 MHz to 40 GHz
Frequency Setting Range	MS2830A-044: 10 MHz to 26.5 GHz MS2830A-045: 10 MHz to 43 GHz

## **NF Measurement**

Within the frequency range, Attenuator =  $0 dB^{*2}$ 

Measurement Range	– 20 to +40 dB
Instrument Uncertainty	ENR: 4 to 7 dB ±0.02 dB ENR: 12 to 17 dB ±0.025 dB ENR: 20 to 22 dB ±0.03 dB

## **Gain Measurement**

Measurement Range	Within the frequency range -20 to +40 dB
Instrument Uncertainty	Within the measurement range ≤0.07

## **Resolution Bandwidth**

Setting Pange	100 kHz to 8 MHz
Setting Range	100 kHZ to 6 lviHZ

#### Connector

Noise Course	Connector: Rear panel, BNC-J
Noise Source	Output voltage: 28 V ±0.5 V, Pulsed

<sup>\*1:</sup> Recommending the NC346 Series noise sources by Noisecom company

<sup>\*2:</sup> Recommend to use Pre Amp

## **BER Measurement Function MS2830A-026**

Connector	AUX connector(Rear panel)*
Connector	*: Can convert to BNC by connecting AUX Conversion Adapter (J1556A).
Input Level	TTL level
Input Signal	Data, Clock, Enable
Input Bit Rate	100 bps to 10 Mbps
Measured Patterns	PN9, PN11, PN15, PN20, PN23, ALL0, ALL1, Alternate (0101) PN9Fix, PN11Fix, PN15Fix, PN20Fix, PN23Fix, User define (4096 bits max.)
Synchronization Establishing Condition	PN signal: PN stage × 2 bit error free At PNFix signal: PN stage × 2 bit error free, PN signal and sync establishment, establish sync with PNFix signal at PN stage error free from PNFix signal header bit ALL0, ALL1, Alternate (0101): 10 bit error free UserDefine: 8 to 1024 bits (variable) error free Select header bit used at sync detection
Re-synchronization Judgment Condition	x/y (Resynchronization at detection of x-bit error in y bits) y Measured bit count: Select from 500 bits, 5000 bits, 50000 bits x Number of error bits in y bits: Setting range 1 to y/2
Measured Bit Count	$\leq 2^{32} - 1$ bits
Measured Error Bit Count	$\leq 2^{31} - 1$ bits
Measurement End Conditions	Measured bit count, Measured error bit count
Auto Re-synchronization Function	Can be toggled on and off
Operation at Resync.	Select from Count clear, and Count keep
Measurement Mode	Single, Endless, Continuous
Input Signal Data, Clock, Enable Input Bit Rate 100 bps to 10 Mbps  Measured Patterns PN9, PN11, PN15, PN20, PN23, ALL0, ALL1, Alternate (0101) PN9Fix, PN11Fix, PN15Fix, PN20Fix, PN23Fix, User define (4096 bits max.)  PN signal: PN stage × 2 bit error free At PNFix signal: PN stage × 2 bit error free, PN signal and sync establishment, establish sync with PNFix signal at PN stage error free from PNFix signal header bit ALL0, ALL1, Alternate (0101): 10 bit error free UserDefine: 8 to 1024 bits (variable) error free UserDefine: 8 to 1024 bits (variable) error free Select header bit used at sync detection  X/y (Resynchronization Judgment Condition x Number of error bits in y bits: Setting range 1 to y/2  Measured Bit Count 4232 - 1 bits Measured Error Bit Count 5231 - 1 bits Measurement End Conditions Auto Re-synchronization Auto Re-synchronization Function Can be toggled on and off Coperation at Resync. Select from Count clear, and Count keep	
Polarity Inversion Function	Supports polarity reversal for Data, Clock, Enable
Clear Measurement Function	At BER measurement, hold sync status, clears measured value and measures from 0

## Microwave Preamplifier MS2830A-068

This option amplifies signal prior to mixer to enhance sensitivity.

Cannot install simultaneously with MS2830A-008.

When MS2830A-168 is added to MS2830A (with MS2830A-008), only MS2830A-168 becomes available.

#### Frequency

Frequency Range	100 kHz to 26.5 GHz [MS2830A-044] 100 kHz to 43 GHz [MS2830A-045]
-----------------	--

#### **Amplitude**

Level Measurement Range	See Signal Analyzer/Spectrum Analyzer (Level measurement range)
Maximum Input Level	See Signal Analyzer/Spectrum Analyzer (Maximum input level)
Displayed Average Noise Level (DANL)	See Spectrum Analyzer, Signal Analyzer (Displayed average noise level (DANL))
RF Frequency Characteristics	See Signal Analyzer/Spectrum Analyzer (RF frequency characteristics)
Input Attenuator Switching Uncertainty  See Signal Analyzer/Spectrum Analyzer (Input attenuator switching uncertainty)	
Linearity Error	See Signal Analyzer/Spectrum Analyzer (Linearity error)
Second Harmonic Distortion	See Signal Analyzer/Spectrum Analyzer (Second harmonic distortion)
1 dB Gain Compression	See Signal Analyzer/Spectrum Analyzer (1 dB gain compression)
2-tone 3rd-order Intermodulation Distortion	See Spectrum Analyzer (2-tone 3rd-order intermodulation distortion)

#### Microwave Preselector Bypass MS2830A-067

Bypasses the preselector to improve the RF frequency characteristics and the in-band frequency characteristics.

Add MS2830A-067 when using the signal analyzer measurement functions at bandwidth: >31.25 MHz and frequency: >6 GHz.

When the preselector option is set to On, the image response elimination filter is bypassed.

Therefore, this function is not appropriate for spurious measurement to receive the image response.

Microwave Preselector Bypass: On (with MS2830A-067), Microwave Preselector Bypass: Off (with special directions)

## Frequency

Fraguency Range	4 GHz to 26.5 GHz [MS2830A-044]
Frequency Range	4 GHz to 43 GHz [MS2830A-045]

## Amplitude

	18°C to 28°C, After Cal, Input attenuator: 10 dB, Microwave Preselector Bypass: On
	Without MS2830A-068, Preamp: Off
	$\pm 1.0$ dB (6 GHz $\le$ f $\le$ 13.8 GHz, Frequency band mode: Normal)
Displayed Average Noise Level (DANL)	(4 GHz $\leq$ f $\leq$ 13.8 GHz, Frequency band mode: Spurious) ±1.5 dB (13.8 GHz $<$ f $\leq$ 26.5 GHz)
	$\pm 2.0 \text{ dB} (26.5 \text{ GHz} < f \le 40 \text{ GHz})$
	±2.0 dB (typ., 40 GHz < f ≤ 43 GHz)
	With MS2830A-068, Preamp: On
	$\pm 1.8$ dB (6 GHz $\leq$ f $\leq$ 13.8 GHz, Frequency band mode: Normal)
	(4 GHz ≤ f ≤ 13.8 GHz, Frequency band mode: Spurious)
	±2.5 dB (13.8 GHz < f ≤ 26.5 GHz)
	±3.0 dB (26.5 GHz < f ≤ 40 GHz)
	±3.0 dB (nom., 40 GHz < f ≤ 43 GHz)  * With MS2830A-067, Microwave Preselector Bypass: Off, see Signal Analyzer/Spectrum Analyzer (RF frequency characteristics)
	18°C to 28°C, Detector: Sample, VBW: 1 Hz (Video average), Input attenuator: 0 dB, Frequency band mode: Normal
	Without MS2830A-068, Microwave Preselector Bypass: On, Off   -120 dBm/Hz (9 kHz ≤ f < 100 kHz, nom.)
	-134 dBm/Hz (100 kHz)
	-134 dBm/Hz (100 kHz < f < 1 MHz, nom.)
	-144 dBm/Hz (1 MHz)
	-144 dBm/Hz (1 MHz < f < 10 MHz, nom.)
	-150 dBm/Hz (10 MHz ≤ f < 30 MHz, nom.)
	-153 dBm/Hz (30 MHz ≤ f < 1 GHz)   -150 dBm/Hz (1 GHz ≤ f < 2.4 GHz)
	$-147 \text{ dBm/Hz} (2.4 \text{ GHz} \le f \le 3.5 \text{ GHz})$
	–144 dBm/Hz (3.5 GHz < f ≤ 4 GHz)
	–144 dBm/Hz (4 GHz < f ≤ 6 GHz)
	-147 dBm/Hz (6 GHz < f ≤ 13.5 GHz)
	-145 dBm/Hz (13.5 GHz < f ≤ 18.3 GHz) -141 dBm/Hz (18.3 GHz < f ≤ 26.5 GHz)
	$-141 \text{ dBm/Hz} (26.5 \text{ GHz} < f \le 34 \text{ GHz})$
	–135 dBm/Hz (34 GHz < f ≤ 40 GHz)
	−132 dBm/Hz (40 GHz < f ≤ 43 GHz)
	With MS2830A-068, Preamp: Off, Microwave Preselector Bypass: On, Off
	-120 dBm/Hz (9 kHz ≤ f < 100 kHz, nom.)
	-134 dBm/Hz (100 kHz)
	-134 dBm/Hz (100 kHz < f < 1 MHz, nom.) -144 dBm/Hz (1 MHz)
Displayed Average Noise Level	-144 dBm/Hz (1 MHz < f < 10 MHz, nom.)
' '	–150 dBm/Hz (10 MHz ≤ f < 30 MHz, nom.)
(= 1 1 = )	–153 dBm/Hz (30 MHz ≤ f < 1 GHz)
(DANL)	$-150 \text{ dBm/Hz} (1 \text{ GHz} \le f < 2.4 \text{ GHz})$
	-147 dBm/Hz (2.4 GHz ≤ f ≤ 3.5 GHz) -144 dBm/Hz (3.5 GHz < f ≤ 4 GHz)
	-144 dBm/Hz (4 GHz < f ≤ 6 GHz)
	–142 dBm/Hz (6 GHz < f ≤ 13.5 GHz)
	-140 dBm/Hz (13.5 GHz < f ≤ 18.3 GHz)
	-136 dBm/Hz (18.3 GHz < f ≤ 26.5 GHz)
	-136 dBm/Hz (26.5 GHz < f ≤ 34 GHz) -131 dBm/Hz (34 GHz < f ≤ 40 GHz)
	$-128 \text{ dBm/Hz} (40 \text{ GHz} < f \le 43 \text{ GHz})$
	With MS2830A-068, Preamp: On, Microwave Preselector Bypass: On
	-147 dBm/Hz (100 kHz, nom.)
	-156 dBm/Hz (1 MHz)
	-163 dBm/Hz (30 MHz ≤ f < 1 GHz)
	-161  dBm/Hz (1 GHz ≤ f < 2 GHz) -159  dBm/Hz (2 GHz ≤ f ≤ 3.5 GHz)
	-155 dBm/Hz (3.5 GHz < f ≤ 4 GHz)
	-155 dBm/Hz (4 GHz < f ≤ 6 GHz)
	-154 dBm/Hz (6 GHz < f ≤ 13.5 GHz)
	-152 dBm/Hz (13.5 GHz < f ≤ 18.3 GHz)
	-150 dBm/Hz (18.3 GHz < f ≤ 26.5 GHz)   -150 dBm/Hz (26.5 GHz < f ≤ 34 GHz)
	$-144 \text{ dBm/Hz} (34 \text{ GHz} < f \le 40 \text{ GHz})$
	−141 dBm/Hz (40 GHz < f ≤ 43 GHz)
	With MS2830A-067, Microwave Preselector Bypass: Off
	≤–60 dBc (6 GHz < f ≤ 13.5 GHz)
	≤–60 dBc (13.5 GHz < f ≤ 26.5 GHz)
Image Responses	With MS2830A-067, Microwave Preselector Bypass: On
	Generated at the frequency at the distance of 1.875 GHz $\times$ 2 0 dBc (nom., 4 GHz $\leq$ f $\leq$ 26.5 GHz)
	0 dBc (nom., 4 drz ≤ 1 ≤ 20.5 drz)  0 dBc (nom., 26.5 GHz < f ≤ 43 GHz)
L	

## Analysis Bandwidth Extension to 62.5 MHz MS2830A-077

This option adds a function to analyze 62.5 MHz bandwidth. MS2830A-044: Requires MS2830A-006 and MS2830A-005. MS2830A-045: Requires MS2830A-006 and MS2830A-009.

## Analysis Bandwidth Extension to 125 MHz MS2830A-078

This option adds a function to analyze 125 MHz bandwidth.

MS2830A-044: Requires MS2830A-006, MS2830A-005 and MS2830A-077.

MS2830A-045: Requires MS2830A-006 MS2830A-009 and MS2830A-077

An image response is received when setting the bandwidth to more than 31.25 MHz.

This can be used when not inputting a signal frequency outside the MS2830A analysis bandwidth (125 MHz max.).

The Signal Analyzer MS2690A is recommended for other measurement purposes.

#### General

Analysis Bandwidth	See Signal Analyzer (Analysis bandwidth)
Sampling Rate	See Signal Analyzer (Sampling rate)
Capture Time	See Signal Analyzer (Capture time)
ADC Resolution	With MS2830A-077/078, >31.25 MHz bandwidth 14 bits

## Frequency

Frequency Setting	See Signal Analyzer/Spectrum display function (Frequency setting)
Resolution Bandwidth (RBW)	See Signal Analyzer/Spectrum display function(Resolution bandwidth (RBW))

#### **Amplitude**

Amplitude	
	18°C to 28°C, Input attenuator: 0 dB With MS2830A-077 or 078, >31.25 MHz bandwidth Without MS2830A-080/68, or with MS2830A-080/68, Preamp: Off -146.5 dBm/Hz (300 MHz ≤ f < 1 GHz) -143.5 dBm/Hz (1 GHz ≤ f < 2.4 GHz) -143.5 dBm/Hz (2.4 GHz ≤ f ≤ 3.5 GHz) -137.5 dBm/Hz (3.5 GHz < f ≤ 4 GHz) -137.5 dBm/Hz (3.5 GHz < f ≤ 4 GHz) -137.5 dBm/Hz (300 MHz ≤ f < 1 GHz) -137.5 dBm/Hz (300 MHz ≤ f < 1 GHz) -137.5 dBm/Hz (300 MHz ≤ f < 1 GHz) -156.5 dBm/Hz (1 GHz ≤ f < 2 GHz) -154.5 dBm/Hz (300 MHz ≤ f < 1 GHz) -154.5 dBm/Hz (300 MHz ≤ f < 1 GHz) -154.5 dBm/Hz (300 MHz ≤ f < 1 GHz) -154.5 dBm/Hz (300 GHz < f ≤ 3.5 GHz) -148.5 dBm/Hz (3.5 GHz < f ≤ 4 GHz) -18°C to 28°C, Input attenuator: 0 dB With MS2830A-077 or 078, with MS2830A-067, >31.25 MHz bandwidth Without MS2830A-068 -137.5 dBm/Hz (13.5 GHz < f ≤ 13.5 GHz) -131.5 dBm/Hz (13.5 GHz < f ≤ 3 GHz) -131.5 dBm/Hz (13.5 GHz < f ≤ 3 GHz) [MS2830A-045] -125.5 dBm/Hz (3 GHz < f ≤ 3 GHz) [MS2830A-045] -125.5 dBm/Hz (3 GHz < f ≤ 4 GHz) [MS2830A-045] -125.5 dBm/Hz (3 GHz < f ≤ 4 GHz) [MS2830A-045] -125.5 dBm/Hz (3 GHz < f ≤ 3 GHz) [MS2830A-045] -125.5 dBm/Hz (3 GHz < f ≤ 3 GHz) [MS2830A-045] -125.5 dBm/Hz (3 GHz < f ≤ 4 GHz) [MS2830A-045] -125.5 dBm/Hz (3 GHz < f ≤ 4 GHz) [MS2830A-045] -125.5 dBm/Hz (3 GHz < f ≤ 4 GHz) [MS2830A-045] -125.5 dBm/Hz (3 GHz < f ≤ 4 GHz) [MS2830A-045] -125.5 dBm/Hz (3 GHz < f ≤ 4 GHz) [MS2830A-045] -125.5 dBm/Hz (13.5 GHz < f ≤ 3 GHz) [MS2830A-045] -126.5 dBm/Hz (13.5 GHz < f ≤ 4 GHz) [MS2830A-045] -121.5 dBm/Hz (6 GHz < f ≤ 3 GHz) [MS2830A-045] -121.5 dBm/Hz (18.5 GHz < f ≤ 3 GHz) [MS2830A-045] -121.5 dBm/Hz (18.5 GHz < f ≤ 4 GHz) [MS2830A-045] -121.5 dBm/Hz (18.5 GHz < f ≤ 4 GHz) [MS2830A-045] -121.5 dBm/Hz (18.5 GHz < f ≤ 4 GHz) [MS2830A-045] -131.5 dBm/Hz (18.5 GHz < f ≤ 4 GHz) [MS2830A-045] -131.5 dBm/Hz (18.5 GHz < f ≤ 4 GHz) [MS2830A-045] -131.5 dBm/Hz (18.5 GHz < f ≤ 4 GHz) [MS2830A-045] -131.5 dBm/Hz (18.5 GHz < f ≤ 4 GHz) [MS2830A-045] -131.5 dBm/Hz (18.5 GHz < f ≤ 4 GHz) [MS2830A-045] -131.5 dBm/Hz (26.5 GHz < f ≤ 3 GHz) [MS2830A-045]

## **Specifications**

# Analysis Bandwidth Extension to 62.5 MHz MS2830A-077 Analysis Bandwidth Extension to 125 MHz MS2830A-078 (continued)

Amplitude (continued)

implicade (continued)	
Image Response	With MS2830A-077/078, >31.25 MHz bandwidth Image response (occurs at frequency 200 MHz away): 0 dBc (nom., 300 MHz < f $\leq$ 43 GHz) With MS2830A-077/078, MS2830A-067, >31.25 MHz bandwidth Image response (occurs at frequency 1.875 GHz × 2 away): 0 dBc (nom., 6 GHz < f $\leq$ 43 GHz)
	18°C to 28°C, After Cal, Input attenuator: 10 dB, Frequency band mode: Normal, >31.25 MHz bandwidth
	Without MS2830A-008/068, or Preamp: Off $\pm 0.35$ dB (300 MHz $\leq$ f $<$ 4 GHz) $\pm 1.5$ dB (4 GHz $\leq$ f $\leq$ 6 GHz)
	With MS2830A-008, Preamp: On $\pm 0.65$ dB (300 MHz $\leq$ f $<$ 4 GHz) $\pm 1.8$ dB (4 GHz $\leq$ f $\leq$ 6 GHz)
RF Frequency Characteristics	Without MS2830A-068, or Preamp: Off With MS2830A-067, Microwave Preselector Bypass: On $\pm 1.0$ dB (6 GHz $\leq$ f $\leq$ 13.8 GHz) $\pm 1.5$ dB (13.8 GHz $<$ f $\leq$ 26.5 GHz) $\pm 2.0$ dB (26.5 GHz $<$ f $\leq$ 40 GHz) $\pm 2.0$ dB (typ., 40 GHz $<$ f $\leq$ 43 GHz)
	With MS2830A-068, or Preamp: On With MS2830A-067, Microwave Preselector Bypass: On $\pm$ 1.8 dB (6 GHz $\leq$ f $\leq$ 13.8 GHz) $\pm$ 2.5 dB (13.8 GHz $<$ f $\leq$ 26.5 GHz) $\pm$ 3.0 dB (26.5 GHz $<$ f $\leq$ 40 GHz) $\pm$ 3.0 dB (nom., 40 GHz $<$ f $\leq$ 43 GHz)
Linearity Error	See Signal Analyzer/Spectrum Analyzer (Linearity error)

#### **Options Configuration**

Refer two table shown below about the hardware / software which each frequency model of MS2830A can implement.

#### Hardware

Frequency range (MS2830A-040/041/043/044/045) not upgradable.

✓ = Can be installed, No = Cannot be installed, R = Require, U = Upgrade

		fit	Add	ditior	to N	/lain	unit								C	oml											line		2, 10 -		<u> </u>			
Opt.	Name	Retrofit	040	041	043	944	045	100	005	900	900	600	077	078	800	010	011	014	916	217	018	020	021	022	970	052	027	028	920	000	290	890	088	183
001	Rubidium Reference Oscillator		✓ ✓	✓	✓	✓	✓	X	*9																				7			1		+
002	High Stability Reference Oscillator		1	<b>√</b>	<b>√</b>	No	No	*9	X			No																		1	No N	10		
005	Analysis Bandwidth Extension to 31.25 MHz		1	<b>√</b>	<b>√</b>	1	No	Г		X	R	No																П	T	Т		Т	Т	$\top$
006	Analysis Bandwidth 10 MHz		<b>√</b>	<b>√</b>	✓	<b>✓</b>	<b>√</b>			U	X	U	U	U																		Ť	T	
009	Bandwidth Extension to 31.25 MHz for Millimeter-wave		No	No	No	No	<b>✓</b>	Г	No	No	R	X									No	No	No	No			No	No	No N	lo	T	N	l oN	No
077	Analysis Bandwidth Extension to 62.5 MHz	No	1	✓	✓	✓	✓			*5	R	*5	X																					
078	Analysis Bandwidth Extension to 125 MHz	No	1	✓	✓	<b>✓</b>	1			*5	R	*5	R	X														П		T		T	Т	$\top$
008	Preamplifier		✓	✓	✓	*1	*1						Ĭ		X																1	*1		
010	Phase Noise Measurement Function		<b>✓</b>	✓	✓	<b>✓</b>	1							Ĭ		X												П	T	T	T	T	T	$\top$
011	2ndary HDD		1	✓	✓	<b>✓</b>	<b>√</b>									Ì	X																	
014	Removable HDD, Win10	*13	1	✓	✓	<b>✓</b>	<b>√</b>											X												T		Т	Т	
016	Precompliance EMI Function		✓	✓	✓	<b>✓</b>	<b>√</b>												X															
017	Noise Figure Measurement Function		<b>√</b>	✓	✓	1	<b>✓</b>								U					X												U		
018	Audio Analyzer*4		1	✓	*7	No	No					No									X									1	No N	10		
020	3.6 GHz Vector Signal Generator		1	✓	*2	No	No					No										X	No			*11			*	2 1	No N	10 1	1 0	No
021	6 GHz Vector Signal Generator		<b>✓</b>	✓	*2	No	No					No										No	X			*11			*	2	No N	10 1	1 ov	No
022	Low Power Extension for Vector Signal Generator		1	✓	✓	No	No					No										F		X						1	No N	10 N	1 01	40
026	BER Measurement Function		1	✓	✓	1	✓																		X									
052	Internal Signal Generator Control Function	*12	<b>✓</b>	✓	*2	No	No															*	1			X			*	2		*	*11	
027	ARB Memory Upgrade 256 MSa for Vector Signal Generator		✓	✓	✓	No	No					No										F					M			1	No	10 ,	*3	*3
028	AWGN		<b>✓</b>	✓	✓	No	No					No										F						X		1	No	10 ,	*3	*3
029	Analog Function Extension for Vector Signal Generator*4	*8	<b>✓</b>	✓	No	No	No					No										F		R					X	۱ ۶	NoN	10 1	1 ov	No
066	Low Phase Noise Performance	No	<b>✓</b>	✓	*2	No	No					No										*	2			*2				⟨[r	No N	10	T	
067	Microwave Preselector Bypass		No	No	No	✓	✓		No												No	No	No	No			No	No	No N	lo	X	N	No	٧o
068	Microwave Preamplifier		No	No	No	*1	*1		No						*1						No	No	No	No			No	No	No N	lo		×Į١	No	٧o
088	3.6 GHz Analog Signal Generator*4		✓	✓	No	No	No					No										No	No	No		*11	*3	*3	No	1	No	10	X	U
189	Vector Function Extension for Analog Signal Generator Retrofit		✓	✓	No	No	No					No										No	No	No			*3	*3	No	1	No N	10	R	$\times$
182	CPU/Windows10 Upgrade Retrofit	*10	✓	✓	✓	✓	✓																											X

- \*1: Cannot be installed simultaneously MS2830A-008 and MS2830A-068/168. When MS2830A-168 is added to Signal Analyzer with MS2830A-008, only MS2830A-168 becomes effective.
- \*2: MS2830A-043 can implement only either MS2830A-020/021 or MS2830A-066.
- \*3: MS2830A-027 and MS2830A-028 are not used in analog signal generator (MS2830A-088/188).

  After vector function (MS2830A-189) was added, the vector signal generator function can add MS2830A-027 and MS2830A-028.
- \*4: Requires MX269018A.
- \*5: MS2830A-040/041/043/044 require MS2830A-005.

MS2830A-045 requires MS2830A-009.

- $\star$ 6: An image response is received when setting the bandwidth to more than 31.25 MHz.
  - This can be used when not inputting a signal frequency outside the MS2830A analysis bandwidth (125 MHz max.).

The Signal Analyzer MS2690A is recommended for other measurement purposes.

- \*7: The MS2830A-018 can be installed with MS2830A-043 but cannot be installed simultaneously with a signal generator (MS2830A-088/020/021/029) because MS2830A-066 is required. Consequently, analog wireless Rx tests cannot be performed using the same main unit when the MS2830A-018 and MS2830A-043 are combined.
- \*8: Please contact our sales representative when requesting retrofitting.
- \*9: The Rubidium Reference Oscillator can be retrofitted to MS2830A-040/041/043 with installed High Stability Reference Oscillator.

In this case, the Rubidium Reference Oscillator is functional.

\*10: Replace the MS2830A CPU board with either Windows Embedded Standard 2009 (Windows XP) or Windows Embedded Standard 7 (Windows 7) and upgrade the operating system to Windows 10 IoT Enterprise LTSC2019.

Windows XP is installed in MS2830A units ordered until August 2016.

- Windows 7 is installed in MS2830A units ordered from September 2016 which have a label indicating C1 attached near the serial number.
- Windows 10 is installed in MS2830A units ordered from September 2020 and has a label indicating C2 attached near the serial number.
- \*11: Installing the MS2830A-052 requires any of the MS2830A-020/120, 021/121, or 088/188 options.
- \*12: When retrofitting signal generator-linked functions (MS2830A-352), the license is delivered on an accessory DVD which is used to install the license in the MS2830A. It is not necessary to return the MS2830A to Anritsu for upgrading.
- \*13: The CPU/Windows10 Upgrade Retrofit MS2830A-182/282 option is required when the MS2830A OS is not Windows 10.

## **Options Configuration Guide**

#### **Software**

✓ = Can be installed, No = Cannot be installed, R = Require, U = Upgrade

		Addition to Main unit					А	nalys	is Ban	dwid	th	
Model	Name		14	043	044	045	900	900	600	077	078	Note
MX269011A	W-CDMA/HSPA Downlink Measurement Software	✓	✓	✓	✓	✓		R				
MX269012A	W-CDMA/HSPA Uplink Measurement Software	✓	✓	✓	✓	✓		R				
MX269013A	GSM/EDGE Measurement Software	✓	✓	✓	<b>✓</b>	✓		R				
MX269013A-001	EDGE Evolution Measurement Software	✓	✓	✓	✓	✓		R				Requires MX269013A
MX269015A	TD-SCDMA Measurement Software	✓	✓	✓	<b>✓</b>	✓		R				
MX269017A	Vector Modulation Analysis Software	<b>~</b>	<b>✓</b>	~	<b>√</b> *3	<b>√</b> *3	U	R	U*1	U	U	U: Upgrade of the phase noise performance (MS2830A-066) (Measured signal: Frequency <3.6 GHz, Bandwidth <1 MHz)
MX269018A	Analog Measurement Software	<b>√</b>	<b>√</b>	<b>√</b> *2	No	No			No			Requires MS2830A-066 and A0086D (See MX2690xxA series Measurement Software catalog for detail) Note) MS2830A-043 cannot implement a signal generator for Rx test (Because MS2830A-066 is required)
MX269020A	LTE Downlink Measurement Software	✓	✓	<b>✓</b>	✓	✓	R	R	R*1			
MX269020A-001	LTE-Advanced FDD Downlink Measurement Software	✓	✓	✓	✓	✓	R	R	R*1	U	U	Requires MX269020A
MX269021A	LTE Uplink Measurement Software	✓	✓	<b>✓</b>	✓	✓	R	R	R*1			
MX269021A-001	LTE-Advanced FDD Uplink Measurement Software	✓	✓	✓	✓	✓	R	R	R*1	U	U	Requires MX269021A
MX269022A	LTE TDD Downlink Measurement Software	✓	✓	<b>✓</b>	✓	✓	R	R	R*1			
MX269022A-001	LTE-Advanced TDD Downlink Measurement Software	✓	✓	✓	✓	✓	R	R	R*1	U	U	Requires MX269022A
MX269023A	LTE TDD Uplink Measurement Software	✓	✓	<b>✓</b>	✓	✓	R	R	R*1			
MX269023A-001	LTE-Advanced TDD Uplink Measurement Software	✓	✓	✓	✓	✓	R	R	R*1	U	U	Requires MX269023A
MX269024A	CDMA2000 Forward Link Measurement Software	✓	✓	✓	✓	✓		R				
MX269024A-001	All Measure Function	✓	✓	✓	✓	✓		R				Requires MX269024A
MX269026A	EV-DO Forward Link Measurement Software	✓	✓	✓	✓	✓		R				
MX269026A-001	All Measure Function	✓	✓	✓	✓	✓		R				Requires MX269026A
MX269028A	WLAN (802.11) Measurement Software	✓	✓	<b>✓</b>	✓	1	R	R	R*1			
MX269028A-001	802.11ac (80 MHz) Measurement Software	✓	✓	✓	<b>✓</b>	<b>✓</b>	R	R	R*1	R	R	Only for MS2830A. Requires MX269028A
MX269030A	W-CDMA BS Measurement Software	✓	✓	<b>✓</b>	<b>√</b>	<b>√</b>		R				

 $<sup>\</sup>verb§+1: MS2830A-045 cannot be installed MS2830A-005. Add MS2830A-009 in substitution for MS2830A-005.$ 

<sup>\*2:</sup> MS2830A-043 can implement only either MS2830A-020/021 or MS2830A-066.

By the system that MS2830A-066 is necessary, MS2830A-020/021 is not added to MS2830A-043.

<sup>\*3:</sup> By the measurement of the narrowband signal, add MS2830A-066. (Channel bandwidth: x kHz to 100 kHz) MS2830A-044/045 cannot be installed MS2830A-066.

## **Ordering Information**


Please specify the model/order number, name and quantity when ordering.

The names listed in the chart below are Order Names. The actual name of the item may differ from the Order Name.

Model/Order No	Name
MC2020A	Main Unit
MS2830A	Signal Analyzer
	Standard Accessories Power Cord: 1 pc
P0031A	
Z0541A	
20341A	USB Mouse: 1 pc
	(Application software, instruction manual CD-ROM): 1 pc
	Options
MS2830A-044	26.5 GHz Signal Analyzer
1113203071 011	(General coaxial cables with N-connectors support frequencies
	up to 18 GHz. When measuring frequencies from 18 GHz to
	26.5 GHz, use the N-SMA Adapter J1398A to connect a
	coaxial cable with either a 3.5-mm connector or K-connector.)
MS2830A-045	43 GHz Signal Analyzer
MS2830A-001	Rubidium Reference Oscillator
MS2830A-005*1	Analysis Bandwidth Extension to 31.25 MHz
MS2830A-006	Analysis Bandwidth 10 MHz
MS2830A-008	Preamplifier
MS2830A-009*2	Bandwidth Extension to 31.25 MHz for Millimeter-wave
MS2830A-010	Phase Noise Measurement Function
MS2830A-011	2ndary HDD
MS2830A-014	Removable HDD, Win10
MS2830A-016	Precompliance EMI Function
MS2830A-017	Noise Figure Measurement
MS2830A-026*3	BER Measurement Function
	(AUX Conversion Adapter J1556A as standard accessory)
MS2830A-067	Microwave Preselector Bypass
MS2830A-068	Microwave Preamplifier
MS2830A-077*4	Analysis Bandwidth Extension to 62.5 MHz
MS2830A-078*5	Analysis Bandwidth Extension to 125 MHz
MC2020A 101	Retrofit Options
MS2830A-101	Rubidium Reference Oscillator Retrofit
MS2830A-105*1 MS2830A-106	Analysis Bandwidth Extension to 31.25 MHz Retrofit
MS2830A-108	Analysis Bandwidth 10 MHz Retrofit  Preamplifier Retrofit
MS2830A-109*2	Bandwidth Extension to 31.25 MHz for Millimeter-wave Retrofit
MS2830A-110	Phase Noise Measurement Function Retrofit
MS2830A-111	2ndary HDD Retrofit
MS2830A-311	2ndary HDD Retrofit
MS2830A-114*6	Removable HDD, Win10 Retrofit
MS2830A-214*6	Removable HDD, Win10 Retrofit
MS2830A-116	Precompliance EMI Function Retrofit
MS2830A-117	Nose Figure Measurement Retrofit
MS2830A-126*3	BER Measurement Function Retrofit
	(AUX Conversion Adapter J1556A as standard accessory)
MS2830A-167	Microwave Preselector Bypass Retrofit
MS2830A-168	Microwave Preamplifier Retrofit
MS2830A-182* <sup>7</sup>	CPU/Windows10 Upgrade Retrofit
MS2830A-282* <sup>7</sup>	CPU/Windows10 Upgrade Retrofit
	Software Options
	CD-ROM with License and Operation manuals
MX269011A	W-CDMA/HSPA Downlink Measurement Software
MX269012A	W-CDMA/HSPA Uplink Measurement Software
MX269013A	GSM/EDGE Measurement Software
MX269013A-001	EDGE Evolution Measurement Software (Requires MX269013A)
MX269015A	TD-SCDMA Measurement Software
MX269017A	Vector Modulation Analysis Software
MX269020A	LTE Downlink Measurement Software
MX269020A-001	LTE-Advanced FDD Downlink Measurement Software
MAY260021 A	(Requires MX269020A)
MX269021A	LTE Uplink Measurement Software
	LTE-Advanced FDD Uplink Measurement Software
MX269021A-001	
	(Requires MX269021A)
MX269021A-001 MX269022A MX269022A-001	

Model/Order No	from the Order Name	2.
MX269023A-001         LTE-Advanced TDD Uplink Measurement Software (Requires MX26902AA)           MX269024A-010         Kequires MX26902AA)           MX269026A         EV-DO Forward Link Measurement Software           MX269028A         All Measure Function (Requires MX26902AA)           MX269028A         All Measure Function (Requires MX26902BA)           MX269030A         W-CDM BS Measurement Software           MX26903A-01         B02.11a (80 MHz) Measurement Software (Requires MX269028A)           MX26903A-0-1         W-CDMA BS Measurement Software (Requires MX269028A)           MX26903A-0-1         Warranty Service           MS2830A-ES210         Syears Extended Warranty Service           MS2830A-ES310         Syears Extended Warranty Service           MS2830A-ES310         Syears Extended Warranty Service           MS2830A-ES310         MS2690A/MS2801A/MS2691A/MS2692A and           MS2830A-MS280A Operation Manual (Main Unit Remote Control)           W3334AE         MS2690A/MS2801A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W2853AE         MS2690A/MS2801A/MS280A Operation Manual (Signal Analyzer Function Operation)           W2853AE         MS2690A/MS2801A/MS280A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2690A/MS2801A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3285AE <td>Model/Order No</td> <td>Name</td>	Model/Order No	Name
Requires MX269023A  CDM2200 Forward Link Measurement Software	MX269023A	LTE TDD Uplink Measurement Software
MX269024A-001         MX269026A-001         All Measure Function (Requires MX269026A)           MX269026A-001         MX269026A-001         MX269026A-001           MX269028A         WLAN (802.11) Measurement Software           MX269028A-001         MX269028A         WLAN (802.11) Measurement Software (Requires MX269028A)           MX269028A         WCDMA BS Measurement Software           MX2830A-ES210         Maranty Service           MS2830A-ES310         3 years Extended Warranty Service           MS2830A-ES310         5 years Extended Warranty Service           MS2830A-ES310         MS2830A Operation Manual (Main Unit Operation)           W3334AE         MS2830A Operation Manual (Main Unit Operation)           W3335AE         MS2830A Operation Manual (Main Unit Operation)           W3335AE         MS2830A/MS2840A/MS2850A Operation Manual (Main Unit Remote Control)           W3335AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W2853AE         MS2690A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W3336AE         MS2690A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation)           W3336AE         MS2690A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation)           W3855AE         MS2690A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation) <t< td=""><td>MX269023A-001</td><td></td></t<>	MX269023A-001	
MX269024A-001         All Measure Function (Requires MX269024A)           MX269026A-001         MX269026A-001           MX269028A-01         All Measure Function (Requires MX269026A)           MX26902BA-01         All Measure Function (Requires MX269026A)           MX26902BA-01         WAN (802.11) Measurement Software           MX26902BA-01         W-CDMA BS Measurement Software           MX2830A-ES210         W-CDMA BS Measurement Software           MS2830A-ES310         Syears Extended Warranty Service           MS2830A-ES310         Syears Extended Warranty Service           MS2830A-ES310         Application Parts           Following operation manuals provided as hard copy           W3334AE         MS2830A/MS2840A/MS2850A Operation Manual (Main Unit Operation)           W2851AE         MS2830A/MS2840A/MS2850A Operation Manual (Main Unit Remote Control)           W3335AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W2853AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation)           W3255AE         MS2690A/MS2840A/MS2850A Operation Manual (Pase Noise Measurement Function Operation)      <	N 43/250024A	
MX269026A-001         KI/ Hoasure Function (Requires MX269026A)           MX269028A MX269028A MX269028A MX269028A MX269028A MX269028A ON MX269030A         WLAN (802.11) Measurement Software (Requires MX269028A)           MX26903A WCDMA S Measurement Software (Sequires MX269028A) WCDMA BS Measurement Software         Warranty Service           MS2830A-ES310         Syears Extended Warranty Service           MS2830A-ES310         Application Parts Following operation manuals provided as hard copy           W3334AE         MS2690A/MS2691A/MS2692A and           W2851AE         MS2690A/MS2691A/MS2690A Operation Manual (Main Unit Operation)           W3335AE         MS2830A/MS2840A/MS2850A Operation Manual (Main Unit Remote Control)           W3335AE         MS2690A/MS2691A/MS2691A Operation Manual (Signal Analyzer Function Operation)           W2853AE         MS2690A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)           W3855AE         MS260A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3117AE         MS260A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)           W3118AE         MS260A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)		
MX269026A-001         All Measure Function (Requires MX269026A)           MX269028A-001         WLAN (802.11) Measurement Software           MX269030A         WCDMA BS Measurement Software (Requires MX269028A)           MS2830A-ES310         Warranty Service           MS2830A-ES310         3 years Extended Warranty Service           MS2830A-ES310         3 years Extended Warranty Service           MS2830A-ES310         5 years Extended Warranty Service           MS2830A-ES310         5 years Extended Warranty Service           MS2830A-ES310         Application Parts           Following operation manuals provided as hard copy           W3334AE         MS2830A Operation Manual (Main Unit Operation)           W2851AE         MS2830A/MS2840A/MS2850A Operation Manual           (Signal Analyzer Function Operation)         MS2830A/MS2840A/MS2850A Operation Manual           (Signal Analyzer Function Remote Control)         MS2830A/MS2840A/MS2850A Operation Manual           (Signal Analyzer Function Remote Control)         MS2830A/MS2840A/MS2850A Operation Manual           (Spectrum Analyzer Function Remote Control)         MS2830A/MS2840A/MS2850A Operation Manual           (Spectrum Analyzer Function Remote Control)         MS2690A/MS2691A/MS2692A and           MS2690A/MS2691A/MS2692A and         MS2690A/MS2691A/MS2692A and           MS2690A/MS2691A/MS2850A Operation Manual		
MX269028A         WLAN (802.11) Measurement Software           MX269030A         W-CDMA BS Measurement Software (Requires MX269028A)           MX269030A         W-CDMA BS Measurement Software           MS2830A-ES210         Warranty Service           MS2830A-ES510         3 years Extended Warranty Service           MS2830A-ES510         5 years Extended Warranty Service           MS2830A-MS2840A-MS2850A Operation Manual (Main Unit Queration)         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W3335AE         MS2690A/MS2691A/MS2690A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)           W3336AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2830A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3117AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2830A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Co		
MX269028A-001         802.11ac (80 MHz) Measurement Software (Requires MX269028A)           MX269030A         W-CDMA BS Measurement Software           MS2830A-ES310         3 years Extended Warranty Service           MS2830A-ES310         3 years Extended Warranty Service           MS2830A-ES310         5 years Extended Warranty Service           Application Parts         Following operation manual provided as hard copy           W3334AE         MS2830A Operation Manual (Main Unit Operation)           W2851AE         MS2690A/MS2691A/MS2692A and           MS2830A/MS2840A/MS2850A Operation Manual (Main Unit Remote Control)           W3335AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W3833AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W333AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W3833AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)           W333AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)           W381AE         MS2830A/MS280A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W311AE         MS2830A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)           W3655AE         MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise		
Warranty Service         2 years Extended Warranty Service           MS2830A-ES310         3 years Extended Warranty Service           MS2830A-ES510         5 years Extended Warranty Service           Application Parts         Following operation manuals provided as hard copy           W3334AE         MS2830A Operation Manual (Main Unit Operation)           W2851AE         MS2690A/MS2691A/MS2850A Operation Manual           (Main Unit Remote Control)         W3335AE           W52830A/MS2840A/MS2850A Operation Manual         (Signal Analyzer Function Operation)           W2853AE         MS2690A/MS2691A/MS269DA Operation Manual           (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual           (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual           (Spectrum Analyzer Function Remote Control)           W3336AE         MS2690A/MS2691A/MS2692A and           MS2690A/MS2691A/MS2850A Operation Manual         (Spectrum Analyzer Function Remote Control)           W3117AE         MS2690A/MS2680A/MS2850A Operation Manual           (Phase Noise Measurement Function Operation)           W3118AE         MS2830A/MS2860A/MS2850A Operation Manual           (Phase Noise Measurement Function Remote Control)           W3655AE         MS	MX269028A-001	
MS2830A-ES310         2 years Extended Warranty Service           MS2830A-ES310         3 years Extended Warranty Service           MS2830A-ES310         5 years Extended Warranty Service           MS2830A-ES310         5 years Extended Warranty Service           Application Parts         Following operation manuals provided as hard copy           W3334AE         MS2830A Operation Manual (Main Unit Operation)           W2851AE         MS2690A/MS2691A/MS2692A and           MS2830A/MS2840A/MS2850A Operation Manual         (Signal Analyzer Function Operation)           W3335AE         MS2690A/MS2691A/MS2692A and           MS2830A/MS2840A/MS2850A Operation Manual         (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual           (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual           (Spectrum Analyzer Function Remote Control)           W2855AE         MS2690A/MS2691A/MS2692A and           MS2830A/MS2840A/MS2850A Operation Manual         (Spectrum Analyzer Function Remote Control)           W3117AE         MS2690A/MS2691A/MS2692A and           MS2830A/MS2840A/MS2850A Operation Manual         (Phase Noise Measurement Function Remote Control)           W3655AE         MS2690A/MS2691A/MS2692A and           MS2690A/MS2691A/MS2692A and	MX269030A	W-CDMA BS Measurement Software
MS2830A-ES310         3 years Extended Warranty Service           MS2830A-ES510         5 years Extended Warranty Service           Application Parts         Following operation manuals provided as hard copy           W3334AE         MS2830A Operation Manual (Main Unit Operation)           W2851AE         MS2830A/MS2840A/MS2850A Operation Manual (Main Unit Remote Control)           W3335AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W2853AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation)           W2855AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)           W3117AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3118AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)           W3655AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Noise Figure Measurement Function Operation)           W3655AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-O17 Operation Manual (Noise Figure Measurement Function Remote Control)           W3098AE         MX26901A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-O17 Operation Manual (Noise Figure Measurem		_
MS2830A-ES510         5 years Extended Warranty Service           Application Parts         Following operation manuals provided as hard copy           W2851AE         MS2830A Operation Manual (Main Unit Operation)           W2851AE         MS2690A/MS2691A/MS2692A and           MS2830A/MS2840A/MS2850A Operation Manual (Main Unit Remote Control)           W3335AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W2853AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)           W3336AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3117AE         MS2690A/MS2691A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3118AE         MS2690A/MS2840A/MS2850A Operation Manual (Noise Figure Measurement Function Remote Control)           W3655AE         MS2690A/MS2840A/MS2850A-Operation Manual (Noise Figure Measurement Function Remote Control)           W3098AE         MS2690A/MS2840A/MS2850A-Operation Manual (Noise Figure Measurement Function Remote Control)           W3098AE <td></td> <td>,</td>		,
Application Parts Following operation manuals provided as hard copy MS2830A Operation Manual (Main Unit Operation) MS2830A Operation Manual (Main Unit Operation) MS2830A/MS2840A/MS2850A Operation Manual (Main Unit Remote Control) MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation) W2853AE MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control) W3336AE MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control) W3336AE MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation) W2855AE MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation) W32850A MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control) MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation) W3118AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation) W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control) W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation) W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control) W3099AE MX269011A Operation Manual (Operation) W3090AE MX269013A Operation Manual (Operation) W3091AA MX269013A Operation Manual (Remote Control) W30060AE MX269013A Operation Manual (Remote Control) W3044AE MX26902AO Operation Manual (Remote Control) W3044AE MX26902AO Operation Manual (Operation) W3065AE MX26902AO Operation Manua		
Following operation manuals provided as hard copy W3334AE MS2830A Operation Manual (Main Unit Operation) M52830A/M52891A/M52691A/M52692A and M52830A/M52840A/M52850A Operation Manual (Main Unit Remote Control) W3335AE M52890A/M52850A Operation Manual (Signal Analyzer Function Operation) W2853AE M52690A/M52691A/M52692A and M52830A/M52840A/M52850A Operation Manual (Signal Analyzer Function Remote Control) W3336AE M52830A/M52840A/M52850A Operation Manual (Signal Analyzer Function Operation) W3336AE M52830A/M52840A/M52850A Operation Manual (Spectrum Analyzer Function Operation) W2855AE M52890A/M52691A/M52692A and M52830A/M52840A/M52850A Operation Manual (Spectrum Analyzer Function Remote Control) W3117AE M52690A/M52691A/M52692A and M52830A/M52840A/M52850A Operation Manual (Phase Noise Measurement Function Operation) W3118AE M52690A/M52691A/M52692A and M52830A/M52840A/M52850A Operation Manual (Phase Noise Measurement Function Remote Control) W3655AE M52690A/M52691A/M52692A and M52830A/M52840A/M52850A-O17 Operation Manual (Noise Figure Measurement Function Operation) W3656AE M52690A/M52691A/M52692A and M52830A/M52840A/M52850A-O17 Operation Manual (Noise Figure Measurement Function Operation) W3098AE M52691A/M52691A/M52692A and M52830A/M52840A/M52850A-O17 Operation Manual (Noise Figure Measurement Function Remote Control) W3098AE M52691A/M52691A/M52692A and M52890A/M5280A/M52850A-O17 Operation Manual (Noise Figure Measurement Function Remote Control) W3098AE M52691A Operation Manual (Operation) W3098AE M52691A Operation Manual (Remote Control) W3098AE M52691A Operation Manual (Operation) W3061AE M52691A Operation Manual (	WIS283UA-ES51U	
W3334AE         MS2830A Operation Manual (Main Unit Operation)           W2851AE         MS2690A/MS2840A/MS2850A Operation Manual (Main Unit Remote Control)           W3335AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W2853AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation)           W2855AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)           W3117AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3118AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3655AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Noise Figure Measurement Function Operation)           W3655AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation)           W3656AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)           W3098AE         MX269011A Operation Manual (Remote Control)           W3098AE         MX269011A Operation Manual (Operation)		••
W2851AE         MS2690A/MS2691A/MS2692A and           MS2830A/MS2840A/MS2850A Operation Manual (Main Unit Remote Control)           W3335AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W2853AE         MS2690A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation)           W2855AE         MS2690A/MS2691A/MS26950A Operation Manual (Spectrum Analyzer Function Operation)           W3117AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3117AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3118AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2850A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)           W3655AE         MS2690A/MS2691A/MS2850A Operation Manual (Noise Figure Measurement Function Operation)           W3655AE         MS2690A/MS2840A/MS2850A-O17 Operation Manual (Noise Figure Measurement Function Remote Control)           W3355AE         MS2690A/MS2691A/MS2850A-O17 Operation Manual (Noise Figure Measurement Function Remote Control)           W3098AE         MS26901A Operation Manual (Operation)           W3099AE         MS26901A Operation Manual (Operation)           W3099AE         MS26901A Operation Manual (Operation) </td <td>W3334AE</td> <td></td>	W3334AE	
(Main Unit Remote Control)  W52830A/M52840A/M52850A Operation Manual (Signal Analyzer Function Operation)  W2853AE  M52690A/M52691A/M52692A and M52830A/M52840A/M52850A Operation Manual (Signal Analyzer Function Remote Control)  W3336AE  M52830A/M52840A/M52850A Operation Manual (Spectrum Analyzer Function Operation)  W2855AE  M52690A/M52691A/M52692A and M52830A/M52840A/M52850A Operation Manual (Spectrum Analyzer Function Operation)  W3117AE  M52690A/M52691A/M52692A and M52830A/M52840A/M52850A Operation Manual (Spectrum Analyzer Function Remote Control)  W3118AE  M52690A/M52691A/M52692A and M52830A/M52840A/M52850A Operation Manual (Phase Noise Measurement Function Operation)  W3655AE  M52690A/M52691A/M52692A and M52830A/M52840A/M52850A Operation Manual (Phase Noise Measurement Function Remote Control)  W3655AE  M52690A/M52691A/M52692A and M52830A/M52840A/M52850A-017 Operation Manual (Noise Figure Measurement Function Operation)  W3656AE  M52690A/M52691A/M52692A and M52830A/M52840A/M52850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)  W3098AE  MX26901A Operation Manual (Operation)  W3098AE  MX269011A Operation Manual (Operation)  W3098AE  MX269011A Operation Manual (Remote Control)  W3098AE  MX269013A Operation Manual (Operation)  W3061AE  MX269013A Operation Manual (Operation)  W3010AE  MX269013A Operation Manual (Operation)  W3045AE  MX269013A Operation Manual (Operation)  W3045AE  MX269013A Operation Manual (Operation)  W3045AE  MX269015A Operation Manual (Operation)  W3045AE  MX269017A Operation Manual (Operation)  W3045AE  MX26902A Operation Manual (Operation)  W3050AE  MX26902A Operation Manual (Operation)  W320AE  MX26902AO Operation Manual (Operatio		
W3335AE         MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Operation)           W2853AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation)           W2855AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)           W3117AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3118AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)           W3655AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation)           W3656AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)           W3098AE         MX269011A Operation Manual (Operation)           W3099AE         MX269011A Operation Manual (Operation)           W3060AE         MX269011A Operation Manual (Remote Control)           W3010AE         MX269013A Operation Manual (Operation)           W3011AE         MX269013A Operation Manual (Remote Control)           W3010AE         MX269013A Operation Manual (Operation)           W3014AE         MX269017A Operation Manual (Operation) <td></td> <td>MS2830A/MS2840A/MS2850A Operation Manual</td>		MS2830A/MS2840A/MS2850A Operation Manual
W2853AE         MS2690A/MS2691A/MS2692A and           MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation)           W2855AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)           W3117AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3118AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)           W3655AE         MS2690A/MS2691A/MS2692A and MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation)           W3656AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)           W3098AE         MX269011A Operation Manual (Operation)           W3099AE         MX269011A Operation Manual (Operation)           W3060AE         MX269011A Operation Manual (Remote Control)           W3101AE         MX269013A Operation Manual (Operation)           W3061AE         MX269013A Operation Manual (Remote Control)           W3060AE         MX269013A Operation Manual (Operation)           W3061AE         MX269017A Operation Manual (Remote Control)           W3306AE         MX269017A Op		(Main Unit Remote Control)
W2853AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control)           W3336AE         MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation)           W2855AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)           W3117AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3118AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)           W3655AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation)           W3656AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)           W309AE         MX26901A Operation Manual (Operation)           W309AE         MX269011A Operation Manual (Remote Control)           W309AE         MX269011A Operation Manual (Remote Control)           W309AE         MX269012A Operation Manual (Remote Control)           W309AE         MX269013A Operation Manual (Remote Control)           W300ALAE         MX269013A Operation Manual (Operation)           W301AE         MX269013A Operation Manual (Remote Control)           W306AE         MX269013A Operation Manual (Remote Control)	W3335AE	•
MS2830A/MS2840A/MS2850A Operation Manual (Signal Analyzer Function Remote Control) MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation) W2855AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2692A and MS2830A/MS2691A/MS2692A and MS2830A/MS2691A/MS2692A and MS2830A/MS2840A/MS2692A and MS2830A/MS2840A/MS2692A and MS2830A/MS2840A/MS2692A and MS2830A/MS2840A/MS2692A and MS2830A/MS2840A/MS2692A and MS2830A/MS2840A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control) W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-O17 Operation Manual (Noise Figure Measurement Function Operation) W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-O17 Operation Manual (Noise Figure Measurement Function Remote Control) W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Remote Control) W3060AE MX269011A Operation Manual (Remote Control) W3060AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Remote Control) W3304AE MX269013A Operation Manual (Operation) W3304AE MX269015A Operation Manual (Remote Control) W3304AE MX269015A Operation Manual (Remote Control) W3305AE MX269015A Operation Manual (Operation) W3305AE MX269017A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3305AE MX269017A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3305AE MX269017A Operation Manual (Operation) W3305AE MX269017A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3305AE MX26902A Operation Manual (Operation) W3305AE MX26902A Operation Manual (Remote Control) W3209AE MX26902A Operation Manual (Operation) W3209AE MX26902A Operation Manual (Operation) W3209AE MX26902A Operation Manual (Operation) W320AE MX26902A Operation Manual (Operation) W320AE MX26902A Operation Manual (Operation) W320AE MX26902AO Operation Manual (Operation) W320AE MX26902AO Operatio		, ,
(Signal Analyzer Function Remote Control)  W3336AE  MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation)  W2855AE  MS2690A/MS2691A/MS2692A and  MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)  W3117AE  MS2690A/MS2691A/MS2692A and  MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)  W3118AE  MS2690A/MS2691A/MS2692A and  MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)  W3655AE  MS2690A/MS2691A/MS2692A and  MS2830A/MS2840A/MS2690A one  MS2830A/MS2840A/MS2690A operation Manual (Noise Figure Measurement Function Operation)  W3656AE  MS2690A/MS2691A/MS2692A and  MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation)  W3098AE  MX26901A Operation Manual (Operation)  W3099AE  MX269011A Operation Manual (Operation)  W3091AC  W3091A Operation Manual (Remote Control)  W3001AE  MX269012A Operation Manual (Remote Control)  W3100AE  MX269013A Operation Manual (Operation)  W3101AE  MX269013A Operation Manual (Pemote Control)  W3045AE  MX269015A Operation Manual (Pemote Control)  W3305AE  MX269015A Operation Manual (Remote Control)  W3305AE  MX269017A Operation Manual (Operation)  W3305AE  MX269017A Operation Manual (Remote Control)  W3306AE  MX269017A Operation Manual (Remote Control)  W3306AE  MX269017A Operation Manual (Remote Control)  W3305AE  MX269017A Operation Manual (Remote Control)  W3305AE  MX269017A Operation Manual (Remote Control)  W3305AE  MX26902A Operation Manual (Remote Control)  W3305AE  MX26902A Operation Manual (Remote Control)  W3201AE  MX26902A Operation Manual (Remote Control)  W3203AE  MX26902A Operation Manual (Operation)  W3204AE  MX26902A Operation Manual (Remote Control)  W3204AE  MX26902A Operation Manual (Remote Control)  W320AE  MX26902A Operation Manual (Operation)  W320AE  MX26902A	W2853AE	
W3336AE MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Operation) W32690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control) W3117AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation) W3118AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control) W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control) W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation) W3656AE MS26901A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control) W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Operation) W3060AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Remote Control) W3101AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W33045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Remote Control) W3015AE MX26902A Operation Manual (Remote Control) W3015AE MX26902A Operation Manual (Remote Control) W3015AE MX26902A Operation Manual (Operation) W3025AE MX26902A Operation Manual (Operation) W30305AE MX26902A Operation Manual (Operation) W3045AE MX26902A Operation Manual (Operation) W3045AE MX26902A Operation Manual (Remote Control) W3015AE MX26902A Operation Manual (Remote Control) W3015AE MX26902A Operation Manual (Remote Control) W320AE MX26902A Operation Manual (Remote Control) W320AE MX26902A Operation Manual (Remote Control) W320AE MX26902A Operation Manual (Operation) W320AE MX26902A Operation Manual (Operation) W320AE MX26902AB Oper		
(Spectrum Analyzer Function Operation)  W2855AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control)  W3117AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)  W3118AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)  W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-O17 Operation Manual (Noise Figure Measurement Function Operation)  W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-O17 Operation Manual (Noise Figure Measurement Function Operation)  W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-O17 Operation Manual (Noise Figure Measurement Function Remote Control)  W3098AE MX269011A Operation Manual (Remote Control)  W3099AE MX269011A Operation Manual (Remote Control)  W3061AE MX269012A Operation Manual (Remote Control)  W3100AE MX269013A Operation Manual (Remote Control)  W3101AE MX269013A Operation Manual (Remote Control)  W3044AE MX269013A Operation Manual (Remote Control)  W3305AE MX269017A Operation Manual (Remote Control)  W3305AE MX26902A Operation Manual (Remote Control)  W3209AE MX26902A Operation Manual (Remote Control)  W3209AE MX26902A Operation Manual (Remote Control)  W3209AE MX26902A Operation Manual (Remote Control)  W3201AE MX26902A Operation Manual (Remote Control)  W3201AE MX26902A Operation Manual (Remote Control)  W3201AE MX26902AA Operation Manual (R	W3336AF	
W2855AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Spectrum Analyzer Function Remote Control) W3117AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation) W3118AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control) W3655AE MS2690A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control) W3655AE MS2690A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation) W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control) W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Remote Control) W3090AE MX269012A Operation Manual (Remote Control) W30061AE MX269013A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Remote Control) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Remote Control) W3045AE MX269015A Operation Manual (Remote Control) W3045AE MX269017A Operation Manual (Remote Control) W3055AE MX269017A Operation Manual (Remote Control) W3055AE MX269020A Operation Manual (Remote Control) W3055AE MX269021A Operation Manual (Remote Control) W3055AE MX269021A Operation Manual (Remote Control) W3209AE MX269021A Operation Manual (Remote Control) W3209AE MX26902A Operation Manual (Remote Control) W3201AE MX26902AA Operation Manual (Operation) W3201AE MX26902AA Operation Manual (Operation) W3201AE MX26902AA Operation Manual (Operation) W3201AE MX26902AA O	VV3330/1E	· '
(Spectrum Analyzer Function Remote Control)  M32690A/MS2690A/MS2691A/MS2692A and MS2630A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)  W3118AE  MS2690A/MS2691A/MS2692A and MS2630A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)  W3655AE  MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation)  W3656AE  MS2690A/MS2840A/MS2692A and MS2830A/MS2840A/MS2692A and MS2830A/MS2840A/MS2692A and MS2630A/MS2840A/MS2692A and MS26301A/MS2840A/MS2692A and MS26301A/MS2840A/MS2690A-017 Operation Manual (Noise Figure Measurement Function Remote Control)  W3098AE  MX269011A Operation Manual (Operation)  W3099AE  MX269011A Operation Manual (Remote Control)  W3060AE  MX269012A Operation Manual (Remote Control)  W3100AE  MX269013A Operation Manual (Remote Control)  W3101AE  MX269013A Operation Manual (Remote Control)  W3044AE  MX269015A Operation Manual (Remote Control)  W3305AE  MX269015A Operation Manual (Remote Control)  W3305AE  MX269017A Operation Manual (Remote Control)  W3305AE  MX269017A Operation Manual (Remote Control)  W3014AE  MX269020A Operation Manual (Remote Control)  W3015AE  MX269020A Operation Manual (Remote Control)  W3015AE  MX269020A Operation Manual (Remote Control)  W3015AE  MX269020A Operation Manual (Remote Control)  W3209AE  MX269021A Operation Manual (Remote Control)  W3209AE  MX269023A Operation Manual (Remote Control)  W3521AE  MX269023A Operation Manual (Remote Control)  W3522AE  MX269023A Operation Manual (Remote Control)  W3201AE  MX26902AO Operation Manual (Remote Control)  W3201AE  MX26902BA Operation Manual (Remote Control)  W3203AE  MX26902BA Operatio	W2855AE	,
W3117AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)           W3118AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)           W3655AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation)           W3656AE         MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)           W3098AE         MX269011A Operation Manual (Operation)           W3099AE         MX269011A Operation Manual (Remote Control)           W3090AE         MX269011A Operation Manual (Remote Control)           W3060AE         MX269012A Operation Manual (Remote Control)           W3100AE         MX269013A Operation Manual (Remote Control)           W310AE         MX269013A Operation Manual (Remote Control)           W3045AE         MX269015A Operation Manual (Remote Control)           W3045AE         MX269015A Operation Manual (Remote Control)           W3305AE         MX269015A Operation Manual (Remote Control)           W3305AE         MX269017A Operation Manual (Remote Control)           W3305AE         MX269017A Operation Manual (Remote Control)           W3305AE         MX26901A Operation Manual (Remote Control)           W3305AE         MX26902A Operation Manual		MS2830A/MS2840A/MS2850A Operation Manual
MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Operation)  W3118AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)  W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation)  W3656AE MS2690A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)  W3098AE MS26901A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)  W3098AE MX269011A Operation Manual (Perote Control)  W3098AE MX269011A Operation Manual (Remote Control)  W3090AE MX269011A Operation Manual (Remote Control)  W30061AE MX269012A Operation Manual (Operation)  W3100AE MX269013A Operation Manual (Remote Control)  W3101AE MX269013A Operation Manual (Remote Control)  W3044AE MX269015A Operation Manual (Operation)  W3305AE MX269015A Operation Manual (Remote Control)  W3305AE MX269015A Operation Manual (Operation)  W3306AE MX269017A Operation Manual (Operation)  W3014AE MX269017A Operation Manual (Operation)  W3014AE MX269020A Operation Manual (Remote Control)  W3015AE MX269021A Operation Manual (Remote Control)  W3015AE MX269021A Operation Manual (Remote Control)  W3209AE MX269021A Operation Manual (Remote Control)  W3201AE MX26902A Operation Manual (Remote Control)  W3201AE MX26902A Operation Manual (Remote Control)  W3521AE MX26902A Operation Manual (Remote Control)  W3521AE MX26902A Operation Manual (Remote Control)  W3201AE MX26902A Operation Manual (Remote Control)  W3521AE MX26902A Operation Manual (Remote Control)  W3201AE MX26902A Operation Manual (Remote Control)  W3201AE MX26902A Operation Manual (Remote Control)  W3201AE MX26902AA Operation Manual (Remote Control)  W3203AE MX26902AA Operation Manual (Remote Control)		(Spectrum Analyzer Function Remote Control)
(Phase Noise Measurement Function Operation)  MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control)  MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation)  W3656AE  MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)  W3098AE  MX269011A Operation Manual (Operation)  W3099AE  MX269011A Operation Manual (Operation)  W3091AE  MX269011A Operation Manual (Operation)  W3001AE  MX269012A Operation Manual (Operation)  W3100AE  MX269013A Operation Manual (Operation)  W3101AE  MX269013A Operation Manual (Remote Control)  W3044AE  MX269015A Operation Manual (Remote Control)  W3045AE  MX269015A Operation Manual (Remote Control)  W3305AE  MX269017A Operation Manual (Operation)  W3306AE  MX269017A Operation Manual (Operation)  W3014AE  MX269017A Operation Manual (Operation)  W3014AE  MX269020A Operation Manual (Operation)  W3015AE  MX269021A Operation Manual (Operation)  W3065AE  MX269021A Operation Manual (Remote Control)  W3015AE  MX269021A Operation Manual (Remote Control)  W3015AE  MX269021A Operation Manual (Remote Control)  W3209AE  MX269021A Operation Manual (Remote Control)  W3209AE  MX269023A Operation Manual (Remote Control)  W3201AE  MX269023A Operation Manual (Operation)  W3201AE  MX269023A Operation Manual (Remote Control)  W3201AE  MX269023A Operation Manual (Operation)  W3201AE  MX26902AO Operation Manual (Remote Control)  W3201AE  MX26902AO Operation Manual (Operation)  W3201AE	W3117AE	
W3118AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control) W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation) W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control) W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Remote Control) W3090AE MX269012A Operation Manual (Remote Control) W3060AE MX269012A Operation Manual (Operation) W3100AE MX269013A Operation Manual (Remote Control) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Remote Control) W3045AE MX269017A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Remote Control) W3306AE MX269017A Operation Manual (Remote Control) W33014AE MX269017A Operation Manual (Remote Control) W3015AE MX269017A Operation Manual (Remote Control) W3015AE MX269020A Operation Manual (Operation) W3064AE MX269020A Operation Manual (Operation) W3015AE MX269021A Operation Manual (Remote Control) W3209AE MX269021A Operation Manual (Remote Control) W3209AE MX269021A Operation Manual (Remote Control) W3210AE MX269023A Operation Manual (Remote Control) W3210AE MX269023A Operation Manual (Remote Control) W3210AE MX269023A Operation Manual (Remote Control) W3201AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Remote Control) W3203AE MX269028A Operation Manual (Remote Control)		•
MS2830A/MS2840A/MS2850A Operation Manual (Phase Noise Measurement Function Remote Control) W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation) W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control) W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Remote Control) W3060AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Operation) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Operation) W3014AE MX269017A Operation Manual (Operation) W304AE MX269017A Operation Manual (Operation) W305AE MX269017A Operation Manual (Operation) W3064AE MX269017A Operation Manual (Operation) W3065AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Remote Control) W3209AE MX269021A Operation Manual (Remote Control) W3209AE MX269023A Operation Manual (Remote Control) W3201AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Remote Control) W3203AE MX269024A Operation Manual (Remote Control) W3204AE MX269026A Operation Manual (Remote Control) W3204AE MX269026A Operation Manual (Remote Control) W3204AE MX269026A Operation Manual (Operation) MX269026A Operation Manual (Operation) MX269026A Operation Manual (Remote Control) W3204AE MX269028A Operation Manual (Remote Control)	W2110AF	
(Phase Noise Measurement Function Remote Control) W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation) W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control) W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Remote Control) W3060AE MX269012A Operation Manual (Operation) W3061AE MX269013A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3305AE MX269017A Operation Manual (Operation) W3014AE MX269020A Operation Manual (Operation) W3064AE MX269021A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Remote Control) W3209AE MX269021A Operation Manual (Remote Control) W3209AE MX26902A Operation Manual (Remote Control) W3201AE MX26902AA Operation Manual (Remote Control) W3204AE MX26902AA Operation Manual (Remote Control)	WSTIOAE	
W3655AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Operation) W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control) W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Operation) W3060AE MX269012A Operation Manual (Operation) W3061AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Remote Control) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Remote Control) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Remote Control) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Remote Control) W30209AE MX269021A Operation Manual (Remote Control) W3209AE MX269021A Operation Manual (Remote Control) W3201AE MX269022A Operation Manual (Operation) W3201AE MX26902A Operation Manual (Remote Control) W3521AE MX26902A Operation Manual (Remote Control) W3201AE MX26902AA Operation Manual (Remote Control) W3201AE MX26902AA Operation Manual (Remote Control)		· ·
(Noise Figure Measurement Function Operation)  W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)  W3098AE MX269011A Operation Manual (Operation)  W3099AE MX269011A Operation Manual (Remote Control)  W3060AE MX269012A Operation Manual (Operation)  W3061AE MX269012A Operation Manual (Remote Control)  W3100AE MX269013A Operation Manual (Operation)  W3101AE MX269013A Operation Manual (Remote Control)  W3044AE MX269015A Operation Manual (Operation)  W3045AE MX269015A Operation Manual (Remote Control)  W3305AE MX269017A Operation Manual (Operation)  W3306AE MX269017A Operation Manual (Operation)  W3014AE MX269020A Operation Manual (Remote Control)  W3015AE MX269020A Operation Manual (Remote Control)  W3015AE MX269021A Operation Manual (Remote Control)  W3015AE MX269021A Operation Manual (Remote Control)  W309AE MX269021A Operation Manual (Remote Control)  W3209AE MX269022A Operation Manual (Remote Control)  W3521AE MX269023A Operation Manual (Remote Control)  W3521AE MX269023A Operation Manual (Remote Control)  W3201AE MX269023A Operation Manual (Remote Control)  W3201AE MX269023A Operation Manual (Remote Control)  W3201AE MX269023A Operation Manual (Remote Control)  W3203AE MX269024A Operation Manual (Remote Control)  W3203AE MX269026A Operation Manual (Remote Control)  W3204AE MX269026A Operation Manual (Remote Control)	W3655AE	
W3656AE MS2690A/MS2691A/MS2692A and MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control) W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Remote Control) W3060AE MX269012A Operation Manual (Operation) W3061AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3015AE MX269020A Operation Manual (Operation) W3015AE MX269020A Operation Manual (Operation) W3005AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Remote Control) W3209AE MX26902A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Remote Control) W3201AE MX269023A Operation Manual (Remote Control) W3201AE MX269023A Operation Manual (Remote Control) W3203AE MX269024A Operation Manual (Remote Control) W3203AE MX26902AO Operation Manual (Remote Control) W3204AE MX26902AO Operation Manual (Remote Control)		MS2830A/MS2840A/MS2850A-017 Operation Manual
MS2830A/MS2840A/MS2850A-017 Operation Manual (Noise Figure Measurement Function Remote Control)  W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Remote Control) W3060AE MX269012A Operation Manual (Operation) W3061AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3064AE MX269020A Operation Manual (Operation) W3015AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Remote Control) W3210AE MX26902A Operation Manual (Operation) W3521AE MX26902A Operation Manual (Remote Control) W3521AE MX26902A Operation Manual (Remote Control) W3521AE MX26902A Operation Manual (Remote Control) W3201AE MX26902AA Operation Manual (Remote Control) W3203AE MX26902AA Operation Manual (Remote Control) W3203AE MX26902AA Operation Manual (Remote Control) W3203AE MX26902AA Operation Manual (Remote Control) W3204AE MX26902AA Operation Manual (Remote Control) W3204AE MX26902AA Operation Manual (Remote Control) W3204AE MX26902AA Operation Manual (Operation) W3204AE MX26902AA Operation Manual (Remote Control) W3204AE MX26902AA Operation Manual (Operation) W3204AE MX26902AA Operation Manual (Operation) W3204AE MX26902AA Operation Manual (Operation)		
(Noise Figure Measurement Function Remote Control) W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Remote Control) W3060AE MX269012A Operation Manual (Operation) W3061AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W33014AE MX269020A Operation Manual (Operation) W30045AE MX269020A Operation Manual (Operation) W3005AE MX269020A Operation Manual (Operation) W3015AE MX269021A Operation Manual (Operation) W3005AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Remote Control) W3210AE MX26902A Operation Manual (Operation) W3521AE MX26902A Operation Manual (Operation) W3522AE MX26902A Operation Manual (Remote Control) W3201AE MX26902A Operation Manual (Operation) W3203AE MX26902A Operation Manual (Remote Control) W3203AE MX26902A Operation Manual (Remote Control) W3203AE MX26902A Operation Manual (Operation) W3204AE MX26902BA Operation Manual (Operation) W3204AE MX26902BA Operation Manual (Operation)	W3656AE	
W3098AE MX269011A Operation Manual (Operation) W3099AE MX269011A Operation Manual (Remote Control) W3060AE MX269012A Operation Manual (Operation) W3061AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3015AE MX269020A Operation Manual (Operation) W3015AE MX269021A Operation Manual (Operation) W3005AE MX269021A Operation Manual (Remote Control) W3209AE MX269021A Operation Manual (Remote Control) W3210AE MX269022A Operation Manual (Operation) W3521AE MX269023A Operation Manual (Operation) W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Operation) W3201AE MX269024A Operation Manual (Operation) W3201AE MX269026A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Operation)		·
W3099AE MX269011A Operation Manual (Remote Control) W3060AE MX269012A Operation Manual (Operation) W3061AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3015AE MX269020A Operation Manual (Operation) W3015AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Remote Control) W3209AE MX269021A Operation Manual (Remote Control) W3210AE MX269022A Operation Manual (Operation) W3521AE MX269023A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Remote Control)	14/2009 A E	
W3060AE MX269012A Operation Manual (Operation) W3061AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3015AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Operation) W3209AE MX269021A Operation Manual (Remote Control) W3210AE MX269022A Operation Manual (Operation) W3521AE MX269023A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Remote Control) W3201AE MX269023A Operation Manual (Operation) W3201AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Remote Control) W3529AE MX269028A Operation Manual (Remote Control)		
W3061AE MX269012A Operation Manual (Remote Control) W3100AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3015AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Operation) W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Remote Control) W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Remote Control) W3203AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Remote Control) W3529AE MX269028A Operation Manual (Remote Control)		
W3100AE MX269013A Operation Manual (Operation) W3101AE MX269013A Operation Manual (Remote Control) W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3064AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Remote Control) W3522AE MX269023A Operation Manual (Operation) W3201AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Remote Control) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Remote Control) W3529AE MX269028A Operation Manual (Remote Control)		
W3044AE MX269015A Operation Manual (Operation) W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Remote Control) W3522AE MX269023A Operation Manual (Operation) W3201AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Remote Control) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Remote Control) W3529AE MX269028A Operation Manual (Remote Control)	W3100AE	·
W3045AE MX269015A Operation Manual (Remote Control) W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3064AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Operation) W3522AE MX269023A Operation Manual (Operation) W3201AE MX269023A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269024A Operation Manual (Operation) W3203AE MX269026A Operation Manual (Remote Control) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)	W3101AE	
W3305AE MX269017A Operation Manual (Operation) W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3064AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Operation) W3521AE MX269023A Operation Manual (Operation) W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269023A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Operation) W3203AE MX269024A Operation Manual (Operation) W3203AE MX269026A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Operation)		, , , , ,
W3306AE MX269017A Operation Manual (Remote Control) W3014AE MX269020A Operation Manual (Operation) W3064AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Operation) W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269023A Operation Manual (Operation) W3201AE MX269024A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		· · · · · · · · · · · · · · · · · · ·
W3014AE MX269020A Operation Manual (Operation) W3064AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Operation) W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269023A Operation Manual (Operation) W3201AE MX269024A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		·
W3064AE MX269020A Operation Manual (Remote Control) W3015AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Operation) W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		·
W3015AE MX269021A Operation Manual (Operation) W3065AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Operation) W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269024A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		·
W3065AE MX269021A Operation Manual (Remote Control) W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Operation) W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control) W3529AE MX269028A Operation Manual (Remote Control)		
W3209AE MX269022A Operation Manual (Operation) W3210AE MX269022A Operation Manual (Remote Control) W3521AE MX269023A Operation Manual (Operation) W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		
W3521AE MX269023A Operation Manual (Operation) W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		·
W3522AE MX269023A Operation Manual (Remote Control) W3201AE MX269024A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)	W3210AE	· · · · · · · · · · · · · · · · · · ·
W3201AE MX269024A Operation Manual (Operation) W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		·
W3202AE MX269024A Operation Manual (Remote Control) W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		·
W3203AE MX269026A Operation Manual (Operation) W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		·
W3204AE MX269026A Operation Manual (Remote Control) W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		·
W3528AE MX269028A Operation Manual (Operation) W3529AE MX269028A Operation Manual (Remote Control)		
W3529AE MX269028A Operation Manual (Remote Control)		·
· · · · · · · · · · · · · · · · · · ·		
W2860AE MX269030A Operation Manual (Operation)		MX269030A Operation Manual (Operation)
W2861AE MX269030A Operation Manual (Remote Control)	W2861AE	MX269030A Operation Manual (Remote Control)

Model/Order No	Name
34AKNF50	Ruggedized K-to-Type N Adapter
	(DC to 20 GHz, 50Ω, Ruggedized K-M · N-F,
	SWR: 1.5 (max.), Insertion Loss: 0.4 dB (max.))
J1398A	N-SMA Adaptor (DC to 26.5 GHz, 50Ω, N-P·SMA-J)
J0004	Coaxial Adapter (DC to 12.4 GHz, 50Ω, N-P · SMA-J)
J1359A	Coaxial Adaptor (K-P · K-J, SMA)
J0576B	Coaxial Cord, 1 m (N-P · 5D-2W · N-P)
J0576D	Coaxial Cord, 2 m (N-P · 5D-2W · N-P)
J0127A	Coaxial Cord, 1 m (BNC-P · RG58A/U · BNC-P)
J0127B	Coaxial Cord, 2 m (BNC-P · RG58A/U · BNC-P)
J0127C	Coaxial Cord, 0.5 m (BNC-P · RG58A/U · BNC-P)
J0322A	Coaxial Cord, 0.5 m (DC to 18 GHz),
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	$(SMA-P \cdot 50\Omega SUCOFLEX104 \cdot SMA-P)$
J0322B	Coaxial Cord, 1 m (DC to 18 GHz),
703225	$(SMA-P \cdot 50\Omega SUCOFLEX104 \cdot SMA-P)$
J0322C	Coaxial Cord, 1.5 m (DC to 18 GHz),
J0322C	$(SMA-P \cdot 50\Omega SUCOFLEX104 \cdot SMA-P)$
J0322D	Coaxial Cord, 2 m (DC to 18 GHz),
103220	$(SMA-P \cdot 50\Omega SUCOFLEX104 \cdot SMA-P)$
J0911	Coaxial Cable, 1.0 m for 40 GHz
10911	(DC to 40 GHz, approx. 1 m, SF102A, 11K254/K254/1.0M)
10012	
J0912	Coaxial Cable, 0.5 m for 40 GHz
INONE	(DC to 40 GHz, approx. 0.5 m, SF102A, 11K254/K254/0.5M) DC Block, N type (MODEL 7003) (10 kHz to 18 GHz, N-P · N-J)
J0805	
J1555A	DC Block, SMA type (MODEL 7006-1)
V2C1	(9 kHz to 20 GHz, SMA-P · SMA-J)
K261	DC Block (10 kHz to 40 GHz, K-P·K-J)
MA1612A	Four-port Junction Pad (5 MHz to 3 GHz, N-J)
41KC-3	Fixed Attenuator (DC to 40 GHz, 3 dB)
J1261A	Ethernet Cable (Shield type, Straight, 1 m)
J1261B	Ethernet Cable (Shield type, Straight, 3 m)
J1261C	Ethernet Cable (Shield type, Cross, 1 m)
J1261D	Ethernet Cable (Shield type, Cross, 3 m)
J0008	GPIB Cable, 2.0 m
J1556A*8	AUX Conversion Adapter
	(AUX → BNC, for vector signal generator option and BER
DOCOE A	measurement function option)
B0635A	Rack Mount Kit (EIA)
B0657A	Rack Mount Kit (JIS)
B0636C*9	Carrying Case (Hard type, with casters)
B0671A*9	Front Cover for 1MW4U
MA24105A	Inline Peak Power Sensor
	(350 MHz to 4 GHz, with USB A to mini B cable)
MA24106A	USB Power Sensor
	(50 MHz to 6 GHz, with USB A to mini B Cable)
MA24108A	Microwave USB Power Sensor
	(10 MHz to 8 GHz, with USB A to Micro-B Cable)
MA24118A	Microwave USB Power Sensor
	(10 MHz to 18 GHz, with USB A to Micro-B Cable)
MA24126A	Microwave USB Power Sensor
	(10 MHz to 26 GHz, with USB A to Micro-B Cable)
Z1345A	Installation Kit



The instruction manuals are published on our website except some. Requires Installation Kit Z1345A when retrofitting options or installing software.

- \*1: MS2830A-005/105 is available when MS2830A-044 is installed. Requires MS2830A-006/106.
- \*2: MS2830A-009/109 is available when MS2830A-045 is installed. Requires MS2830A-006/106.
- \*3: The Aux Conversion Adapter J1556A is a standard accessory supplied with MS2830A-026/126.
- \*4: Retrofit not supported.
  Requires MS2830A-006 and MS2830A-005 (for MS2830A-044).
  Requires MS2830A-006 and MS2830A-009 (for MS2830A-045).
- \*5: Retrofit not supported.

  Requires MS2830A-006, MS2830A-005 and MS2830A-077 (for MS2830A-044).

  Requires MS2830A-006, MS2830A-009 and MS2830A-077 (for MS2830A-045).



Ruggedized K-to-Type N Adapter 34AKNF50 This adapter converts the

This adapter converts the MS2830A-045 RF Input connector (K-J) to N-J. It is used by attachment to the MS2830A main unit.



AUX Conversion Adapter J1556A



USB Power Sensor MA24118A



Front Cover for 1MW4U B0671A



Carrying Case B0636C (Hard type, with casters)

- \*6: The CPU/Windows10 Upgrade Retrofit MS2830A-182/282 option is required when the MS2830A OS is not Windows 10.
- \*7: Replace the CPU board and upgrade the OS to Windows 10.

  Due to OS license restrictions, this option is not applicable to MS2830A units in which Option MS2830A-313 Removable HDD (sales discontinued) is installed.
- \*8: The AUX Conversion Adapter J1556A is not a standard accessory for the Vector Signal Generator Option MS2830A-020/120/021/121.

  The AUX Conversion Adapter J1556A is a standard accessory supplied with BER Measurement Function MS2830A-026/126.
- \*9: The Carrying Case B0636C includes a Front Panel Protective Cover (B0671A).



Specifications are subject to change without notice.

#### United States

#### **Anritsu Americas Sales Company**

450 Century Parkway, Suite 190, Allen, TX 75013 U.S.A. Phone: +1-800-Anritsu (1-800-267-4878)

## • Canada

#### Anritsu Electronics Ltd.

700-100 Queen Street Ottawa, Ontario K1P 1J9, Canada Phone: +1-800-Anritsu (1-800-267-4878)

#### Brazil

#### Anritsu Eletronica Ltda.

Praça Amadeu Amaral, 27 - 1 Andar 01327-010 - Bela Vista - Sao Paulo - SP, Brazil Phone: +55-11-3283-2511 Fax: +55-11-3288-6940

#### Mexico

#### Anritsu Company, S.A. de C.V.

Blvd Miguel de Cervantes Saavedra #169 Piso 1, Col. Granada Mexico, Ciudad de Mexico, 11520, MEXICO Phone: +52-55-4169-7104

## • United Kingdom Anritsu EMEA Ltd.

200 Capability Green, Luton, Bedfordshire, LU1 3LU, U.K. Phone: +44-1582-433200 Fax: +44-1582-731303

## • France

#### Anritsu S.A.

12 avenue du Québec, Immeuble Goyave, 91140 VILLEBON SUR YVETTE, France Phone: +33-1-60-92-15-50

#### • Germany Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1, 81829 München, Germany Phone: +49-89-442308-0 Fax: +49-89-442308-55

## • Italy

## Anritsu S.r.l.

Spaces Eur Arte, Viale dell'Arte 25, 00144 Roma, Italy Phone: +39-6-509-9711

#### • Sweden

#### Anritsu AB

Kistagången 20 B, 2 tr, 164 40 Kista, Sweden Phone: +46-8-534-707-00

#### Finland

## Anritsu AB

Technopolis Aviapolis, Teknobulevardi 3-5 (D208.5.), FI-01530 Vantaa, Finland Phone: +358-20-741-8100

#### Denmark

## Anritsu A/S

c/o Regus Winghouse, Ørestads Boulevard 73, 4th floor, 2300 Copenhagen S, Denmark Phone: +45-7211-2200

#### • Russia

#### Anritsu EMEA Ltd.

#### **Representation Office in Russia**

Tverskaya str. 16/2, bld. 1, 7th floor., Moscow, 125009, Russia Phone: +7-495-363-1694 Fax: +7-495-935-8962

#### • Spain

#### Anritsu EMEA Ltd.

## Representation Office in Spain

Paseo de la Castellana, 141. Planta 5, Edificio Cuzco IV 28046, Madrid, Spain Phone: +34-91-572-6761

#### • Austria

#### Anritsu EMEA GmbH

Am Belvedere 10, A-1100 Vienna, Austria Phone: +43-(0)1-717-28-710

## United Arab Emirates Anritsu EMEA Ltd.

#### Anritsu A/S

Office No. 164, Building 17, Dubai Internet City P. O. Box – 501901, Dubai, United Arab Emirates Phone: +971-4-3758479

## • India

## **Anritsu India Private Limited**

6th Floor, Indiqube ETA, No.38/4, Adjacent to EMC2, Doddanekundi, Outer Ring Road, Bengaluru – 560048, India Phone: +91-80-6728-1300 Fax: +91-80-6728-1301

#### Singapore

## Anritsu Pte. Ltd.

11 Chang Charn Road, #04-01, Shriro House, Singapore 159640 Phone: +65-6282-2400 Fax: +65-6282-2533

#### Vietnam

#### **Anritsu Company Limited**

16th Floor, Peakview Tower, 36 Hoang Cau Street, O Cho Dua Ward, Dong Da District, Hanoi, Vietnam Phone: +84-24-3201-2730

#### • P.R. China (Shanghai) Anritsu (China) Co., Ltd.

Room 2701-2705, Tower A, New Caohejing International Business Center No. 391 Gui Ping Road Shanghai, 200233, P.R. China Phone: +86-21-6237-0898 Fax: +86-21-6237-0899

#### • P.R. China (Hong Kong) Anritsu Company Ltd.

Unit 1006-7, 10/F., Greenfield Tower, Concordia Plaza, No. 1 Science Museum Road, Tsim Sha Tsui East, Kowloon, Hong Kong, P.R. China Phone: +852-2301-4980 Fax: +852-2301-3545

#### • Japan

## Anritsu Corporation

8-5, Tamura-cho, Atsugi-shi, Kanagawa, 243-0016 Japan Phone: +81-46-296-6509 Fax: +81-46-225-8352

#### Korea

## Anritsu Corporation, Ltd.

5FL, 235 Pangyoyeok-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13494 Korea Phone: +82-31-696-7750 Fax: +82-31-696-7751

## Australia Apritou Pty Ltd

#### Anritsu Pty. Ltd.

Unit 20, 21-35 Ricketts Road, Mount Waverley, Victoria 3149, Australia Phone: +61-3-9558-8177
Fax: +61-3-9558-8255

#### • Taiwan

## Anritsu Company Inc.

7F, No. 316, Sec. 1, NeiHu Rd., Taipei 114, Taiwan Phone: +886-2-8751-1816 Fax: +886-2-8751-1817

2302